

anko BT-531 Bluetooth Transmitter & Receiver



# anko BT-531 Bluetooth Transmitter & Receiver User Manual

[Home](#) » [Anko](#) » anko BT-531 Bluetooth Transmitter & Receiver User Manual 

## Contents

- 1 anko BT-531 Bluetooth Transmitter & Receiver
- 2 Product Usage Instructions:
- 3 Accessories inside:
- 4 Quick Start Guide
- 5 Specification
- 6 Use Instruction
- 7 12 month warranty
- 8 Documents / Resources
  - 8.1 References

# anko

anko BT-531 Bluetooth Transmitter & Receiver

# Receive+Transmit



## Specifications:

- Working range: 10 meters
- Bluetooth version: 5.3
- Battery capacity: 120mAh
- Working time: 6 hours
- Size: 22\*12\*59.5mm
- Type-C charging port

## Product Usage Instructions:

### Receiver Mode:

1. Use a charging cable to charge the product before use.
2. To connect non-Bluetooth speakers or headphones to a Bluetooth audio source device (e.g., mobile phone, tablet, PC), use the provided AUX cable or your own 3.5mm aux cable.
3. Switch the button to the RX position (Receiver mode).
4. Turn on the product by long-pressing the MF button. The blue light will flash quickly, indicating readiness for pairing.
5. In the Bluetooth settings of your source device (mobile phone, tablet, PC), find “anko43363803” in the wireless search list and pair with it.

## FAQ:

- **Q: What is the warranty period for the product?**

A: The product comes with a 12-month warranty from the date of purchase, subject to terms and conditions as mentioned in the user manual.

- **Q: How do I contact Customer Service for warranty claims?**

A: For Kmart purchases, contact Kmart Australia Ltd. Customer Service at 1800 124 125 (Australia) or 0800 945 995 (New Zealand). For Target purchases, contact Target Australia Pty Ltd. Customer Service at 1300 753 567.


**K: 43-363-803 | T: 68-950-576**

**Model:** BT-531

Bluetooth Transmitter & Receiver  
User Manual


**Accessories inside:**

- Type-C charging cable x 1
- 3.5mm audio cable x1
- User manual x 1

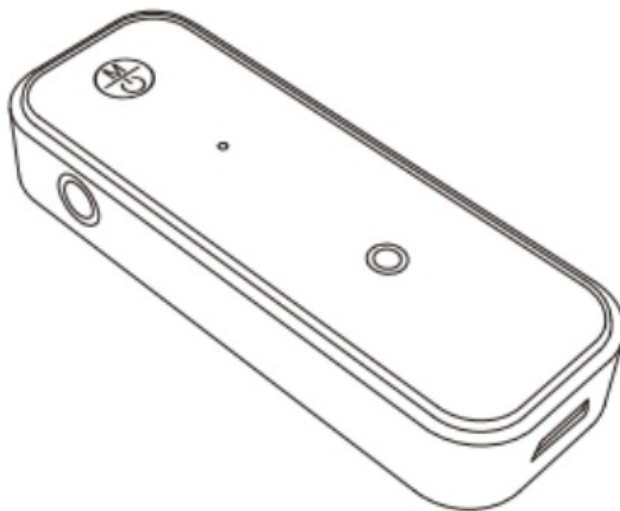

**Quick Start Guide**

1. MF Botton(Power/Play/Pause)
2. Aux in/out.
3. Transmitter and Receiver Switch
4. microphone
5. Indicator Light.
6. TYPE-C Charging port.

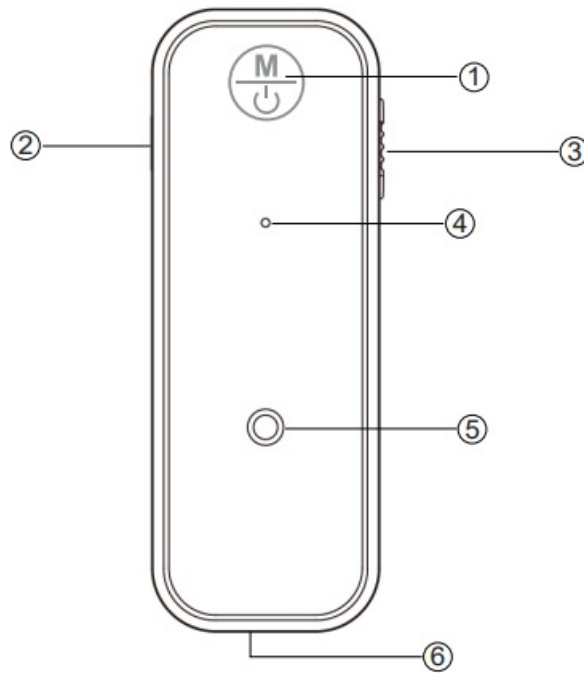

### One button control

Easily switch between receiver (TX ) & transmitter (RX ) mode .



### Specification

- Working range :10M
- Bluetooth version 5.3
- Battery capacity: 120mAh
- Working time 6Hrs
- Size 22\*12\*59.5mm
- Type-C charging port

### Use Instruction

#### Receiver Mode

1. Please use a charging cable to charge before use;
2. To allow your non-Bluetooth speaker headphones be used with Bluetooth audio source device (mobile phone ,tablet ,PC etc.) , connect the non-Bluetooth speaker headphone to this product with the provided AUX cable (or your own 3.5mm aux cable) ;
3. Change the switch button to position RX ; Note: You should switch to RX mode before proceeding to next step.
4. Turn on the product (Long press MF button) then the blue light will flash quickly, indicating that is ready for pairing ;

5. Find anko43363803 in the wireless search list of your Bluetooth source devices (mobile phone ,tablet ,PC etc.) and then pair .
6. You can press MF button to Play / Pause the music; when there is incoming phone call , press MF button once to accept the call, or long press MF button to reject the call.

### **Transmitter Mode**

1. Please use a charging cable to charge before use;
2. To allow your non-Bluetooth audio device (eg. Laptop computer in-flight entertainment systems ) be used with Bluetooth speaker / headphones , Connect the non-Bluetooth audio source devices (e.g. Laptop computer in-flight entertainment systems) to this product with the provided 3.5mm aux cable .
3. Change the switch button to position TX ; Note: You should switch to TX mode before proceeding to next step.
4. Turn on the device (Long press in MF button) then the red light will flash quickly , indicating that is ready for pairing;
5. Switch on the Bluetooth earphone / headphone ; it will connect to this product automatically . During the connection , the LED indicator keep flashing in RED, it stops flashing when connection success.

### **Note:**

1. MF button cannot be used in this operating mode. The connection would be disturbed when pressing MF button.
2. When there are other Bluetooth earphone / headphones in used nearby, the connection maybe disturbed.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc., and any use of such marks by KMART AUSTRALIA is under license.

### **12 month warranty**

#### **Thank you for your purchase.**

- Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.
- We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.
- Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.
- Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable

quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd.	Target Australia Pty Ltd
C/- Customer Service Centre	C/- Customer Service Centre
690 Springvale Road,	2 Kendall Street, Williams Landing,
Mulgrave Vic 3170	Vic, 3027
Customer Service: 1800 124 125	Customer Service: 1300 753 567
(Australia) or 0800 945 995	or via Customer Help at
(New Zealand) or via Customer Help at <a href="http://kmart.com.au">kmart.com.au</a>	<a href="http://target.com.au/help/contact-us">target.com.au/help/contact-us</a>

#### WARNING:

- Battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitude during use, storage or transportation.
- Replacement of a battery with an incorrect type that can result in an explosion or the leakage
- Please note the product working temperature is : 0-40 °C.
- Keep the product away from children as it contains small components.

#### Documents / Resources

	<a href="#">anko BT-531 Bluetooth Transmitter &amp; Receiver</a> [pdf] User Manual BT-531 Bluetooth Transmitter Receiver, BT-531, Bluetooth Transmitter Receiver, Transmitter Receiver, Receiver
---	---

#### References

- [kmart.com.au](http://kmart.com.au)
- [Contact Us | Target Australia](#)
- [User Manual](#)

[Manuals+](#). [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.