



## anko DL01D-T Convector Heater with Timer User Manual

[Home](#) » [Anko](#) » anko DL01D-T Convector Heater with Timer User Manual 

### Contents

- 1 anko DL01D-T Convector Heater with Timer
- 2 IMPORTANT SAFEGUARDS
- 3 SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY
- 4 FOOT ASSEMBLY (FOR FREE STANDING)
- 5 WALL ASSEMBLY
- 6 USING THE TIMER
- 7 CLEANING AND MAINTENANCE
- 8 12 Month Warranty
- 9 Documents / Resources
  - 9.1 References
- 10 Related Posts

# anko

anko DL01D-T Convector Heater with Timer



## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Read all instructions before using the appliance.
2. To avoid fire or shock hazard, plug the appliance directly into a 220-240V AC electrical outlet.
3. DO NOT use external timer, separate remote control system, and extension cable or external adaptor with the appliance.
4. The appliance is hot when in use. To avoid burns, DO NOT touch any hot surfaces. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3.3ft (1.0m) from the front of the heater and keep them away from the sides and rear.
5. To prevent a possible fire, DO NOT block air intakes or exhaust vents in any manner. DO NOT use on soft surfaces, like a bed, where openings may become blocked.
6. DO NOT move the appliance when it is operating. Only move the appliance when it is cool.
7. DO NOT run cord under carpeting. DO NOT cover cord with throw rugs, runners, or the like. Position the cord away from traffic area and where it will not be tipped over.
8. Do not abuse or damage the power cord. Fully unwind the cord before use as a coiled cord may overheat. Do not allow the supply cord to touch hot surfaces.
9. Discontinue use if plug or outlet is hot. It is recommended that the mains power outlet must be replaced by an electrician if plug or outlet is too hot to touch.
10. Connect to a suitable mains power socket, corresponding to the electrical ratings on the heater. Do not overload the household mains power circuit.
11. This appliance is not intended for use in bathrooms, laundry areas and similar indoor location where this it may

come in contact with water. NEVER locate appliance where it may fall into a bathtub or other water container. Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.

12. Do not immerse any part of this appliance or supply cord in water. Do not use with wet hands or use in any damp conditions.
13. Extreme caution is necessary when any appliance is used by, or near children or invalids, and whenever the appliance is left operating and unattended.
14. Always unplug the appliance when not in use.
15. When unplugging, be sure to pull by the plug and not the cord.
16. DO NOT insert or allow foreign objects to enter any ventilation or exhaust vent opening as this may cause an electric shock or fire, or damage the appliance.
17. DO NOT operate the appliance with a damaged cord or plug, or after the appliance malfunctions, has been dropped or damaged in any manner.
18. If the supply cord is damaged, it must be replaced by a qualified electrical person only in order to avoid a hazard or the heater must be disposed of.
19. Return appliance to the retail store or qualified service agent for examination, electrical or mechanical adjustment, or repair.
20. The appliance has hot and sparkling parts inside. DO NOT use it in areas where gasoline, paint, or flammable liquids are used or stored.
21. Use appliance only for intended household use only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons. The use of attachments not recommended or sold by the manufacturer cause hazards.
22. This appliance is designed for indoors ONLY. DO NOT use outdoors.
23. To disconnect the appliance, turn the ON/OFF timer control switch to "OFF" (Position '0') BEFORE removing the plug from main power outlet.
24. Avoid the use of an extension cords, extension cord may overheat and cause a risk of fire.
25. DO NOT attempt to service this appliance yourself. Service and repairs to the items must be done by a qualified electrical person for repair.
26. Keep this instruction with the appliance. If the appliance is to be used by a third party, this instruction must be supplied with the item.
27. The safety instructions do not by themselves eliminate any danger completely, proper accident prevention measures and common sense must always be used.
28. Use of parts or accessories that does not come with the unit may cause danger and injuries.
29. This appliance is not intended for use by persons (INCLUDING CHILDREN) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
30. Children should be supervised to ensure that they do not play with the appliance
31. Heater must not be located immediately below a socket-outlet
32. NO liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling.
33. Do not use this heater if there are visible signs of damage to the heater.
34. Use this heater on a horizontal and stable surface, or fix it to the wall, as applicable.
35. WARNING: In order to avoid overheating, DO NOT COVER the heater.
36. WARNING: This heater is not equipped with a device to control the room temperature. Do not use this heater

in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.

37. **WARNING:** Fire risk exists if the heater is covered by or positioned closed to curtains or other combustible materials.
38. **WARNING:** To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1m from the air outlet.
39. **CAUTION:** In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
40. Do not use this heater if it has been dropped.
41. For the details on the method of fixing, please referred to section “WALL ASSEMBLY”.
42. For the details how to fix rollers or feet delivered, please referred to section “FOOT ASSEMBLY (FOR FREE STANDING)”.
43. For cleaning, please refer to the “CLEANING AND MAINTENANCE” section.

## **SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY**

### **PRODUCT SPECIFICATION**



1. Main unit
2. Carry handle
3. Feet
4. Operating switches

### **PACKAGE CONTENTS**



- 1 Main Unit
- 1 Instruction Manual 2 Moulded Feet
- 4 Small Screws for Feet 4 Large screws for Wall
- 4 Wall plugs
- 4 Wall brackets

 
**NOTE:** Confirm all parts before disposing of carton. Safely dispose of all plastic bags and other packaging components. They may be potentially dangerous to children.

### FOOT ASSEMBLY (FOR FREE STANDING)

The device must be installed so that airflow is not obstructed.

- Carefully turn the unit upside down. Use the Screws to fix the Feet onto the Heater . Take care to ensure that they are located correctly at the bottom ends of the heater side molding.
- Be sure to place the convection heater on a flat surface.



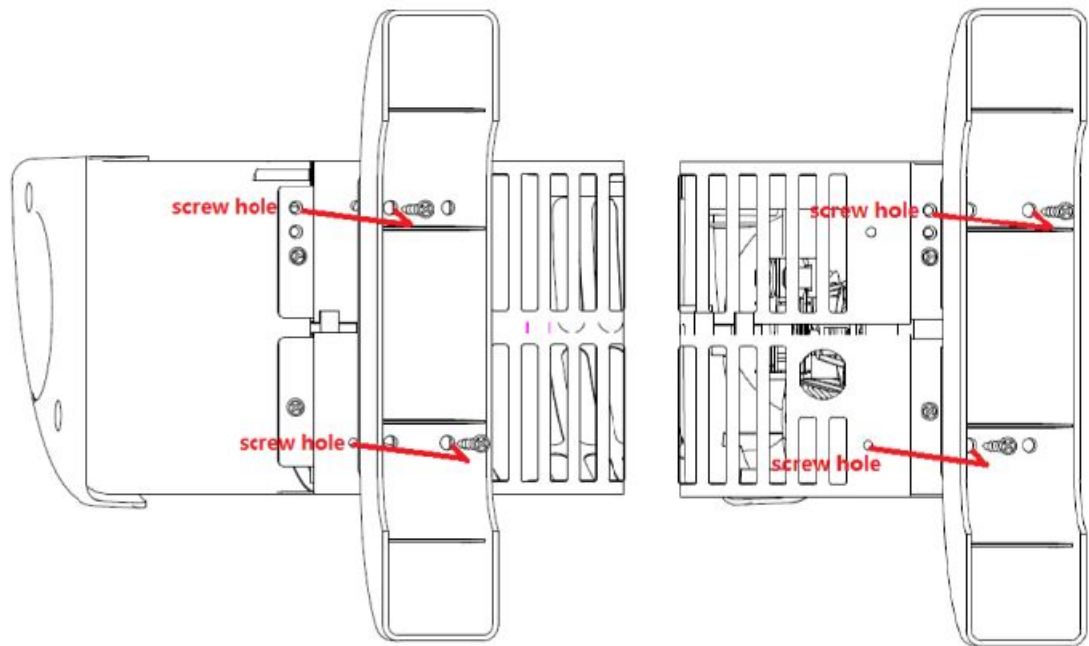

## WALL ASSEMBLY

### IMPORTANT:

When drilling into walls, always check that there are no hidden wires or pipes etc. Make sure that the screws and wall plus supplied are suitable for supporting the unit. Consult a qualified person if you are not sure.

### WARNING

Position the Heater carefully. It must not be in front of or below a power socket. It must not be below a shelf, curtains or any other obstruction. The heater has to be installed at least 0.1m above the floor.

 
 
 
### WARNING:

The case of heater gets warm during normal operation; therefore, for wall mounting, please ensure that the wall surface is suitable. Some wall coverings may be affected by the high temperature.


### Wall Mounting (optional)

**NOTE: Position in reach of a power outlet.**

1. Decide on the position of the heater on the wall, using a spirit level mark two level points 420mm apart for the top mounting brackets. See pic 1.
2. Drill these two holes (holes 1 and 2) using an 6mm diameter drill and 35mm deep, insert two wall plugs and using two screws fix the two top brackets in the correct orientation. See pic 3. (Note the brackets are L-shaped, to ensure that the bracket tabs are facing inwards towards each other. See pic 2).
3. Fit the two remaining brackets extending backwards with their tabs facing downwards using the same screws and holes. See pic 4.
4. Mount the heater on the wall brackets fitted at step 3 above through the slots on the rear of the heater and ensure that the heater is level and fully hooked onto the brackets slots. You can now mark the position of holes 3 and 4.
5. Remove the heater and using the 6mm drill, drill the two holes (3 and 4) 35mm deep and insert two wall plugs . Finally remount the heater onto the top brackets and using the remaining two wall screws ,fix the bottom brackets to the wall.

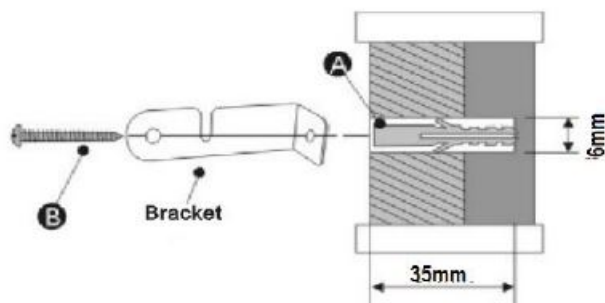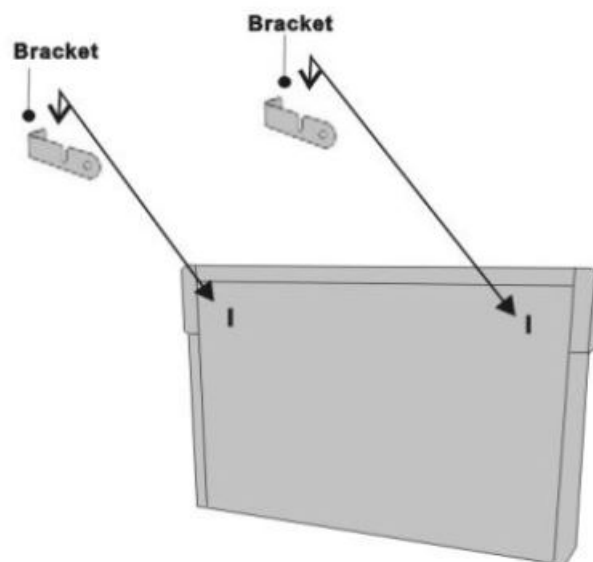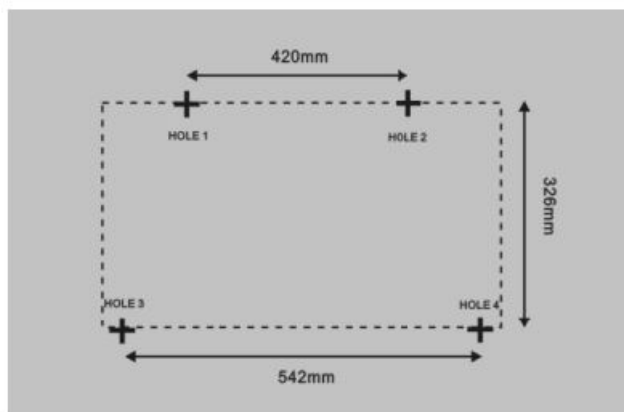

 **IMPORTANT!** Always make sure the unit is secure. No liability can be accepted for damages caused by incorrect mounting of the product.

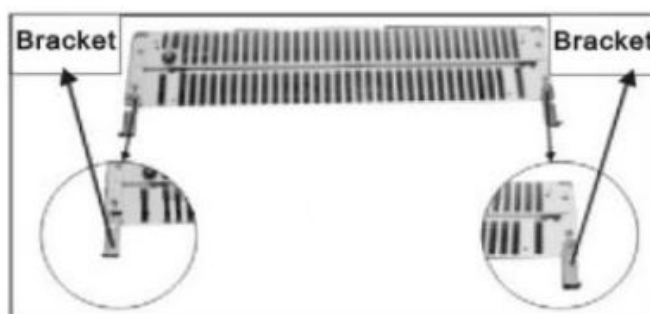

**WARNING:**

For your safety, this product must be installed in accordance with local building regulations. If in any doubt, or where required by the law, consult a competent person who is registered with an electrical self-certification scheme. Further information is available on line or from your local electrical authority.

## **OPERATION**

### **THIS APPLIANCE MUST BE EARTHED.**

#### **NOTE:**

It is normal that when the heater is turned on for the first time or after having not been used for a long period of time, some odour may be emitted.

This will disappear when the heater has been on for a short while.

 
**NOTE:** The heater is fitted with a safety tip over switch. If the heater is knocked over, the power to the heater will shut off automatically.

## **WALL ASSEMBLY**




### **WARNING:**

Position the heater carefully and keep enough space for each side when installed the heater. See below sketch.

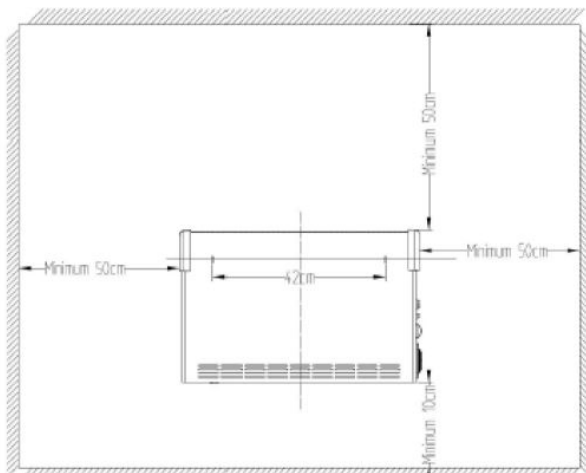


1. Choose a suitable location for the heater, taking into account the safety instructions.
2. Ensure the ON/OFF timer control switch is in the OFF (position '0') position before connecting to mains power.
3. Make sure the appliance, including the plug and cord, is not damaged.
4. Insert power plug into a wall socket with correct power output, 220-240V~ 50Hz.
5. Turn the Thermostat Knob fully in a clockwise direction to the maximum setting.
6. Turn on the heating elements by means of the rocker switches on the side panel. When the heating elements are ON, the switches will illuminate.
7. Turn on the Fan using the separated rocker switch on the side panel.



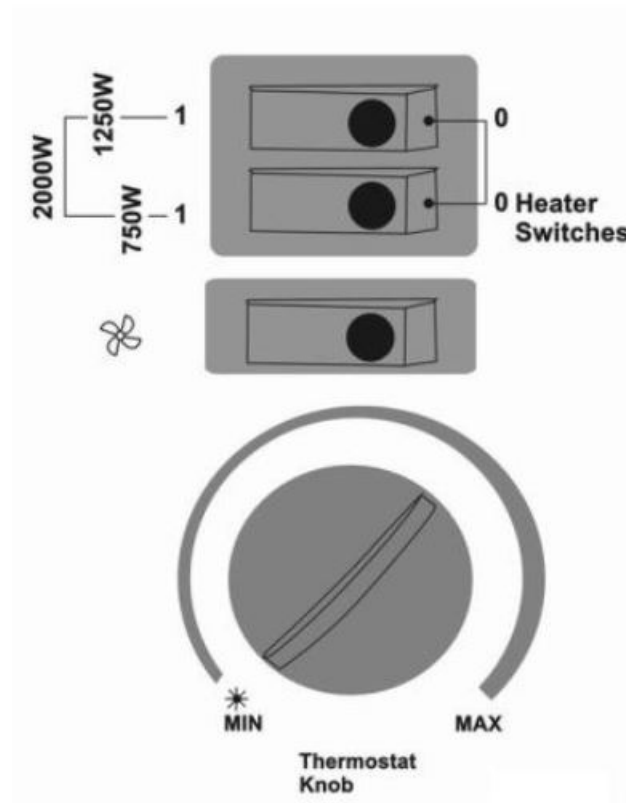 

## USING THE TIMER

 1. Set the timer by turning the disc so that the pointer on the timer is the same as the local time. For example, at 10:00 AM (10 o'clock) set the disc to the number 10.
2. Position the slide switch to the clock position( ).
3. Set the periods of time that you want the heater to work each day by pulling the red teeth outward. Each tooth represents 15 minutes.
4. To cancel the set time, move the teeth back inwards. If the heater is required to run continuously, set the slide switch on the timer to the position indicated by (I).

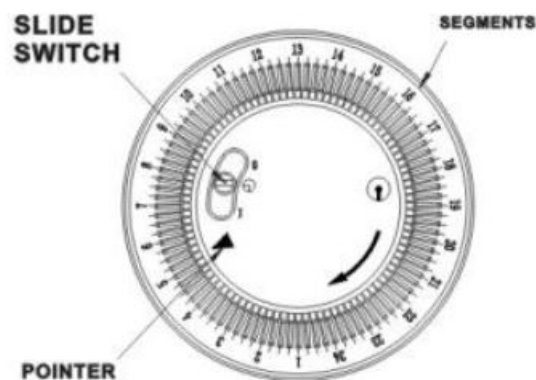

**WARNING!** FOR ELECTRICAL SAFETY THIS APPLIANCE MUST BE PLUGGED INTO AN EARTHED ELECTRICAL POWER SOCKET OUTLET! If you are uncertain, please consult an electrician.

## CLEANING AND MAINTENANCE

### Before cleaning

- When not in use or before cleaning, always disconnect the appliance from mains power supply.

## **Cleaning**

- Cleaning must be done only when the unit has cooled down completely.
- Do not immerse the whole unit in water or other liquid.
- Do not use harsh solvents on the unit.
- Wipe the exterior of the appliance with a soft damp cloth.
- Dry the unit completely with a dry cloth.

## **IMPORTANT! Check for damage**

- Always check that the appliance is in good working order, there is no damage visible and all parts are secure.
- Check the power supply cord and plug regularly for cuts or damage. If any damage is visible on the product DO NOT use the heater.

## **Store in a safe place**

- When not in use, store your appliance and instruction manual in a safe and dry place away from moisture and heat.

**NOTE:** Always clean and store away your appliance with this instruction manual when not in use.

## **TECHNICAL DATA**

- Voltage: 220-240V~ 50Hz
- Power: 1800-2000W

## **12 Month Warranty**

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.



Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect. Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

— **END OF INSTRUCTIONS** —

Documents / Resources

<div> Convecter Heater DL01D-T User Manual</div> <div></div> <div><small>PLEASE READ AND SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE</small></div>	<p><a href="#">anko DL01D-T Convecter Heater with Timer</a> [pdf] User Manual</p> <p>DL01D-T, Convecter Heater with Timer</p>
---	---

References

-  [Kmart.com.au](https://www.kmart.com.au)