

anko
anko JLR-78076
Misting Fan
Assorted



anko JLR-78076 Misting Fan Assorted Instruction Manual

[Home](#) » [Anko](#) » anko JLR-78076 Misting Fan Assorted Instruction Manual 

Contents

- [1 anko JLR-78076 Misting Fan Assorted](#)
- [2 Product Specifications:](#)
- [3 Frequently Asked Questions](#)
- [4 Safety instructions](#)
- [5 Product Parameters](#)
- [6 Product Details](#)
- [7 Use Instructions](#)
- [8 12 Month Warranty](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)

anko

anko JLR-78076 Misting Fan Assorted



Product Specifications:

- Power Supply: 2 x 1.5V AA batteries (not included)
- Water Tank Capacity: 300 ml
- Fan Blade Diameter: 7 cm
- Fan Head Diameter: 9.5 cm
- Product Size: 9.5 x 27.5 x 7.0 cm
- Product Weight: 141 g
- Model No.: JLR-78076

Frequently Asked Questions

Q: What type of batteries does the misting fan use?

A: The misting fan uses 2 x 1.5V AA batteries (not included).

Q: What is the water tank capacity of the misting fan?

A: The water tank capacity is 300 ml.

Q: What is the warranty period for this product?

A: The product comes with a 12-month warranty from the date of purchase.

Safety instructions


Please read all safety instruction warnings carefully before using this product. Improper use of this product may result in damage to this or attached products. To ensure the product works well, please follow below instructions:

1. Use only with water.
2. Do not use in moist or underwater conditions.
3. Do not use in conditions near heater or high-temperature service.
4. Do not use in conditions with direct and strong sunshine.
5. Do not use chemical solvent on cleaning this product.
6. Keep fan away from hair and jewellery.
7. The fan is not a toy, keep away from children.
8. Do not mix new batteries with old ones.
9. Always turn off when not in use.
10. Remove water and ice when not in use.
11. Remove batteries for storage. Dry the bottle before storage.
12. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

Product Parameters

- Power Supply: 2 X 1.5V AA batteries (not included)
- Water Tank Capacity: 300 ml
- Fan Blade Diameter: 7 cm
- Fan Head Diameter: 9.5 cm
- Product Size: 9.5*27.5*7.0 cm
- Product Weight: 141 g

Product Details

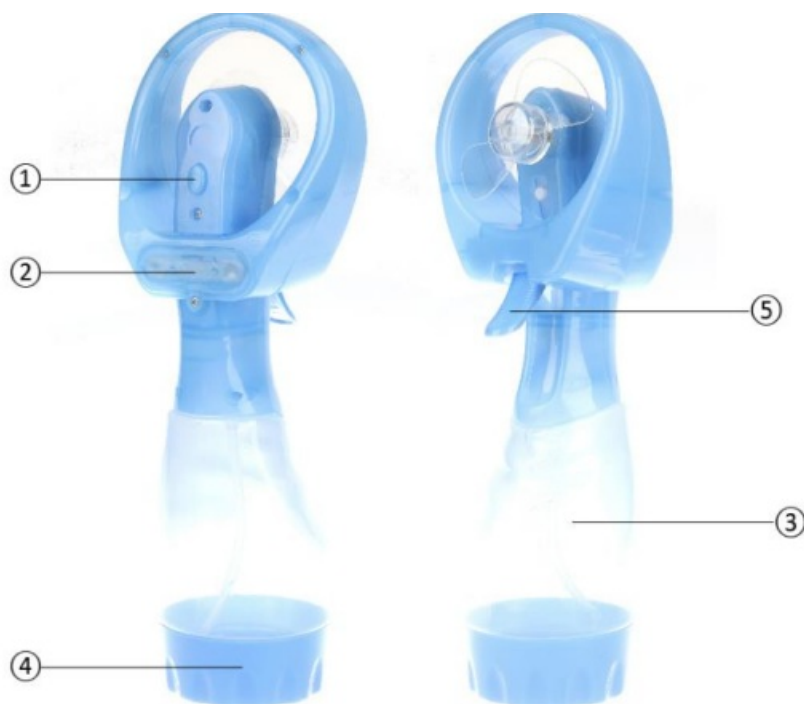

1. On /Off button (rear of fan head)

2. Battery Compartment (rear of fan head)
3. Water Tank
4. Water tank cover
5. Spray Control Lever

Use Instructions

1. Unscrew batteries compartment ② to insert batteries (2 AA batteries).
2. Once batteries have been placed and the compartment well closed, turn the fan upside-down.
3. Open the tank cover ④ and fill in water.
4. Close the tank cover ④ before starting to use the fan.
5. Press on/off button ① once to switch ON the fan, press once to switch off
6. Press the spray control lever ⑤ to spray water.

12 Month Warranty

Thank you for your purchase.

- Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.
- For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.
- We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.
- This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.
- Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.
- Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.
- You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases

Kmart Australia Ltd.

C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170
Customer Service: 1800 124 125 (Australia) or 0800 945 995
(New Zealand) or via Customer Help at [kmart.com.au](https://www.kmart.com.au)

Contact for Target purchases

Target Australia Pty Ltd
C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027
Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us

Documents / Resources

	anko JLR-78076 Misting Fan Assorted [pdf] Instruction Manual JLR-78076 Misting Fan Assorted, JLR-78076, Misting Fan Assorted, Assorted
---	---

References

- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.