

anko K 43352005 Bluetooth Speaker and Alarm Clock



# anko K 43352005 Bluetooth Speaker and Alarm Clock Instruction Manual

[Home](#) » [Anko](#) » anko K 43352005 Bluetooth Speaker and Alarm Clock Instruction Manual 

## Contents

- 1 anko K 43352005 Bluetooth Speaker and Alarm Clock
- 2 Safety instructions
- 3 Product Features
- 4 Product Overview
- 5 PRODUCT DESCRIPTION
- 6 Functional description
- 7 FM radio function Description
- 8 Specification
- 9 Warranty
- 10 Documents / Resources
  - 10.1 References
- 11 Related Posts



anko K 43352005 Bluetooth Speaker and Alarm Clock



## Safety instructions

Please read all safety instruction warnings carefully before using this product. Improper use of this product may result in damage to this product. To ensure the production works well, please never use this in the following conditions:

1. The system shall not be placed in a high temperature and humid environment, let alone be caught in the rain or under strong impact;
2. Do not open the back cover at will to prevent electric shock and other accidents;
3. If maintenance is needed, please ask the company's maintenance station or professional maintenance personnel to deal with it;
4. If the battery is replaced improperly, there will be an explosion risk, which can only be replaced with the same type or equivalent type;
5. To avoid charging failure, the original USB cable for charging. Accidents and machine damage caused by using other power cables will not enjoy free warranty.
6. The product cannot be placed in high temperatures, exposure, fire source positions, to prevent battery explosion and other dangers!

## Product Features

1. Compatible with Bluetooth® enabled devices
2. Alarm & clock LED display
3. Play time up to 18 hours
4. Support TF card (support 16G max)


## Packing contents:

- Speaker \*1
- Manual \*1


- Type C charging cable \*1

## Product Overview

In the power-on state, display the “HI” welcome message, in Bluetooth mode display “BLUE”, in radio mode display the radio frequency. In TF playback, show the time of the song played, after 10 seconds, show the clock time.

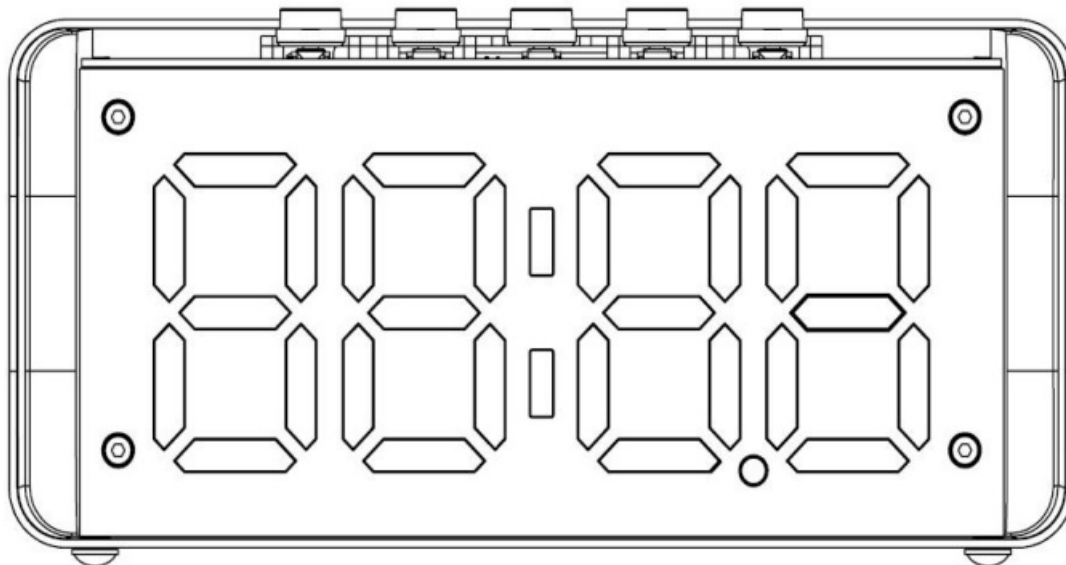

## PRODUCT DESCRIPTION

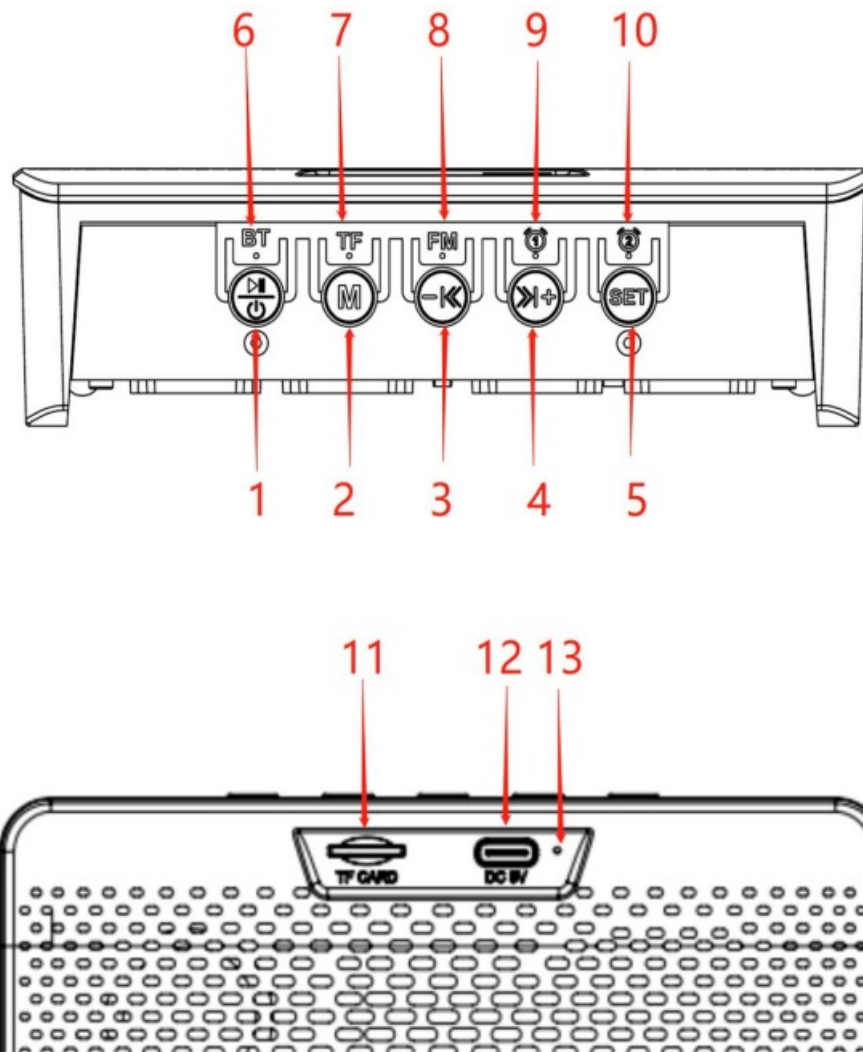

1. Power on/off/play/pause
2. Mode
3. Previous song/volume decrease
4. Next song/volume increase
5. Time set
6. Bluetooth mode indicator
7. TF Card mode indicator
8. FM Radio mode indicator
9. Alarm 1 Indicator
10. Alarm 2 Indicator
11. TF Card disk port
12. Type C charging port
13. Charging light

## Functional description

### General function:

1. Main volume: in any play state, short press “\_” to reduce the volume, and short press “+” to increase the volume. Maximum volume is 16.

2. Mode: Play the status switch button, the switch order is: BT-TF-FM.
3. Long press “M” to adjust the luminance level(low – high).

### **Song Function Description:**

1. TF disk: insert the TF disk with songs in MP3 / WAV format for playing;
2. Play / pause button: Short press for play/pause function in play mode.
3. Previous song / next song button: long press in playing mode – for the previous song, long press + for the next song.

### **Bluetooth function description:**

1. Bluetooth connection: power on, automatically enter the Bluetooth wait for the pairing state, open the mobile phone Bluetooth search device model is “anko43352005 “, click pair, and the speaker will have a prompt sound after successful connection.
2. When playing music: long press -/+ to the previous song and the next song.

### **FM radio function Description**

1. In the power-on state, switch to FM mode, FM blue light on.
2. Double-click the power on/off button, and enter the automatic radio automatic search. The first channel will play automatically after the search.
3. Long press -/+ to switch channel.

### **Clock function description:**

1. Time setting: Long press “SET” to enter the time setting, then short press “SET” to choose hour/minute, short press “-/+” to adjust hour /minute, and long press “SET” to save setting.
2. Alarm Settings: double click the “SET” to enter the alarm setting, then short press “SET” to choose hour/minute, short press “-/+” to adjust the hour /minute, then short press “SET” to enter alarm OFF/ON, short press “-/+” to choose alarm OFF/ON, then continue to short press “SET” to set alarm 2. The alarm clock 1/2 blue light will be turned on if the alarm clock is ON.

**Note:** the alarm settings need to be completed by setting two alarms at once if exiting midway will not save the settings.

3. A short press any button can cancel the alarm clock prompt sound.
4. The alarm clock can only work when powered on, so please charge the speaker in time. It's better to keep connecting a type-c charge cable all the time.

### **Charging indication and battery low description:**

1. When the speaker shows 20%, it means that charging is needed to enter the low-power state, and the product volume will automatically drop to about 50% of the main volume.
2. When charging, use the USB cable delivered by the product for charging. USB power supply should be more than 5V / 1A, the current less than 1A will lead to a longer charging time.

**Note:** 12 hours of full charge is good for the first charge. If the battery is not used for a long time, it should be replaced before use, otherwise, the battery will be damaged.

## Specification

- Output power: 2W
- Frequency sound range: 200Hz-20K Hz
- Speaker specification: 4 0 \* 1
- SNR: ≥65dB
- Power supply voltage: USB 5V
- Product size: 14\*6.8\*4cm

## Warranty

### 12 Month Warranty

Thank you for your purchase.

- Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.
- For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.
- We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.
- This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.
- Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expenses incurred in returning this product can be addressed to the respective Customer Service Centre.
- Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases Kmart Australia Ltd.

C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170

**Customer Service:** 1800 124 125

(Australia) or 0800 945 995 (New Zealand) or via

Customer Help at [kmart.com.au](http://kmart.com.au)


Contact for Target purchases Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027

Customer Service: 1300 753 567 or via Customer Help at

[target.com.au/help/contact-us](http://target.com.au/help/contact-us)

---

## Documents / Resources

	<p><a href="#">anko K 43352005 Bluetooth Speaker and Alarm Clock</a> [pdf] Instruction Manual K 43352005 Bluetooth Speaker and Alarm Clock, K 43352005, Bluetooth Speaker and Alarm Clock, Speaker and Alarm Clock, Alarm Clock</p>
---	---

## References

- [User Manual](#)