

anko Pet Talking Buttons Instruction Manual

Home » Anko » anko Pet Talking Buttons Instruction Manual



Contents

- 1 anko Pet Talking Buttons Instruction
- 2 Pet Talking Buttons
- **3 Product Usage Instructions**
- 4 FAQ
- **5 Contents**
- **6 OVERVIEW**
- 7 Installation Instructions
- 8 Documents / Resources
 - 8.1 References
- 9 Related Posts



anko Pet Talking Buttons Instruction



Pet Talking Buttons

Specifications

- Button x 4pcs
- Screwdriver x 1pc
- Stickers x 2pcs
- Each button requires 2 X AA batteries (not included)

Product Usage Instructions

Step 1: Battery Installation

- 1. Locate the battery compartment on the back of each button.
- 2. Using the screwdriver provided, unscrew the battery compartment cover.
- 3. Insert 2 X AA batteries into each button, ensuring the correct polarity.
- 4. Tighten the battery compartment cover securely.

Step 2: Recording Sound

- 1. Set the switch on the button to Record.
- 2. Press and hold the top of the button to start recording. An LED indicator will light up to indicate recording mode.
- 3. Speak clearly into the microphone located on the button's surface.
- 4. Release the button to stop recording.
- 5. You can re-record as many times as you like by repeating the steps above.

Step 3: Playing Recorded Sound

- 1. To play the sound you have recorded, set the switch to Play.
- 2. Press the top of the button to hear the recorded sound. The LED indicator will light up during playback.
- 3. You can press the button multiple times to play the sound repeatedly.

Step 4: Turning Off

To turn off the button, set the switch to Off.

Optional: Decorative Stickers

- There are decorative stickers included with the product.
- You can stick them to the top of the buttons to keep note of which button makes what sound.
- This can help organize and identify different recorded sounds.


FAQ

- Q: How many buttons are included in the package?
- A: The package includes 4 buttons.
- Q: What type of batteries do the buttons require?
- A: Each button requires 2 X AA batteries (not included).
- Q: Can I re-record the sound multiple times?
- A: Yes, you can re-record the sound as many times as you like by following the recording instructions.

Contents

A. Button x 4pcs	B. Screwdriver x 1pc	C. Stickers x 2pcs	
Α	В	С	

OVERVIEW

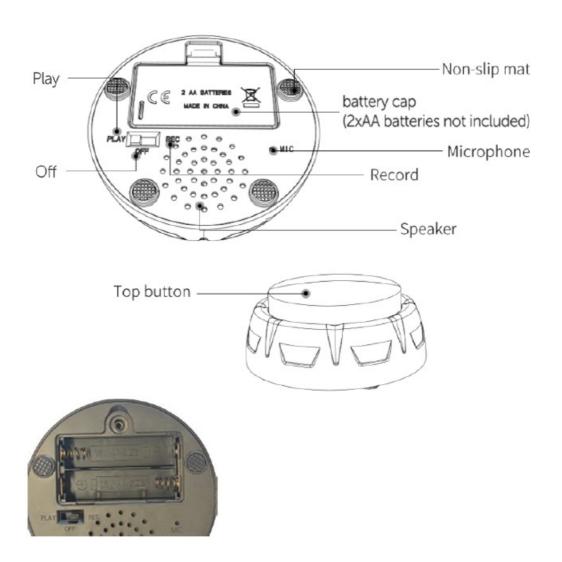

EACH BUTTON REQUIRES 2 X AA BATTERIES (NOT INCLUDED)



Installation Instructions

Step 1


Use the screwdriver provided to open the battery compartment on the button. Insert 2x AA batteries (not included).

Step 2


Set the switch to REC, press and hold the top button until you hear a single beep sound. Hold it close to your mouth and talk into the button. After you have recorded your sound or word, release your hand from the top of the button and you will hear a double beep sound, which means the sound has been recorded successfully. The recording time is up to 30 seconds.



Step 3To play the sound you have recorded, set the switch to Play and press the top of the button to hear the sound. You can re-record as many times as you like.

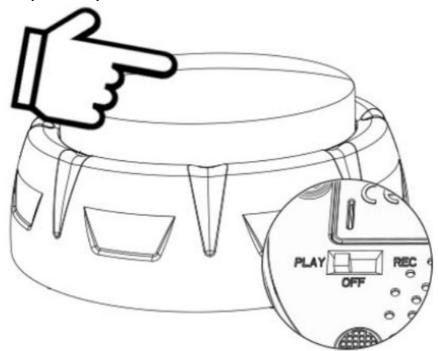

Step 4
To turn the button off, set the switch to Off.

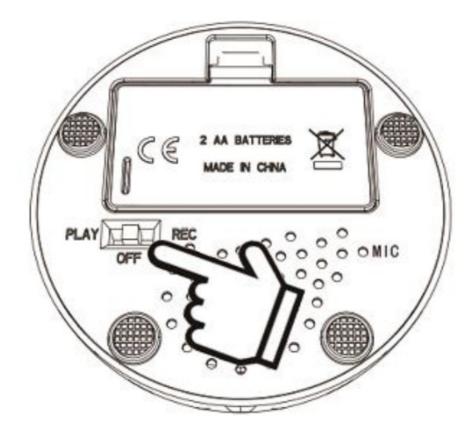

Optional: There are decorative stickers that you can stick to the top of the buttons to keep note of which button makes what sound.

WARNING: BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY. DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED UNDER ADULT SUPERVISION. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE PET TOY BEFORE BEING CHARGED. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCULTED. REMOVE BATTERIES FROM THE PET TOY WHEN NOT IN USE FOR AN EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY ADULT REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.

Documents / Resources



anko Pet Talking Buttons [pdf] Instruction Manual Pet Talking Buttons, Talking Buttons, Buttons

References

User Manual