



# anko TA1420-SA Toaster 4 Slice Toaster User Manual

[Home](#) » [Anko](#) » anko TA1420-SA Toaster 4 Slice Toaster User Manual 

## Contents

- 1 anko TA1420-SA Toaster 4 Slice Toaster
- 2 PRODUCT INTRODUCTION
- 3 FOR THE FIRST USE
- 4 CLEANING AND MAINTENANCE
- 5 TECHNICAL SPECIFICATION
- 6 IMPORTANT SAFEGUARD
- 7 OPERATION
- 8 MONTH WARRANTY
- 9 Documents / Resources
  - 9.1 References

# anko

**anko TA1420-SA Toaster 4 Slice Toaster**



## PRODUCT INTRODUCTION

The Toaster TA1420-SA is a high-quality toaster designed for toasting bread slices. It comes with a color controller and a crumb tray for easy usage and maintenance.

## FOR THE FIRST USE

During manufacture, residue or oil may remain in the toaster or heating element which is likely to emit an odor when used for the first time. This is normal and should disappear after a few minutes of use. When using the toaster for the first time, follow these steps:

1. Operate the toaster without bread to allow it to cool down.
2. Insert bread slices into the bread slot. You can insert up to two slices at a time.
3. Ensure that the crumb tray is completely positioned in place before use.
4. Plug the power cord into the outlet.
5. Set the color controller to your desired color. There are seven levels, with level 1 being the lightest and level 7 being the darkest. The recommended position for a golden toast is in the middle.
6. Press the carriage handle down vertically until it is positioned in place and the indicator light turns on.

## CAUTION

1. Remove all protective wrappings prior to toasting.
2. If the toaster starts to smoke, press the CANCEL button to stop toasting immediately.
3. Avoid toasting food with extremely runny ingredients such as butter.
4. Never attempt to remove bread jammed in the slots without unplugging the toaster from the electrical power outlet first. Take care not to damage the internal mechanism or heating elements when removing bread.
5. The bread slot is only applicable for toasting regular bread slices. Irregularly shaped or round bread cannot be toasted in the bread slot.
6. In order to achieve a uniform color, it is recommended to wait at least 30 seconds between each toasting cycle so that the color control can reset automatically.

## CLEANING AND MAINTENANCE

To keep your toaster clean and well-maintained, follow these instructions:

1. Before cleaning, unplug the appliance from the main power and let it cool down completely.
2. Wipe the outside of the toaster with a soft dry cloth. Do not use metal polish.
3. Pull out the crumb tray at the bottom of the toaster and empty it. If the toaster is used frequently, remove accumulated breadcrumbs at least once a week. Ensure that the crumb tray is completely closed before using the toaster again.
4. When not in use or for storage purposes, you can wind the power cord under the bottom of the toaster.

## TECHNICAL SPECIFICATION

- **Voltage:** 220-240Va.c.
- **Frequency:** 50-60Hz
- **Power:** 730-870W

## 12 MONTH WARRANTY

The Toaster TA1420-SA comes with a 12-month warranty. Please refer to the warranty terms and conditions provided separately.

## IMPORTANT SAFEGUARD

When using electrical appliances. Basic safety precautions should always be followed including the following

1. Read all instructions.
2. Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the toaster.
3. Do not touch hot surfaces. Use handles or knobs only.
4. To protect against electrical shock, do not immerse the cord, plug, or any part of the toaster in water or other liquid.
5. Close supervision is necessary when any appliance is used by or near children.
6. Unplug the unit from m mains power outlet when not in use and before cleaning. Allow to cool down before putting on or taking off parts.
7. Allow t he unit to cool down completely before cleaning or storing.
8. Do not operate any appliance with a damaged cord or plug, or in an abnormal state. If the supply cord is damaged, it must be replaced by a qualified electrical person in order to avoid a hazard, or the product must be disposed of.
9. Do not let the cord hang over the edge of the table or counter or touch a hot surface.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Do not use the appliance for other than its intended use.
12. Ove size food, metal foil pack ag e s o r utensils must not be i nserted in the toaster as they may cause fire or electric shock.
13. **CAUTION:** Bread may burn, therefore toasters must not be used near or below curtains and other combustible materials. The toaster should be attended ed when in use.
14. **WARNIN G!** Electric Shock Hazard. Do not attempt to dislodge food when the toaster is in use or connected to


mains power.

15. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
16. Use the appliance on a level and stable work surface.
17. Don't attempt to dislodge food when the toaster is in operation
18. The appliance is not intended to be operated by means of an external timer or a separate remote control system.
19. Be sure to take the bread out carefully after toasting to avoid injuries
20. This appliance has been incorporated with a grounded plug. Please ensure the wall outlet in your house is well-earthed.
21. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
22. Children should be supervised to ensure that they do not play with the appliance.
23. Cleaning and user maintenance shall not be made by children without supervision.
24. Don't use the appliance outdoors.
25. This appliance is intended to be used in household and similar applications such as:
  - Staff kitchen areas in shops, offices and other working environments,
  - Farmhouses,
  - By clients in hotels, motels and other residential-type environments,
  - Bed and breakfast type environments.
26. For cleaning, please refer to CLEANING AND MAINTENANCE section
27. Save these instructions.

### **WARNING!**

Never operate toaster on its side. To prevent damage to the toaster, DO NOT toast with extremely runny ingredients such as butter, jam and other sugary ingredients. Adding any food substances to bread, muffins or crumpets can cause an electric shock and / or fire. This toaster is for toasting bread, crumpets and muffins only.

### **PRODUCT INTRODUCTION**

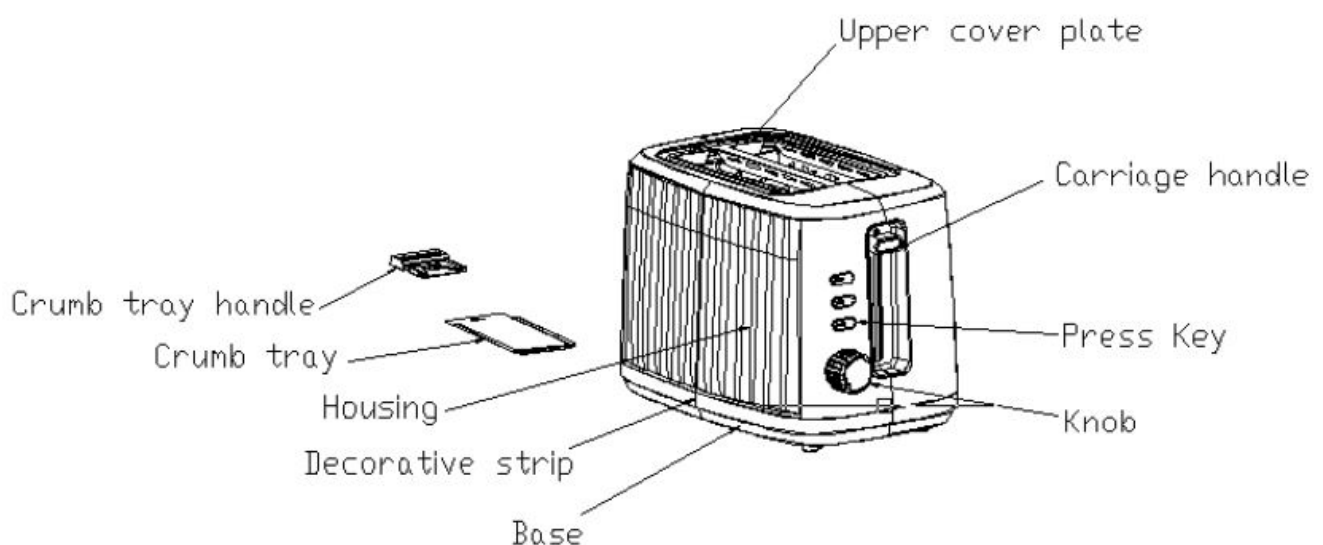

### **FOR THE FIRST USE**

During manufacture, residue or oil may remain in the toaster or heating element which is likely to emit an odor when used for the first use. This is normal and should disappear after a few minutes of use. When the toaster is used for the first time it is suggested to operate according to the below steps, except without bread. Then let the toaster cool down and begin toasting the first slice.

## OPERATION

1. Put a bread slice into the bread slot, it can be inserted two slices at most every time.
  - **Note:** Make sure the crumb tray is completely positioned in place before using.
2. Plug the power cord into the outlet.
3. Set color controller to your desired color. There is 7 position level, the lowest 1 is for white and the highest 7 is for dark. The bread slice can be toasted to golden color at the middle position
  - **Note:**
    - **1).** Toasting color for one slice is darker than that for double bread at the same level.
    - **2).** If toasted continuously, the toasting color for the latter bread is darker than that for the anterior bread at the same level.
4. Press the carriage handles down vertically until it is positioned in place and the indicator of Cancel button will be illuminated, and toast will begin at once. Once the bread has been toasted to the preset color, the carriage handle will automatically spring up. You can uplift the carriage handle a little to remove the bread readily.
  - **Note:** Only when the power supply is switched ON, the carriage handle can rest on the bottom of slot (pushed down in a locked position).
5. Once the bread has been toasted to the preset color, the carriage handle will automatically spring up you can also uplift the carriage handle a little to remove the bread readily.
6. If the bread has been taken out from refrigerator set color controller to your desired color. Press carriage handles down vertically until it is positioned in place, then press DEFROST button and the indicator will be illuminated. In this mode the bread will be toasted to your desired color.
7. If you want to reheat the cold toasted bread, press the REHEAT button and the indicator of it will be illuminated. In this mode toasting time is fixed, so long as time is running over, the carriage handle will automatically spring up and end up the reheating process.

## CAUTION

1. Remove all protective wrappings prior to toasting
2. If the toaster starts to smoke, Press the CANCEL button to stop toasting immediately
3. Avoid skin g food with extremely runny ingredients such as butter.
4. Never attempt to remove bread jammed in the slots without unplugging the toaster from the electrical power outlet first. Make sure not to damage the internal mechanism or heating elements when removing bread.
5. The bread slot is only applicable for toasting regular bread slices. For irregularly shaped or round bread, you cannot toast it in the Bread slot.
6. In order to achieve a uniform color, we recommend that you should wait for a minimum 30s between each toasting cycle so that color control can reset automatically.

## CLEANING AND MAINTENANCE

1. Before cleaning, unplug the appliance from mains power and let the appliance cool down completely.

- 2. Wipe the outside with a soft dry cloth, never use metal po lish.
- 3. Pull out the crumb tray at the bottom of the toaster and empty it. I f toaster is used frequently, accumulated breadcrumbs should be removed at least once a week M ake sure the crumb tra y is completely closed before using the toaster again.
- 4. When not used or storage, the power cord may be wound under the bottom of the toaster.

TECHNICAL SPECIFICATION

- **Voltage:** 220240Va.c. 50 6 0 Hz
- **Power:** 730 870 W

MONTH WARRANTY

Thank you for your purchase from Kmart. Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provi ded that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. Kmart will provide you with your choice of a refund, repair or e chan ge (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer be apply where the defect is a result of alteration, accident, misuse, abuse, or neglect. Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia a) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expenses incurred in returning this product can be addressed to our Customer Service Centre at 69 0 S spring ale Rd, Mulgrave Vic 3170. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or da mag e. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. For New Zealand customer rs, this warranty is in addition to statutory rights ob served unde r N ew Zea land legislation.

Documents / Resources

 <p>onko Toaster TA1420-SA User Manual</p> <p>PLEASE READ AND SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE</p>	<p><a href="#">anko TA1420-SA Toaster 4 Slice Toaster</a> [pdf] User Manual</p> <p>XBM1088, TA1420-SA, TA1420-SA Toaster 4 Slice Toaster, Toaster 4 Slice Toaster, 4 Slice Toa ster, Toaster</p>
---	--

References

-  [Kmart.com.au](#)