





anko TB24062RW LED Light Up Neon Stocking String Lights Instructions

Home » Anko » anko TB24062RW LED Light Up Neon Stocking String Lights Instructions



Contents

- 1 anko TB24062RW LED Light Up Neon Stocking String
- **2 Product Usage Instructions**
- **3 DIMENSION**
- **4 Adaptor Manual**
- **5 Documents / Resources**
 - **5.1 References**



anko TB24062RW LED Light Up Neon Stocking String Lights



Product Specifications:

• Product Name: LV 5 LED Light Up Neon Stocking String Lights

• Model No.: TB24062RW K: 43447152 / T: 70027181

Length: 5mLead Cable: 2m

• Spacing Between LEDs: 50cm

 
Product Usage Instructions

Warnings:

- The light chain is suitable for INDOOR use only.
- This product is NOT designed for permanent or long term use.
- The LED driver MUST be installed INDOOR away from weather.
- · Keep out of reach of children.
- Do not position this light chain where it will be exposed to extreme wet weather or submerged in water.
- Always switch off this light set or unplug an adaptor if unattended.
- DO NOT overload power sockets or extension leads.
- DO NOT pierce the cable when securing in place, bend, or stand on the light chain, as this will damage the bulbs or wiring.

LV 5 LED LIGHT UP NEON STOCKING STRING LIGHTS (Model No.: TB24062RW K: 43447152 / T: 70027181)

DIMENSION



Warnings:

The light chain is suitable for INDOOR.

This product is NOT designed for permanent or long term use.

The LED driver MUST be installed INDOOR away from weather.

The LED driver is suitable for operation of LED Modules only.

Only operate this light chain with the LED driver, Model No. JT-DC4.5V6W-E4

- Do not connect this light chain electrically to another lightchain.
- Do not operate the product while it is in the packaging.
- DO NOT attempt to replace the non-replaceable bulbs in this light chain.
- Never allow any part of the set to come into contact with a source of heat or flame.


- Care must be taken to avoid damage the cable or fittings.
- If any part of light set or cable is damaged, the light set MUST be discarded.
- This product is for use as a decoration only. Not to be used by children as a toy.
 Keep out of reach of children.
- Do not position this light chain where it will be exposed to extreme wet weather or submerged in water.
- Always switch off this light set or unplug an adaptor if unattended.
- DO NOT overload power sockets or extension leads.
- DO NOT pierce the cable when securing in place, bend or stand on the light chain, as this will damage the bulbs
 or wiring.
- Please refer to the packing or product rating label for product class, specifications andrating.

Adaptor Manual

1. Please use the equipment according to the rated voltage and current.

	Input Rated			Output Rated	
Model No.	Voltage	Frequency	Current	Voltage	Power
IT DOA EVON EA	220 240 40	F0 C011-	0.104 May	457.00	CVA
JT-DC4.5V6W-E4	220-240VAC	50-60Hz	0.10A Max	4.5V DC	6W

 
- 2. Do not open the cover of the equipment.
- 3. For use with LED lighting equipment.
- 4. The input and output voltage should be checked before use to ensure correct use.
- 5. This is the Class II product, only for indoor use.
- 6. The product is not a toy, keep it where children cannot reach.
- 7. The lamp controlgear does not rely upon the luminaire enclosure for protection against accidental contact with live parts.
- 8. If applicable: an indication that the controlgear is suitable for operation with LED modules.
- 9. Do-not-cover classification



The LED driver that can be used where normally flammable materials.

including building insulation are or may be present, but cannot be abutted against any material and cannot be covered in normal.

Minimum clearance distance from the top and sides of the control gear to normally flammable building element is 75mm; as shown in below picture, A=B=C=Min.75mm.

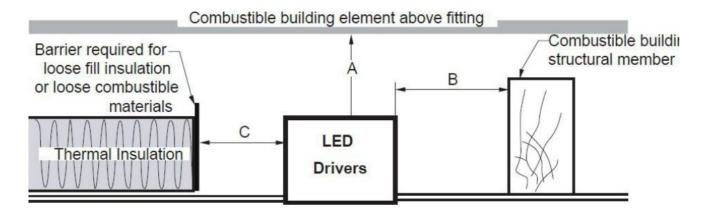

Frequently Asked Questions (FAQ):

Q: Can I use these lights outdoors?

A: No, these lights are designed for indoor use only. Do not expose them to extreme wet weather or submerge them in water.

Q: Can I leave the lights on unattended?

A: It is recommended to switch off the lights or unplug the adaptor when unattended to prevent any potential hazards.

Q: What should I do if a bulb stops working?

A: If a bulb stops working, unplug the lights and replace the faulty bulb with a new one of the same type to ensure proper functioning.

Documents / Resources



anko TB24062RW LED Light Up Neon Stocking String Lights [pdf] Instructions TB24062RW K 43447152, T 70027181, TB24062RW LED Light Up Neon Stocking String Lights, TB24062RW, LED Light Up Neon Stocking String Lights, Up Neon Stocking String Lights, Stocking String Lights, String Lights, Lights

References

User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.