



# anko Wireless Keyboard & Mouse Combo Instruction Manual

[Home](#) » [Anko](#) » anko Wireless Keyboard & Mouse Combo Instruction Manual

## anko Wireless Keyboard & Mouse Combo



### Contents [ [hide](#) ]

- [1 Safety Instructions](#)
- [2 Features](#)
- [3 System requirements](#)
- [4 Before first use](#)
- [5 Product overview](#)
- [6 Inserting the Batteries](#)
  - [6.1 Notes on batteries](#)
- [7 Connecting the USB Receiver](#)
- [8 Power saving mode](#)
- [9 Care and maintenance](#)
- [10 Documents / Resources](#)
- [11 Related Posts](#)

## Safety Instructions

Please read the instruction manual before using this device and follow all the safety instructions to avoid damage caused by improper use.

- Keep the instruction manual for future reference. Should this device be given to a third party, then this instruction manual must also be handed over.
- Use this device solely for its intended purpose.
- Only use this appliance indoors.
- Keep the appliance away from all hot surfaces and naked flames.
- Always put the appliance on a level, stable, clean, dry surface. Protect the appliance from extreme heat and cold, dust, direct sunlight, humidity and drops or jets of water.
- Do not immerse the appliance in water or in other liquids.
- Do not open the housing under any circumstances. Do not introduce any objects into the interior of the housing.
- Should the device malfunction due to electrostatic discharge or a short power surge, disconnect it from your computer and then reconnect it again.

## **Features**

- 2.4GHz wireless technology
- 800DPI/1200DPI/1600DPI adjusting mouse sensor
- Working distance up to 10 m (without any obstructions)


## **System requirements**

Compatible with Windows operating systems.

## **Before first use**

1. Unpack the device and check if all parts are there and undamaged.  
Should this not be the case, return the product to Kmart for replacement.
2. Danger of suffocation! Keep all packaging materials away from children.
3. Dispose of the packaging materials properly. Inform yourself at the local authorities regarding collection points or garbage separation.
4. Remove all protective foils and packaging material prior to use.

## **Product overview**

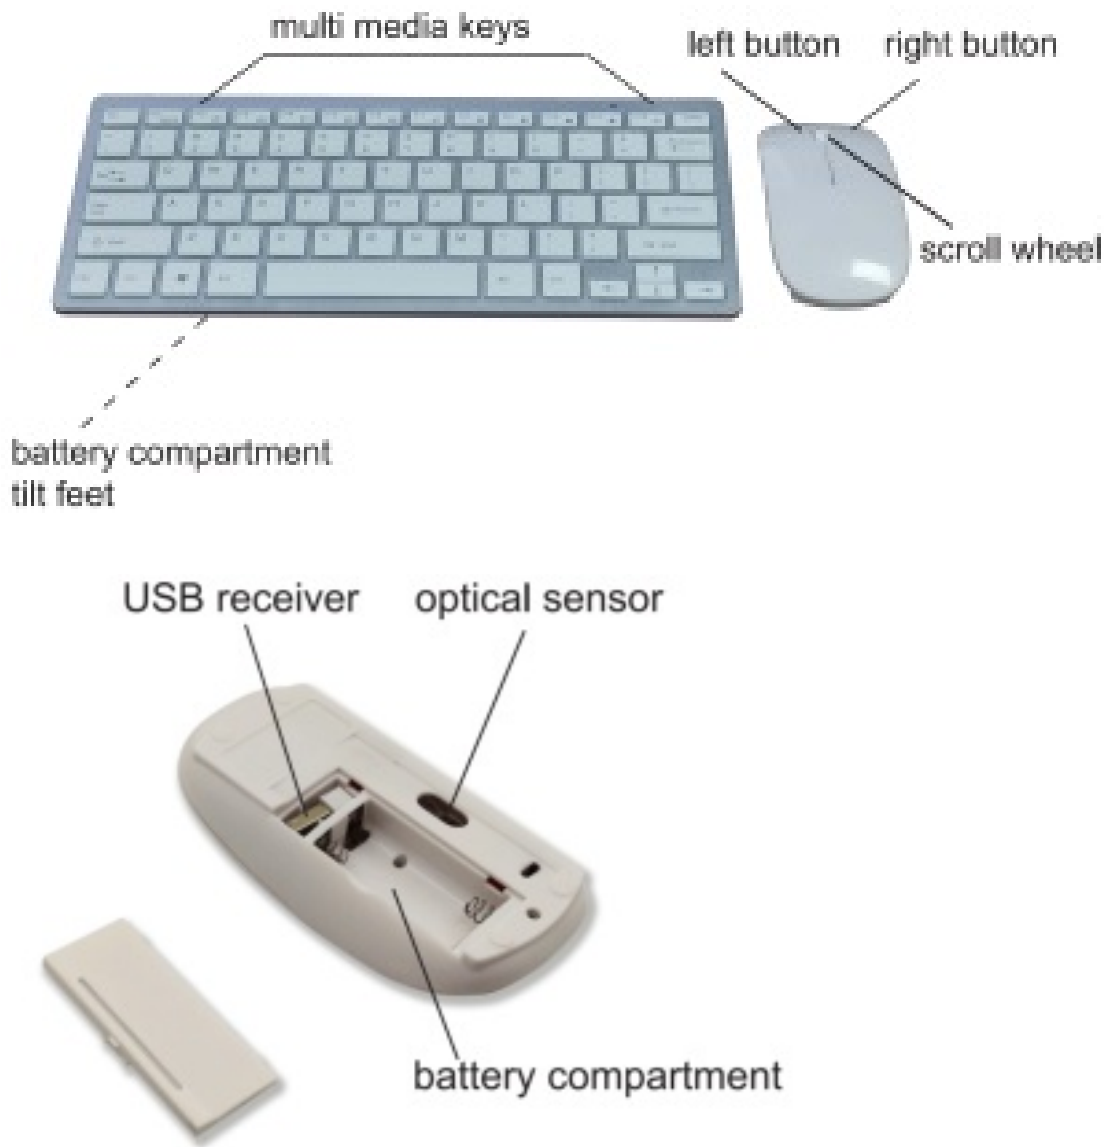

## Inserting the Batteries

1. Remove the battery compartment covers of mouse and keyboard and insert two 1.5 V AAA battery in each.  
Please note the polarity diagram printed inside the battery compartments of mouse and keyboard. **Caution!**  
Danger of explosion if the batteries are incorrectly replaced.
2. Replace the battery compartment cover again, making sure it is closed firmly.

## Notes on batteries

Only use top-quality batteries. Cheap batteries could leak and damage the device as a result.

If the batteries leak, remove them with a cloth and dispose of them accordingly. Ensure that leaking battery acid does not come into contact with skin and eyes.

If you do get battery acid in your eyes, flush them thoroughly with lots of water and consult a physician immediately! If battery acid comes into contact with your skin, wash the affected area with lots of water and soap. If the device is not to be used for an extended period of time, then the batteries should be removed, as the device could become damaged should they leak. If the device functions weaken, replace all batteries.

Batteries do not belong in household waste! Expired batteries must be disposed of in an environmentally friendly way and according to the applicable legal regulations.

Batteries are very dangerous if swallowed. Please keep the batteries and the device components away from children at all times. If a battery is swallowed, seek medical attention immediately.

Batteries must not be recharged or activated with other means, dismantled, thrown into fire or short-circuited. Remove the batteries prior to disposing of the device.

## Connecting the USB Receiver

1. Remove the USB receiver from its compartment inside the mouse.
2. Plug the USB receiver into a free USB port on the computer. The device does not require a driver.
3. Mouse and keyboard will connect automatically and can be used immediately.

## Power saving mode


If the mouse is not being used for 8 minutes, it switches to power saving mode. The optical sensor is turned off to reduce power consumption to a minimum. Just move the mouse, or press any key to reactivate it.

## Care and maintenance

1. Wipe all parts with a dry soft cloth.



## Documents / Resources

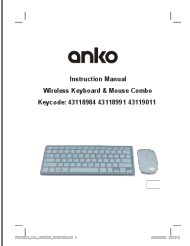 The image shows the front cover of the instruction manual for the Anko Wireless Keyboard & Mouse Combo. It features the Anko logo at the top, followed by the text 'Instruction Manual', 'Wireless Keyboard & Mouse Combo', and 'Keycode: 43118984 43118991 43119011'. Below the text is a photograph of the keyboard and mouse. At the bottom, it says 'Anko Technology Co., Ltd.' and '© 2018'.	<a href="#">anko Wireless Keyboard &amp; Mouse Combo</a> [pdf] Instruction Manual anko, Wireless, Keyboard, Mouse, Combo, 43118984, 43118991, 43119011
---	---