




Anolis ARCDOT LED Lighting Instruction Manual

[Home](#) » [ANOLiS](#) » Anolis ARCDOT LED Lighting Instruction Manual 


Anolis[®]

ARCDOT
INSTALLATION INSTRUCTIONS


ArcDot

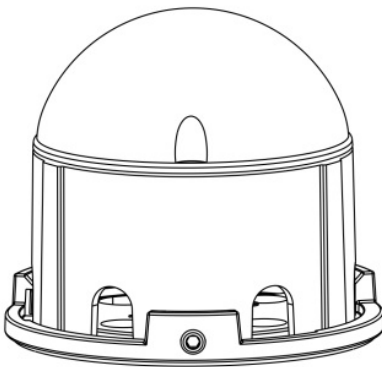

ArcDot Optic

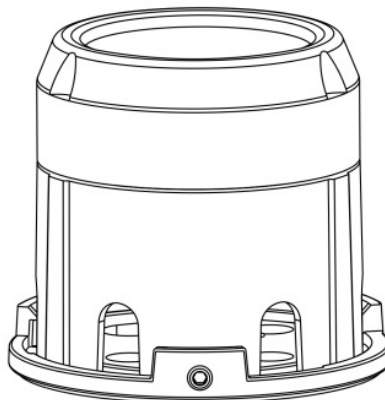

ArcDot Flash

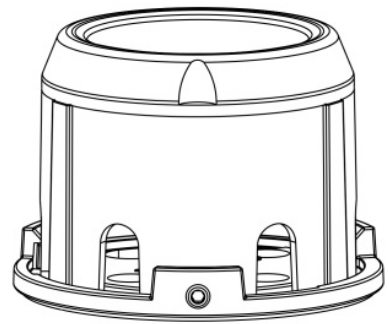

Contents





- [1 ARCDOT LED Lighting](#)
- [2 STEP 1 INSTALL HOUSING](#)
- [3 STEP 2 INSTALL LUMINAIRE](#)
- [4 STEP 3 CONNECTION](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)

ARCDOT LED Lighting




Fixture must be installed by a qualified electrician in accordance with all national and local electrical and

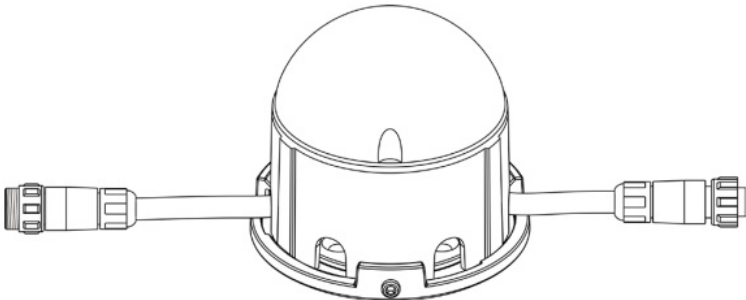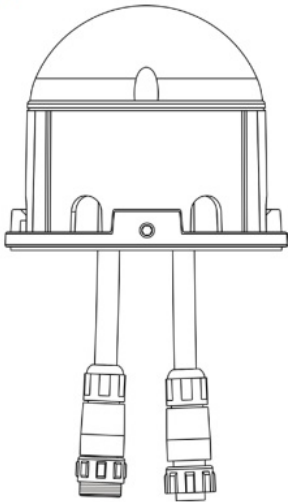construction codes and regulations.


Version 1- with two supply cables	Version 2- with one supply
<div data-bbox="252 244 507 286">1A Side connection</div> <div data-bbox="285 338 1034 636"></div> <div data-bbox="252 770 541 813">1B Bottom connection</div> <div data-bbox="529 808 817 1308"></div>	<div data-bbox="1303 244 1520 286">2A Side connectic</div> <div data-bbox="1362 327 1520 595"></div> <div data-bbox="1303 730 1520 772">2B Bottom connec</div> <div data-bbox="1362 808 1520 1308"></div>

STEP 1 INSTALL HOUSING

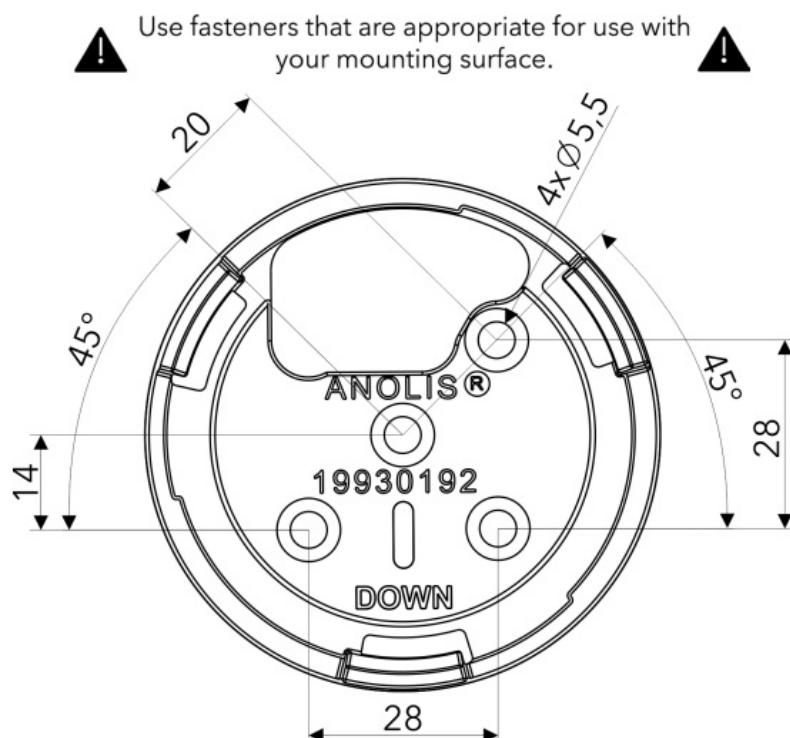


Drill holes to the mounting surface according to base plate holes spacing. Mount base plate via fasteners to the surface, taking care not to over tighten them.

STEP 2 INSTALL LUMINAIRE

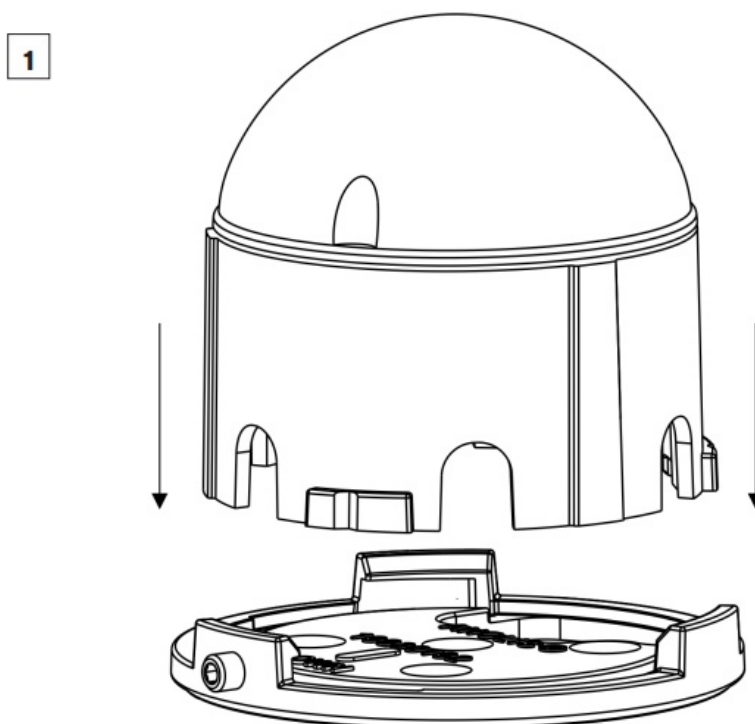

Snap the luminaire on mounted base plate.


2

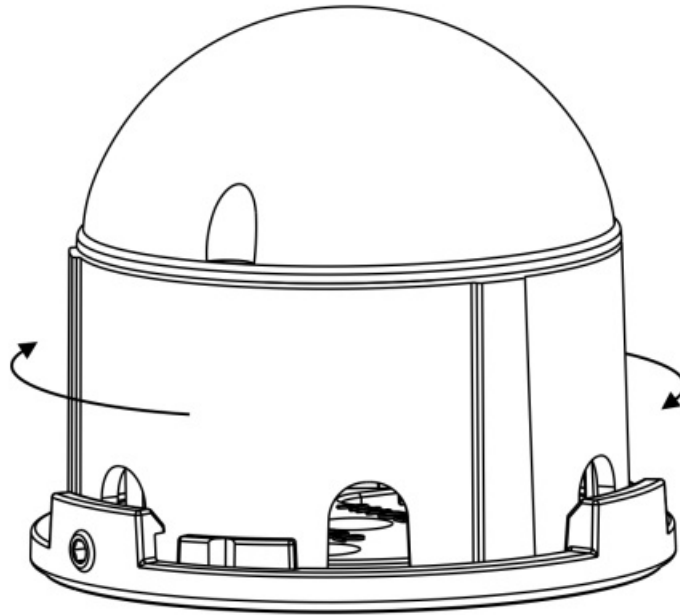

Turn with luminaire in clockwise direction, untill you feel it is mounted well.

3

1X  M5x5

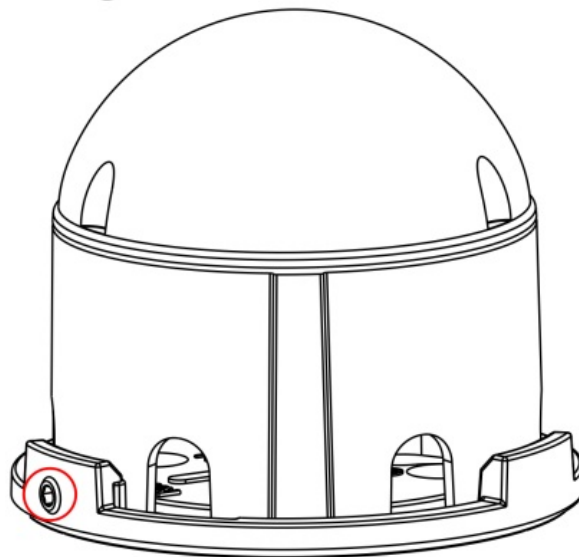


Ensure the luminaire position with M5x5 bolt.


STEP 3 CONNECTION LTUMINAIRE

Before ArcDots are connected to power source, you have to connect the Active Terminator on the last luminaire in the row.


That is necessary for correct identification of every single ArcDot and this has to be done for setup of every ArcDots row.

You can change the Active Terminator box for Passive Terminator box, when the set up is finished.

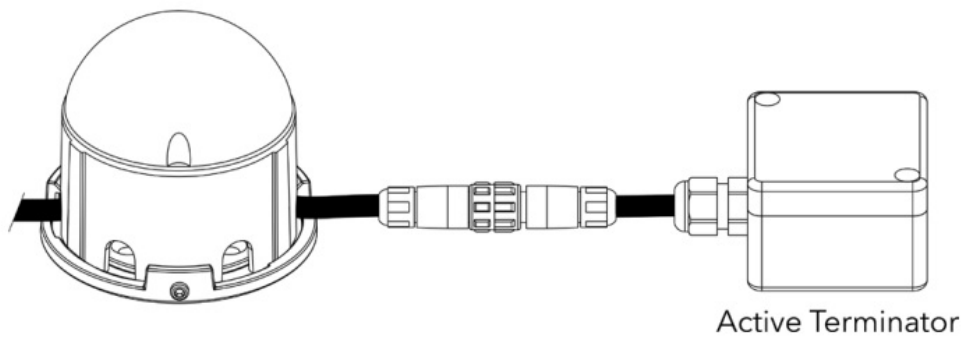


 Every ArcDot line has to be terminated with the active/passive terminator

Version 1- with two supply cables

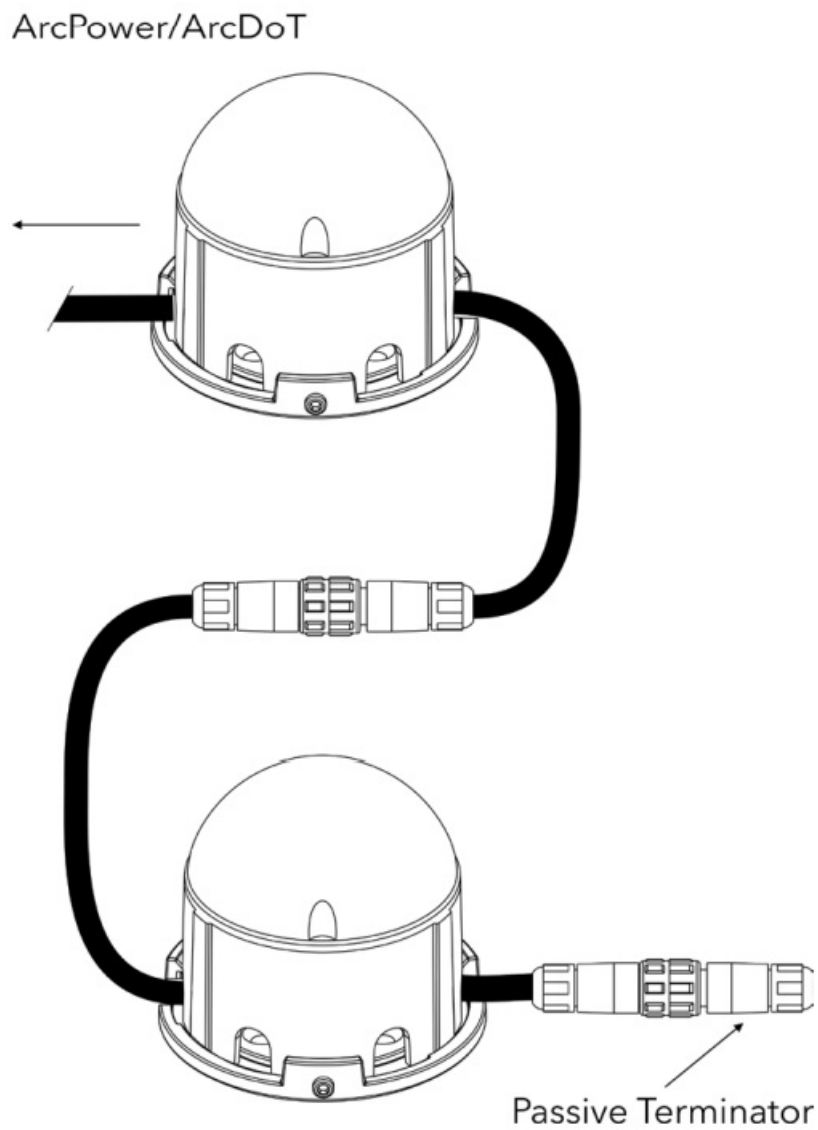

Version 2- with one supply cable and T-connector

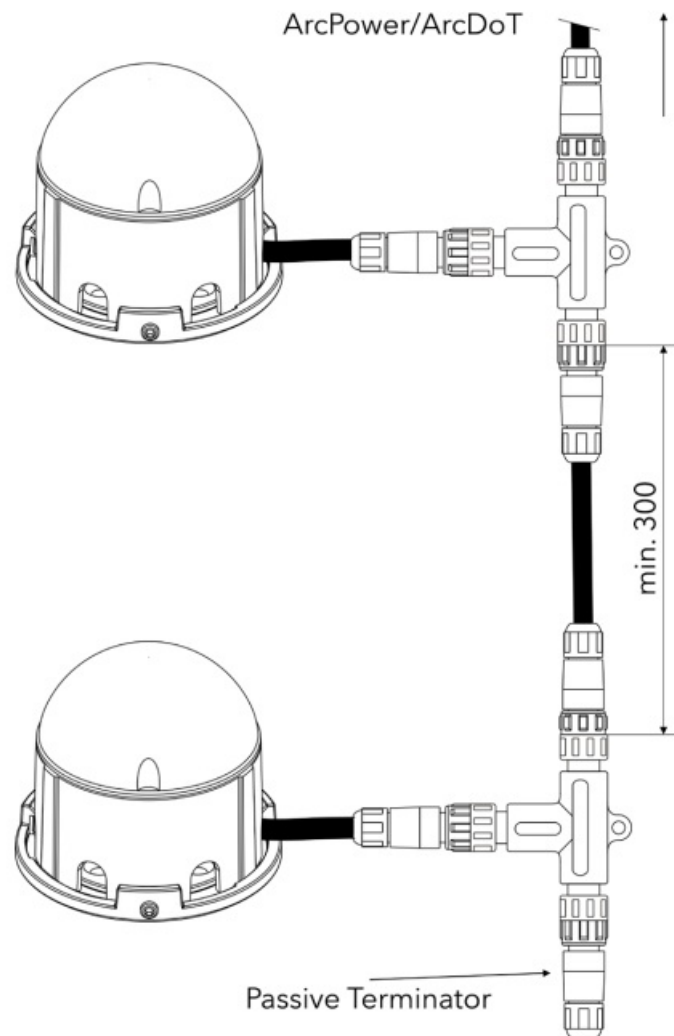


The minimum cable length of 0.3m between two T-connectors has to be kept in case that the ArcDot sorting is done manually from the ArcPixel Power menu.



Maximum length between the Arc Power and the last ArcDot must not exceed 100 meters. Do not connect or disconnect the ArcDot strings with the ArcPixel Power/ArcPower Unit Pixel energized.

1A


ArcPixel Power

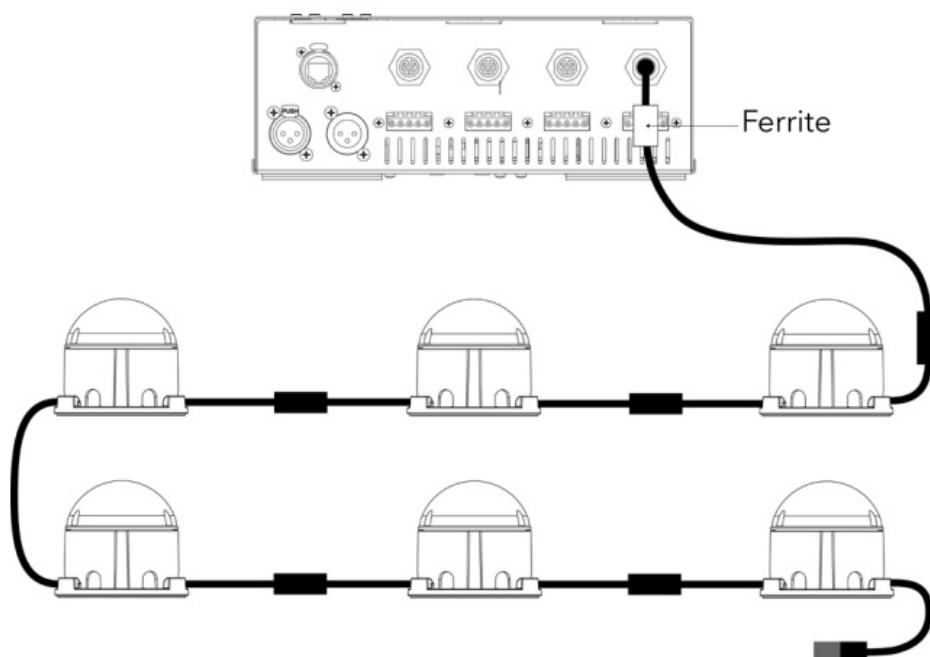

Connect the ArcPixel row into ArcPixel Power. There must be a ferrite filter placed on every ArcPixel Power output to avoid high frequency noises in the circuit.

1B

ArcPower Unit Pixel

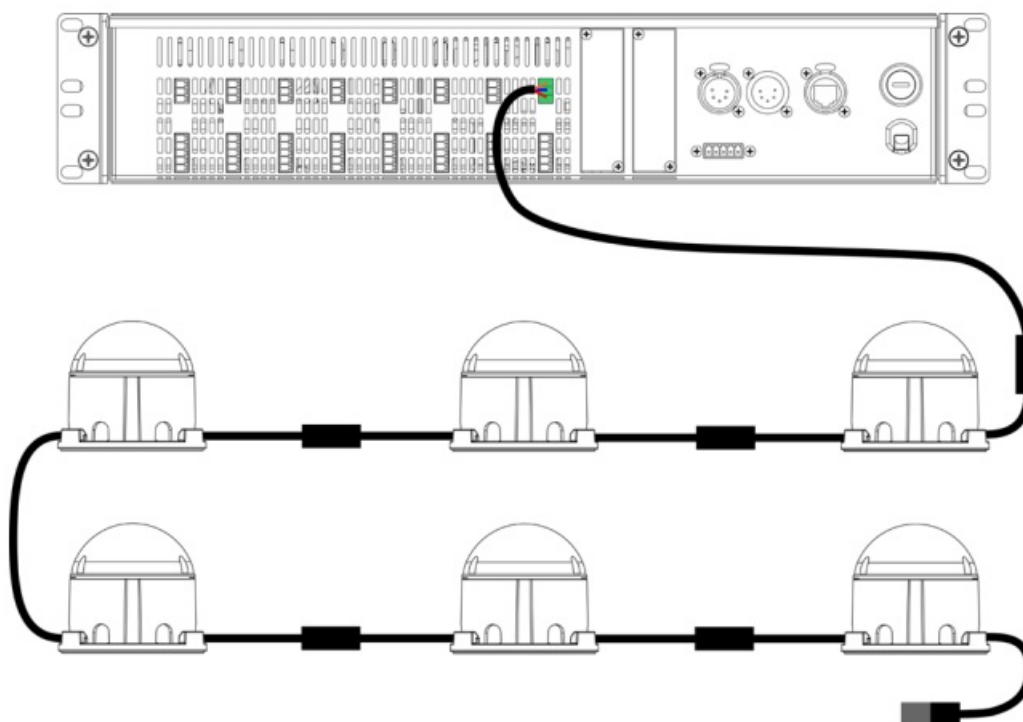

Install terminal blocks on cable and connect it to the ArcPower Unit Pixel.


ROBE lighting s. r. o. | Palackeho 416 | 757 01 Valasske Mezirici | Czech Republic

Tel.: +420 571 751 500

E-mail: info@anolis.eu

www.anolislighting.com

VERSION 1.0 / 05_2021

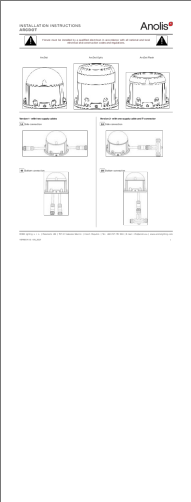	<p>Anolis ARCDOT LED Lighting [pdf] Instruction Manual ARCDOT LED Lighting, ARCDOT, LED Lighting</p>
---	--