




ANOLiS Arcsource 4MC II LED Lighting Installation Guide

[Home](#) » [ANOLiS](#) » ANOLiS Arcsource 4MC II LED Lighting Installation Guide 

ANOLiS Arcsource 4MC II LED Lighting Installation Guide



Fixture must be installed by a qualified electrician in accordance with all national and local electrical and construction codes and regulations.

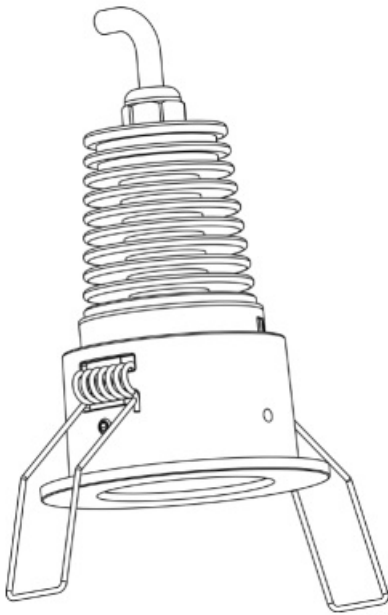

Contents

[1 CEILING OPENING](#)

[2 CONNECTION](#)


[3 LUMINAIRE
INSTALLATION](#)

[4 Documents / Resources](#)

[5 Related Posts](#)

CEILING OPENING

1

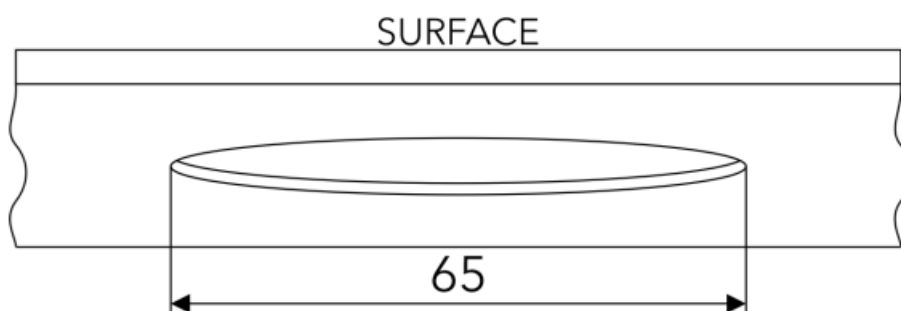


Prepare mounting hole with diameter of 65 mm.

CONNECTION

1 Connection – colour coding

RJ 45 connector

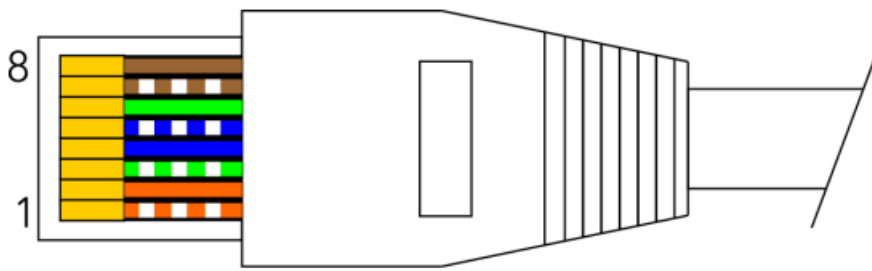

Color coding T568B

Pin	Function	Wire
1	Red +	Orange/White
2	Green +	Orange
3	Blue +	Green/White
4	White –	Blue
5	Red –	Blue/White
6	Green –	Green
7	Blue –	Brown/White
8	White –	Brown

Power Supply Units suitable for ArcSource MC II:


ArcPower Rack Unit

ArcPower 36/72/144/360

ArcSource 4MC II can be connected directly to power supply unit.

Splitters can be used for connection of multiple fixtures at one output line.


Cable connectors can be used, when extension of output line is required.

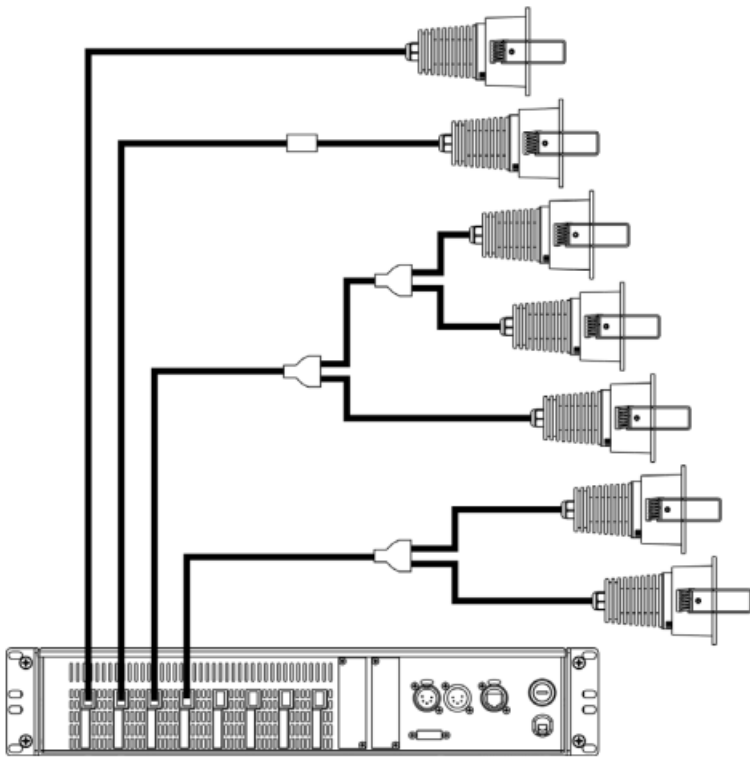

ArcSource 4MC II fixtures connected to ArcPower Rack Unit with use of splitters and cables connector.


LUMINAIRE INSTALLATION

1

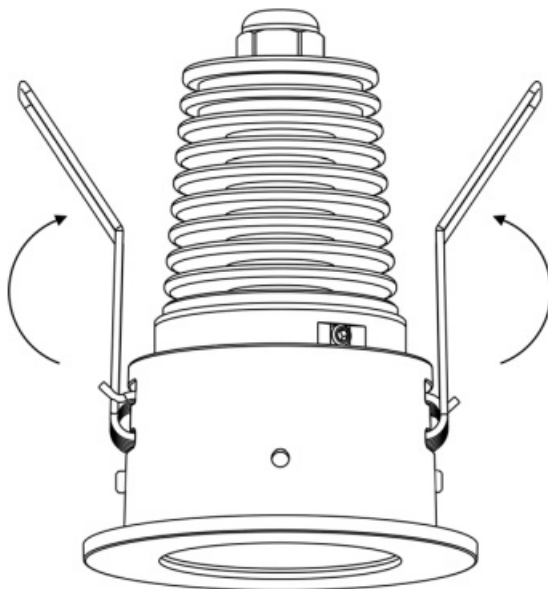


Lift up spring clips on both sides of the fixture

2

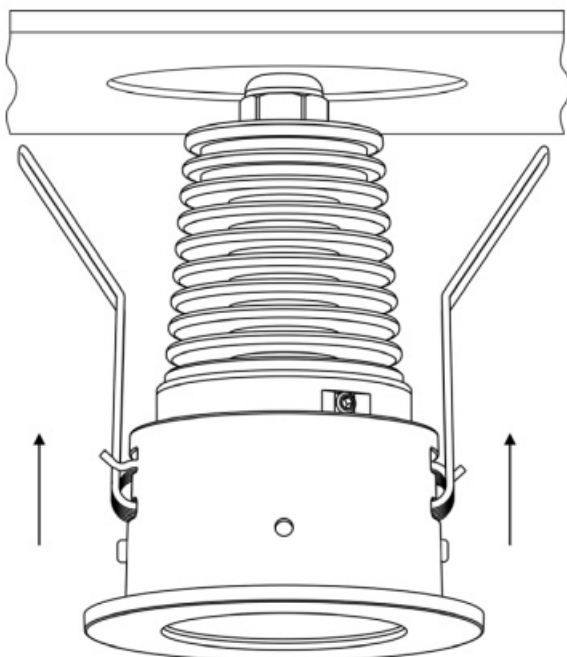

Insert the luminaire into the ceiling opening.


3

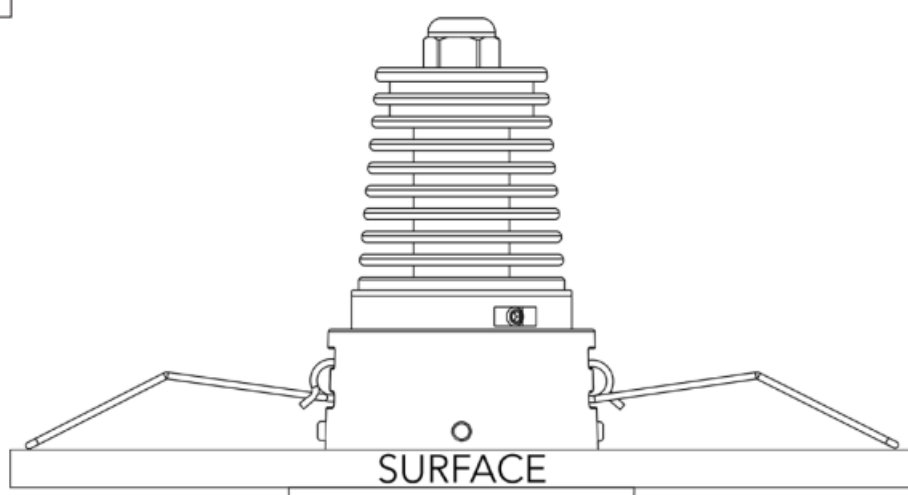

Secure the luminaire inside the ceiling by releasing spring clips.

ROBE lighting s. r. o. | Palackeho 416 | 757 01 Valasske Mezirici | Czech Republic | Tel.: +420 571 751 500 | E-mail: info@anolis.eu | www.anolislighting.com
VERSION 1.0 / 01_2022

Documents / Resources

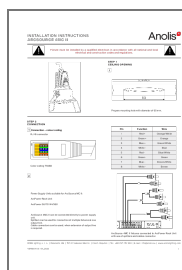

[ANOLiS Arcsource 4MC II LED Lighting](#) [pdf] Installation Guide
Arcsource 4MC II LED Lighting, Arcsource 4MC II, Arcsource, 4MC II, Arcsource LED Lighting, 4MC II LED Lighting, LED Lighting, LED, Lighting

