



H Series Network Camera



ANPVIZ H Series Network Camera User Guide

[Home](#) » [ANPVIZ](#) » ANPVIZ H Series Network Camera User Guide 

Contents

- [1 ANPVIZ H Series Network Camera](#)
- [2 Activate The Camera](#)
- [3 Operation](#)
- [4 Connecting NVR system to use](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)



ANPVIZ H Series Network Camera




Activate The Camera


How to activate the camera before using it?

- **Connection Diagram**

- Works with PoE

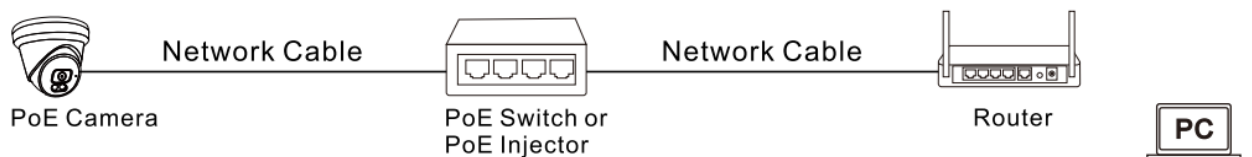

- Works with DC Power

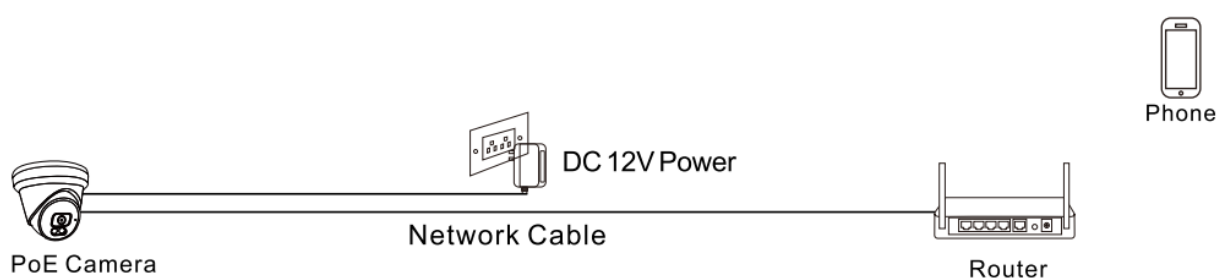

The camera supports DC 48V PoE Switch/Injector or DC 12V power adapter. If you don't have NVR, you can choose one of these two connection methods to connect it to the same network as PC or smartphone.

Note: The router can't power the camera.

Operation

The operation is as follows:

1. **Activate camera via PC**

1. Download and install the SADP Tool on Anpviz Official Website.
2. Search And Activate the camera via SADP Tool.
3. Log in the camera on web browser (e.g. Edge/ Chrome/Firefox)
4. Install the plug-in to preview live video and enable the App Platform access.
5. Download the mobile App (Guarding Vision, Anpviz Viewer or Hik-Connect) to register and login your account.



Use SADP to
Activate and Add

6. Scan to add camera to smartphone app.

Path to SADP download link: www.anpvizsecurity.com

Support→Download Center→Download→SADP Tool

You can scan the QR code to see the detailed operation video

2. Activate camera via App:

1. Download the APP (Guarding Vision, Anpviz Viewer or Hik-Connect), Register and login.
2. Click "Add" to select the online device.
3. Select and activate the camera.
4. Add and Preview.

You can scan the QR code to see the detailed operation video



Use App
Activate and Add

Connecting NVR system to use

Plug and Play with Anpviz H NVR/ Hikvision/Hikvision OEM NVR

1. If you have Anpviz H Series NVR, Hikvision or Hikvision OEM NVR, L TS Platinum Series, Annke, etc.




Note: There is no need to activate the camera, just connect the camera directly to the PoE port of these NV Rs via the network cable and wait for the connection.

2. If you have other brands of NVR, you need to activate the camera (via PC or APP) to set the camera IP, and

then connect to a third party NVR such as Dahua, Uniview or other brands.

Works with PoE

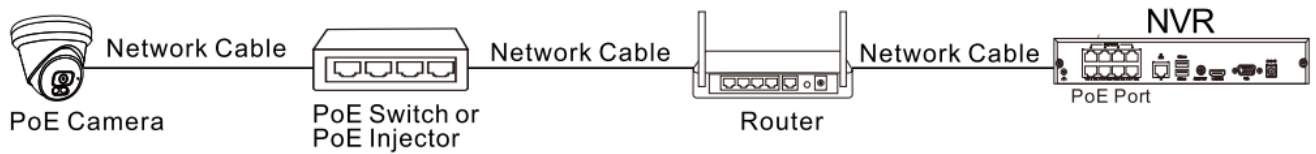

Detailed operation can be viewed in the user manual or scanning code to view the video, If you need support, please contact us: support@anpvizsecurity.com




Dahua or third-party
NVR connection



U Series or third-party
NVR connection

www.anpvizsecurity.com

Documents / Resources

	ANPVIZ H Series Network Camera [pdf] User Guide IPC-B1053WD-S, H Series Network Camera, H Series, Network Camera, Camera
---	---

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.