

anslut 002467 Light Chain Instruction Manual


Home » anslut » anslut 002467 Light Chain Instruction Manual

Contents


- 1 anslut 002467 Light
- **2 SAFETY INSTRUCTIONS**
- **3 TECHNICAL DATA**
- 4 USE
- **5 Documents / Resources**
 - **5.1 References**
- **6 Related Posts**



anslut 002467 Light Chain

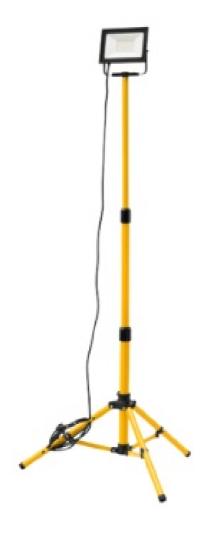

SAFETY INSTRUCTIONS

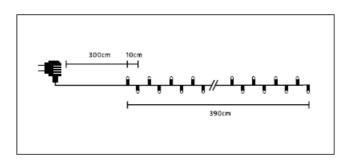

- Do not connect the product to the mains power supply while the product is still in the pack.
- Designed for indoor and outdoor use.
- · Check that no light sources are damaged.
- Do not connect two or more string lights together.
- No part of the product can be replaced or repaired. The whole product must be discarded if any part is damaged.
- Do not use sharp or abrasive objects during assembly.
- Do not expose the cord or conductors to mechanical loads. Do not hang objects on the string of lights.
- This is not a toy. Exercise care if the product is used near children.
- Unplug the transformer from the mains power supply when the product is not in use.
- This string of lights must only be used together with the supplied transformer and must never be connected directly to the mains supply without a transformer.

- The product is not intended to be as general lighting.
- Recycle products that have reached the end of their useful life according to local regulations.

WARNING! The string of lights may only be used if all seals are fitted correctly.

TECHNICAL DATA

- Input voltage, transformer 230 V ~ 50 Hz
- Output voltage, transformer 31 V AC
- Output 3.6 W
- No. of LEDs 40 pcs.
- Protection rating IP44

USE

- 1. Remove the string of lights from the packaging.
- 2. Connect the set to the transformer.
- 3. Plug the plug into the mains power supply.
- 4. Press the power switch to turn on the light sources.
- 5. Different lighting options can be activated by pressing the power switch the following number of times:

Number of times pressed	Lighting option
Once	ON. White constant light without timer
Twice	ON. White constant light with timer function (8 hours on, 5 hours off, 4 hours on, 7 hours off).
Three times	ON. White flashing light with timer function(8 hours on, 5 hours off, 4 hours on, 7 hours off).
Four times	ON. Multi-colored constant light without timer function.
Five times	ON. Multi-colored constant light with timer function(8 hours on, 5 hours off, 4 hours on, 7 hours off).
Six times	ON. Multi-colored flashing light with timer function(8 hours on, 5 hours off, 4 hours on, 7 hours off).
Seven times	ON. Switches between white and multi-colored light with timer function(8 h ours on, 5 hours off, 4 hours on, 7 hours off).
Eight times	OFF.

Documents / Resources



anslut 002467 Light Chain [pdf] Instruction Manual 002467, Light Chain, 002467 Light Chain

References

- Jula â€" products for home and garden
- Jula ingenting kan stoppe deg!
- Jula Teraz nic Cię nie powstrzyma!
- Jula inget kan stoppa dig nu!

Manuals+,