



anslut 012425 Floodlight with Motion Detector Instruction Manual

[Home](#) » [anslut](#) » anslut 012425 Floodlight with Motion Detector Instruction Manual 

anslut[®]

012425 Floodlight with Motion Detector
Instruction Manual



FLOODLIGHT WITH MOTION DETECTOR OPERATING INSTRUCTIONS

Important! Read the user instructions carefully before use. Save them for future reference. (Translation of the original instructions).

 
 
 
 
 
 
Care for the environment!

 
 
Recycle discarded products in accordance with local regulations.

Jula reserves the right to make changes. For latest version of operating instructions, see www.jula.com



JULA AB, BOX 363, SE-532 24 SKARA
202112-07
© Julia AB

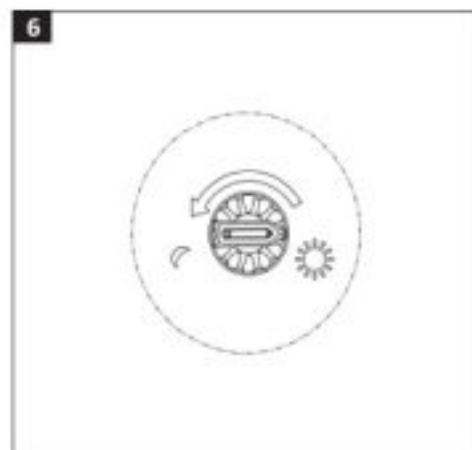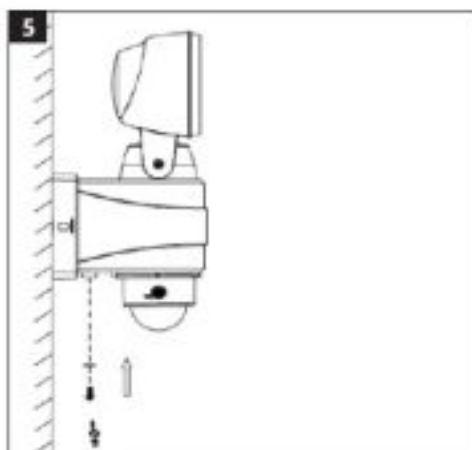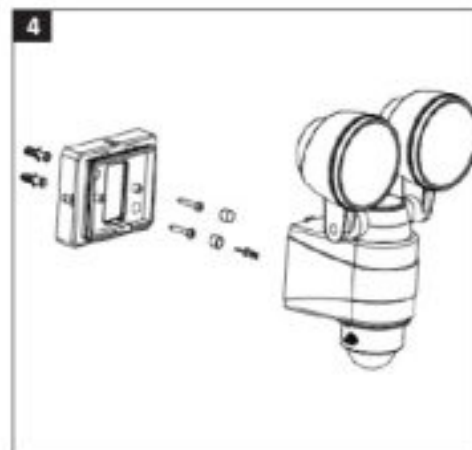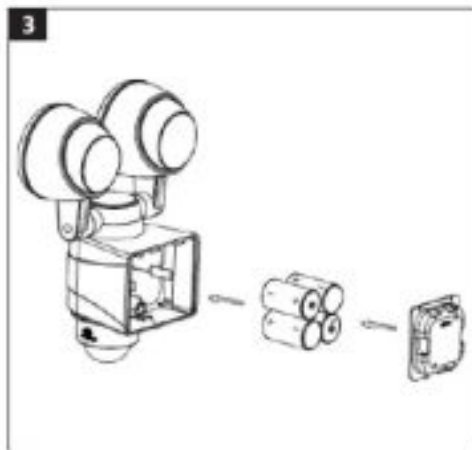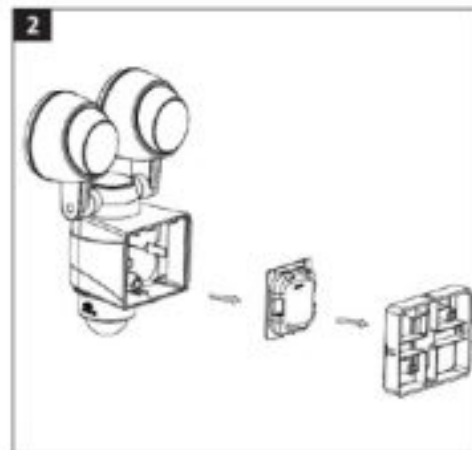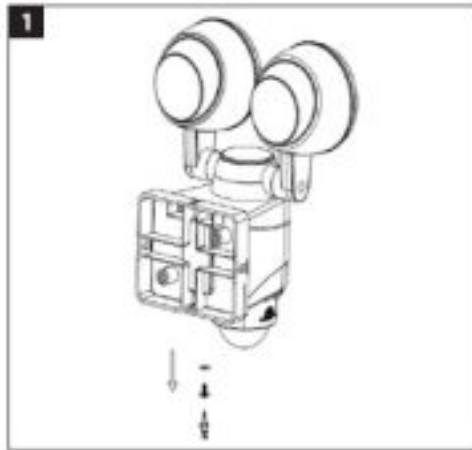

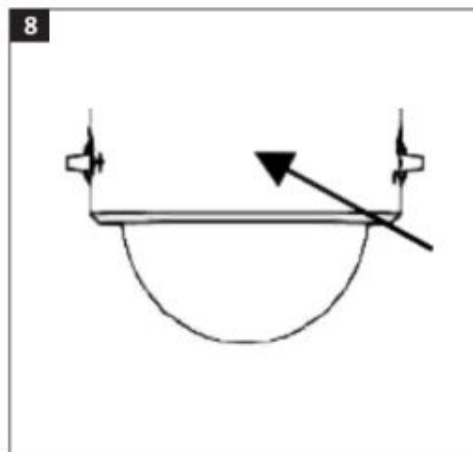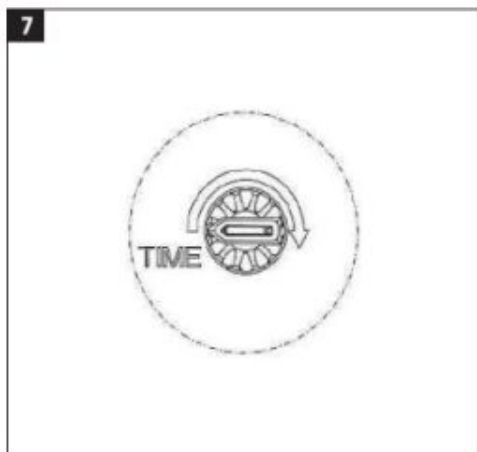

Contents

[1 SAFETY](#)

[INSTRUCTIONS](#)

[2 TECHNICAL DATA](#)

[2.1 ASSEMBLY](#)

[3 USE](#)

[4 MAINTENANCE](#)




[5 Documents / Resources](#)

[6 Related Posts](#)

SAFETY INSTRUCTIONS

- Designed for indoor and outdoor use.
- Battery-powered only.
- Do not mix old and new batteries, or batteries of different types, for example, rechargeable batteries and non-rechargeable batteries. Replace all the batteries at the same time. Insert the batteries with the correct polarity.
- Battery fluid from leaking batteries can cause burns on the skin. Wear safety gloves if you need to handle leaking batteries.
- Never modify the product, this can invalidate the warranty.
The product must be discarded if the glass front is cracked.
- The LED light source is not replaceable.
When the light source has reached the end of its useful life the complete product must be replaced.
- Remove the batteries if the product is not going to be used for some time.

SYMBOLS

| | |
|---|--|
|  | Read the instructions. |
|  | Approved in accordance with the relevant directives. |
|  | Recycle endoflife products in accordance with local regulations. |

TECHNICAL DATA

| | |
|-------------------|------------------|
| Battery | 4 x 1.5 V C/LR14 |
| Output | 9W |
| Protection rating | IP44 |
| Luminous flux | 600lm |
| Color temperature | 4000 K |
| Lightingup time | 3s7min |
| Detection range | Max 810 m |
| Light sensitivity | 2020000 lux |

ASSEMBLY

POSITIONING

- The product should be mounted on a wall.
- The ambient temperature affects the range of the motion detector. The product should therefore not be placed near sources of heat, such as air conditioning units, fans and ventilation openings, outlets from ovens or heaters, or pointed at a bright, reflective surface.

PREPARATIONS AND MOUNTING

1. Carefully remove all the parts from the packaging and place them on a smooth, horizontal surface.
2. Undo the screw on the bottom edge of the product and remove the wall bracket.

FIG. 1

3. Remove the battery cover by pressing both tabs.

FIG. 2

4. Insert four batteries (sold separately). Replace the battery cover by pressing it in place until it clicks.

FIG. 3

5. If the product is to be mounted on a concrete wall, first drill two holes in the wall. Put in expander plugs, align the wall bracket to the holes and screw it in place with the two screws.

FIG. 4

6. Hold the lamp flush with the wall bracket and tighten the screw.

FIG. 5

USE

SETTINGS

The light function on the product is set with two control dials on the top of the motion detector.

Light sensitivity (LUX)

1. If the dial is turned to maximum the light will go on in almost all light conditions, from twilight to full daylight.
2. If the dial is turned to a minimum the light will only go on in the dark. This is in most cases the best setting when the light is only needed during the evening and night.

FIG. 6

Lighting-up time after detection of movement (TIME)

1. This dial sets the delay before the light switches off-the time during which the light remains on after the motion detector has detected movement.

The time can be set from 3 seconds to 7 minutes. Turning the dial clockwise results in a longer lighting-up time.

FIG. 7

2. After setting, turn the motion detector so that the front of it (see arrow) is facing the required detection area.

FIG. 8

3. Angle and/or carefully turn the lamp housings to point them at the area to be illuminated.

MAINTENANCE

Wipe the lamp with a soft, lightly moistened cloth. Do not use detergent or solvent.

REPLACING THE BATTERY

- Only use new batteries.
- Do not mix old and new batteries.
- Do not mix alkaline batteries with other types of batteries, for example, rechargeable batteries with non-rechargeable batteries.
- Insert the batteries with the correct polarity.

Documents / Resources

anslut

012425



1. ANSLUT 012425 FLOODLIGHT WITH MOTION DETECTOR
This floodlight is designed for outdoor use. It is suitable for use in areas with high humidity and is resistant to vandalism. The floodlight is equipped with a motion detector and a remote control. The floodlight is suitable for use in areas with high humidity and is resistant to vandalism. The floodlight is equipped with a motion detector and a remote control.

[anslut 012425 Floodlight with Motion Detector](#) [pdf] Instruction Manual 012425, Floodlight with Motion Detector