



## anslut 014274 Floor Fan Instruction Manual

[Home](#) » [anslut](#) » anslut 014274 Floor Fan Instruction Manual 

### Contents

- [1 anslut 014274 Floor Fan](#)
- [2 SAFETY INSTRUCTIONS](#)
- [3 SYMBOLS](#)
- [4 TECHNICAL DATA](#)
- [5 DESCRIPTION](#)
- [6 ASSEMBLY](#)
- [7 FITTING THE FAN BLADE AND GRILLE](#)
- [8 USE](#)
- [9 MAINTENANCE](#)
- [10 Documents / Resources](#)
- [11 Related Posts](#)



**anslut 014274 Floor Fan**



## **SAFETY INSTRUCTIONS**

- Only intended to be used indoors.
- This product can be used by children from eight years and upwards and by persons with physical, sensorial or mental disabilities, or persons who lack experience or knowledge, if they are supervised or receive instructions concerning the safe use of the product and understand the risks involved with its use. Do not allow children to play with the product.
- The product must only be used for its intended purpose and in accordance with these instructions.
- Do not cover the product, this can result in overheating or fire.
- Place the product standing upright on a level, stable surface.
- When using the product it must always stand upright it must never be used on its side.
- Pull out the plug from the power point when the product is not in use. Do not pull the power cord to pull out the plug.
- Leave a free space of at least 30 cm round the product to ensure safe and correct functionality.
- Check that the product can oscillate without colliding with or being obstructed by anything in the near vicinity.
- Never poke any objects into the grille in the product. It is especially important to explain this to children to make sure they understand the risks.
- Do not use the product if the power cord or plug are damaged, if the product has tipped over, or if it is not working properly.

- A damaged cord or plug must be replaced by an authorised service centre or qualified person to ensure safe use.
- Do not use the product outdoors.
- Do not use the product near a bath, shower or swimming pool.
- Do not expose the product to direct sunlight.
- Do not use product together with an external speed controller.
- Do not use the product near flammable liquids or gas.
- Switch off the product and pull out the plug before cleaning.
- Never leave the product unattended when switched on.
- Repairs must only be carried out by an authorised service centre.
- If the product stops working properly, switch it off with the switch on the control panel and contact the retailer.

 
## **SYMBOLS**

- Read the instructions.
- Safety class 11.
- Approved in accordance with the relevant directives.
- Recycle discarded product in accordance with local regulations.

## **TECHNICAL DATA**

- **Rated voltage** 230 V ~ 50 Hz
- **Input power** 40W
- **Safety class** 11


## **DESCRIPTION**

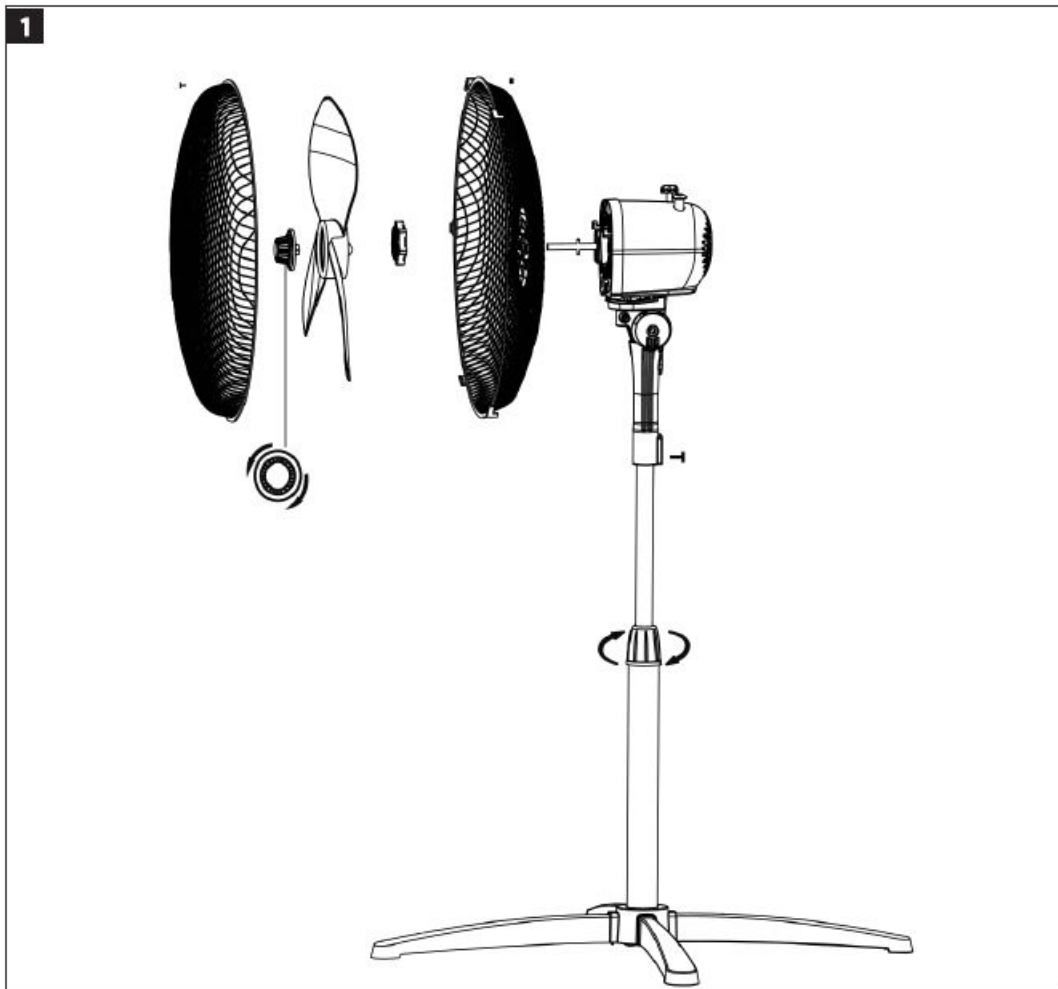


## ASSEMBLY

### ASSEMBLY OF FOOT AND COLUMN


1. Fit the bottom tube in the connector. **FIG. 2**

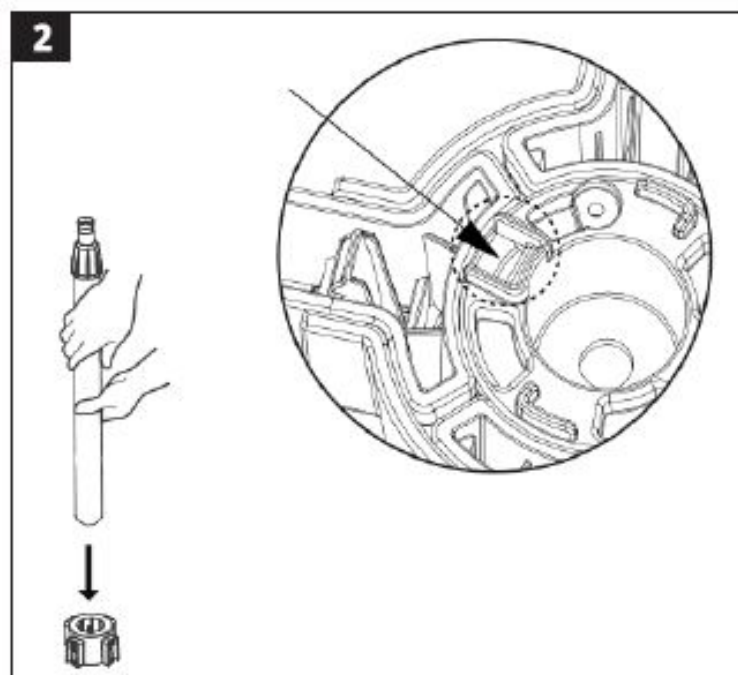


2. Fit the 4 parts of the foot on the connector and check that they are firmly in place. **FIG. 3 & FIG. 4**

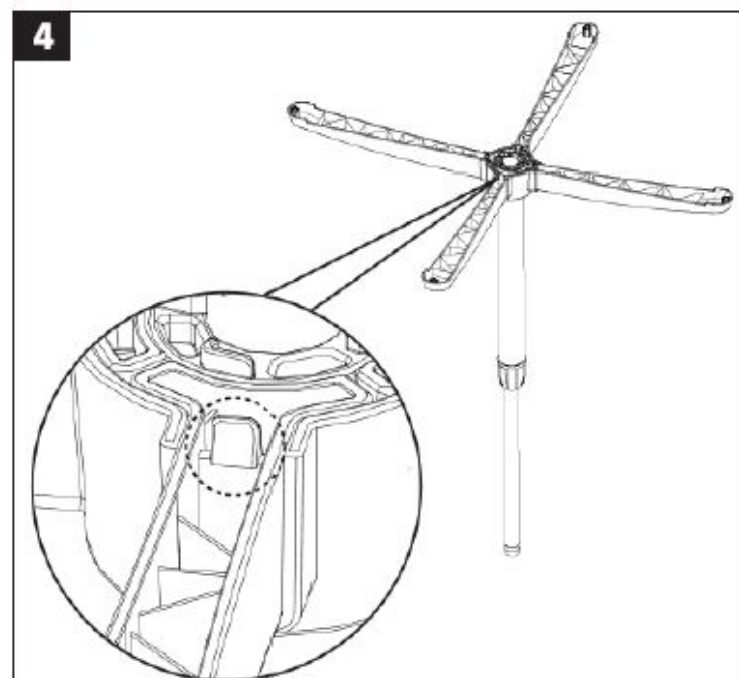

3. Put the column tube in the connector from above and check that it locks in place look from underneath through the hole in the connector. **FIG.5**

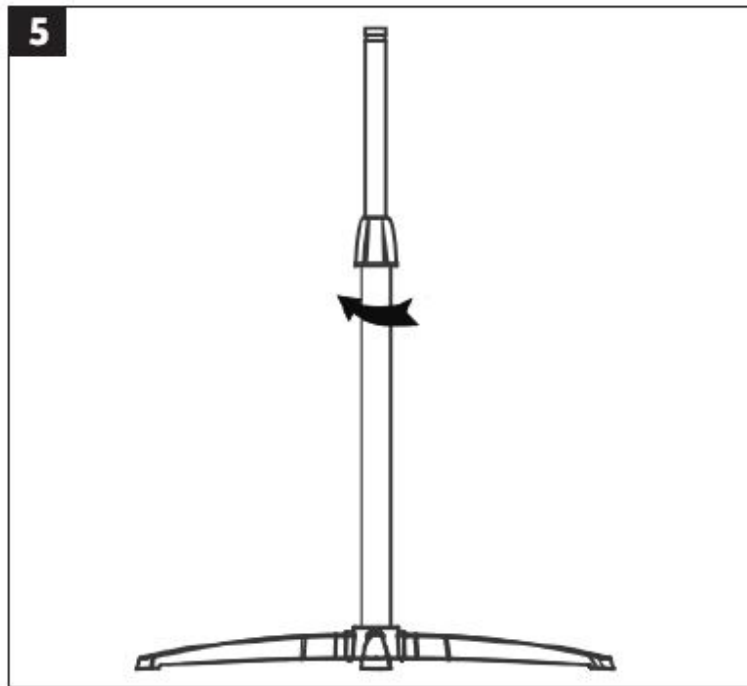


4. Release the height adjustment ring on the column tube and adjust to the required height. Tighten the height adjustment ring. **FIG. 6**

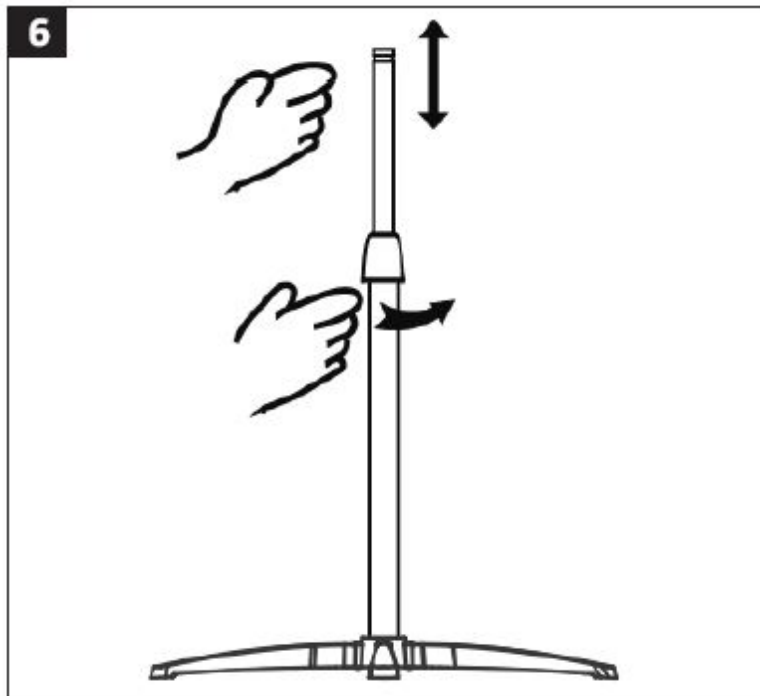

**NOTE:**


The inner column tube can be concealed in the extension tube. In which case, pull out the extension tube to the required height.

5. Undo the wing screw on the bottom of the motor unit to fit the motor unit on the column tube. Put the motor unit on the inner column tube and tighten the wing screw so that it engages with a suitable slot in the inner column tube. **FIG. 7**

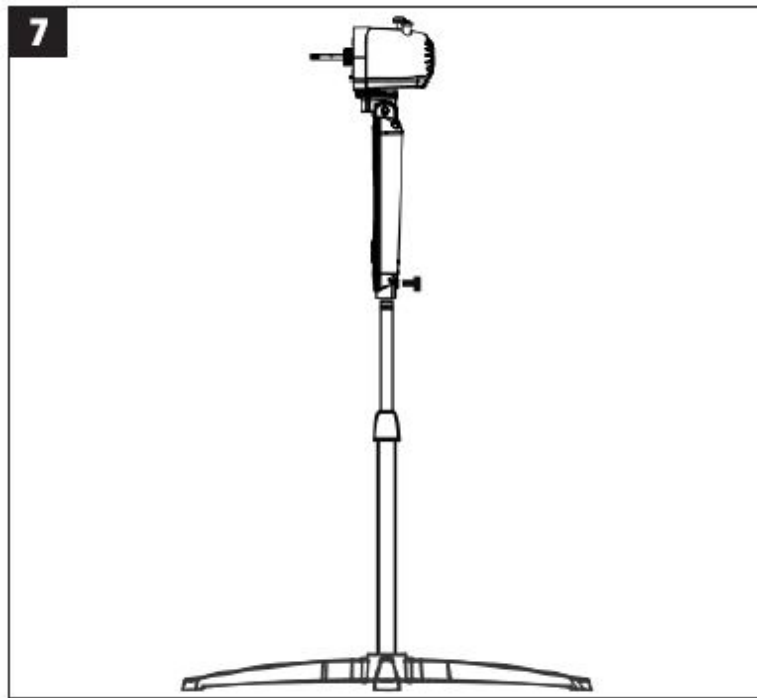


## FITTING THE FAN BLADE AND GRILLE

1. Unscrew the hub nut clockwise and the plastic nut anticlockwise. Fit the back grille on the motor unit and tighten the plastic nut. **FIG.8**

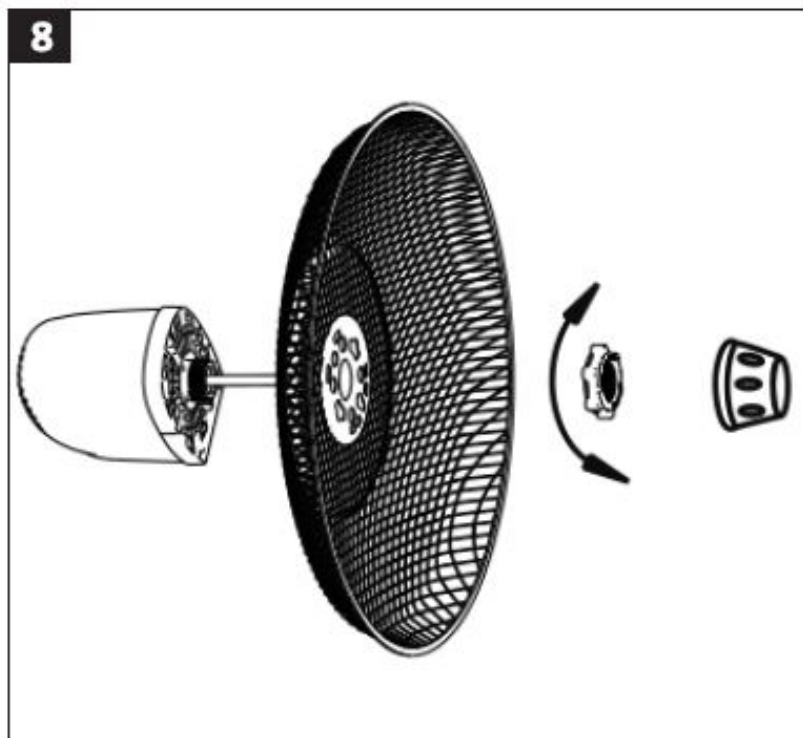

2. Put the fan blade on the axle and check that the pin on the blade axle engages in the slot in the fan blade. Turn the hub nut anticlockwise to lock to lock the fan blade. **FIG. 9**

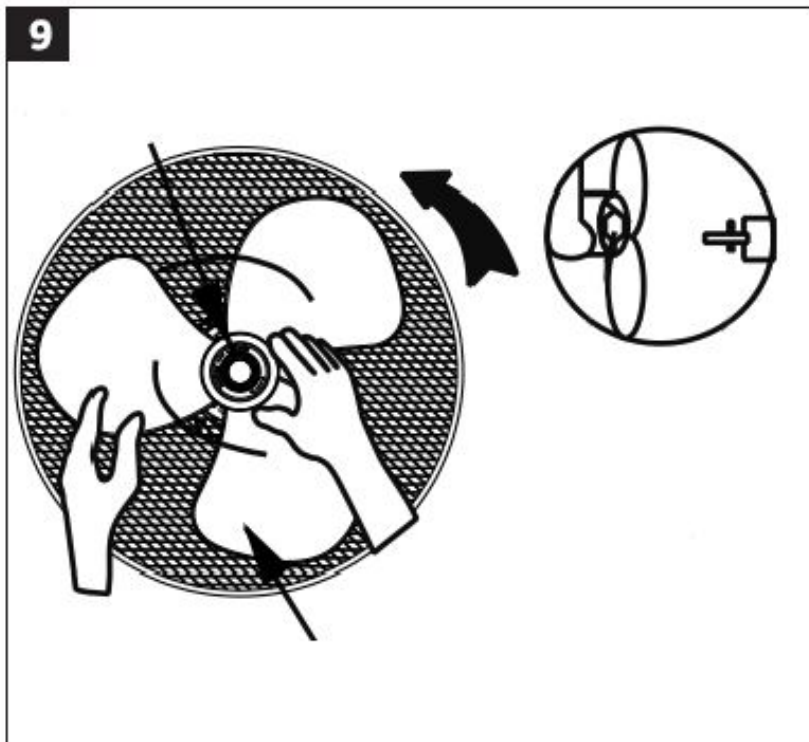

3. Put the front and back grille together with the grille clamp and tighten the lock screw and nut for the grille.

## USE

1. Set the required speed with the power switch:
  1. 0: Off
  2. 7: Low speed
  3. 2: Medium speed
  4. 3: High speed
2. To activate/deactivate oscillation, pull up/press down the oscillation button.
3. Carefully press the grille to adjust the air flow in the vertical plane.
4. Adjust the height setting by releasing the height adjustment ring and carefully lifting or lowering to the required height, and then tightening the height adjustment ring again.

## MAINTENANCE

### NOTE:

Pull out the plug from the power point before installation and/or cleaning. The product should be cleaned once a month. Clean the fan with a soft cloth moistened with a mild detergent. Make sure that no water or other liquid gets into the fan.

### NOTE:

Do not use petrol, solvents or detergents that can damage the plastic parts.



## 014274

Description	Designation	Value	Unit
Max air speed		61	m'/min
Input power of fan	p	34.7	w
Operat ing value	Sv	1.76	(m'/min) W
Power consumption in standby mode	Pss	N/A	w
Sound power level	LwA	56.15	dB(A)
Maximum flow speed	C	3.12	m/s
Annual power consumpt ion	kWh/a	11.10	kWh/a
Service value sta ndard: IEC 60879:1986 (corr. 1992)			
Contact details: <a href="http://www.jula.com">www.jula.com</a>			

## Documents / Resources

The image shows the top section of a document. On the left, there is a small logo for 'anslut.' and a small circular icon with a 'P' inside. Below the logo is a small illustration of a floor fan. To the right of the illustration, there is a list of safety instructions in Swedish, each preceded by a small square icon. The main part of the image is a large, empty white space with a thin black border on the left and top. In the center of this space, the text 'anslut 014274 Floor Fan [pdf] Instruction Manual' is written in a blue, sans-serif font. Below this, the text '014274, Floor Fan, 014274 Floor Fan' is written in a smaller, black, sans-serif font.