



# anslut 014491 Table Fan Instruction Manual

[Home](#) » [anslut](#) » anslut 014491 Table Fan Instruction Manual 

## Contents

- [1 anslut 014491 Table Fan](#)
- [2 SAFETY INSTRUCTIONS](#)
- [3 TECHNICAL DATA](#)
- [4 DESCRIPTION](#)
- [5 ASSEMBLY](#)
- [6 HOW TO USE](#)
- [7 MAINTENANCE](#)
- [8 Documents / Resources](#)
- [9 Related Posts](#)



**anslut 014491 Table Fan**



## **SAFETY INSTRUCTIONS**

- Only intended to be used indoors.
- This product can be used by children from eight years and upwards and by persons with physical, sensorial or mental disabilities, or persons who lack experience or knowledge, if they are supervised or receive instructions concerning the safe use of the product and understand the risks involved with its use. Do not allow children to play with the product.
- The product must only be used for its intended purpose and in accordance with these instructions.
- Do not cover the product, this can result in overheating or fire.
- Place the product standing upright on a level, stable surface.
- When using the product it must always stand upright it must never be used on its side.
- Pull out the plug from the power point when the product is not in use. Do not pull the power cord to pull out the plug.
- Leave a free space of at least 30 cm round the product to ensure safe and correct functionality.
- Check that the product can oscillate without colliding with or being obstructed by anything in the near vicinity.

 
- Never poke any objects into the grille in the product. It is especially important to explain this to children to make sure they understand the risks.
- Do not use the product if the power cord or plug are damaged, if the product has tipped over, or if it is not working properly.
- A damaged cord or plug must be replaced by an authorised service centre or qualified person to ensure safe use.
- Do not use the product outdoors.
- Do not use the product near a bath, shower or swimming pool.
- Do not expose the product to direct sunlight.
- Do not use product together with an external speed controller.
- Do not use the product near flammable liquids or gas.
- Switch off the product and pull out the plug before cleaning.
- Never leave the product unattended when switched on.
- Repairs must only be carried out by an authorised service centre.
- If the product stops working properly, switch it off with the switch on the control panel and contact the retailer.

## TECHNICAL DATA

TECHNICAL DATA	
Rated voltage	230 V ~ 50 Hz
Input power	25 W
Safety class	II


## DESCRIPTION

1. Front grille
2. Rear grille
3. Motor housing
4. Keypad to control speed
5. Foot
6. Lock nut
7. Fan blade


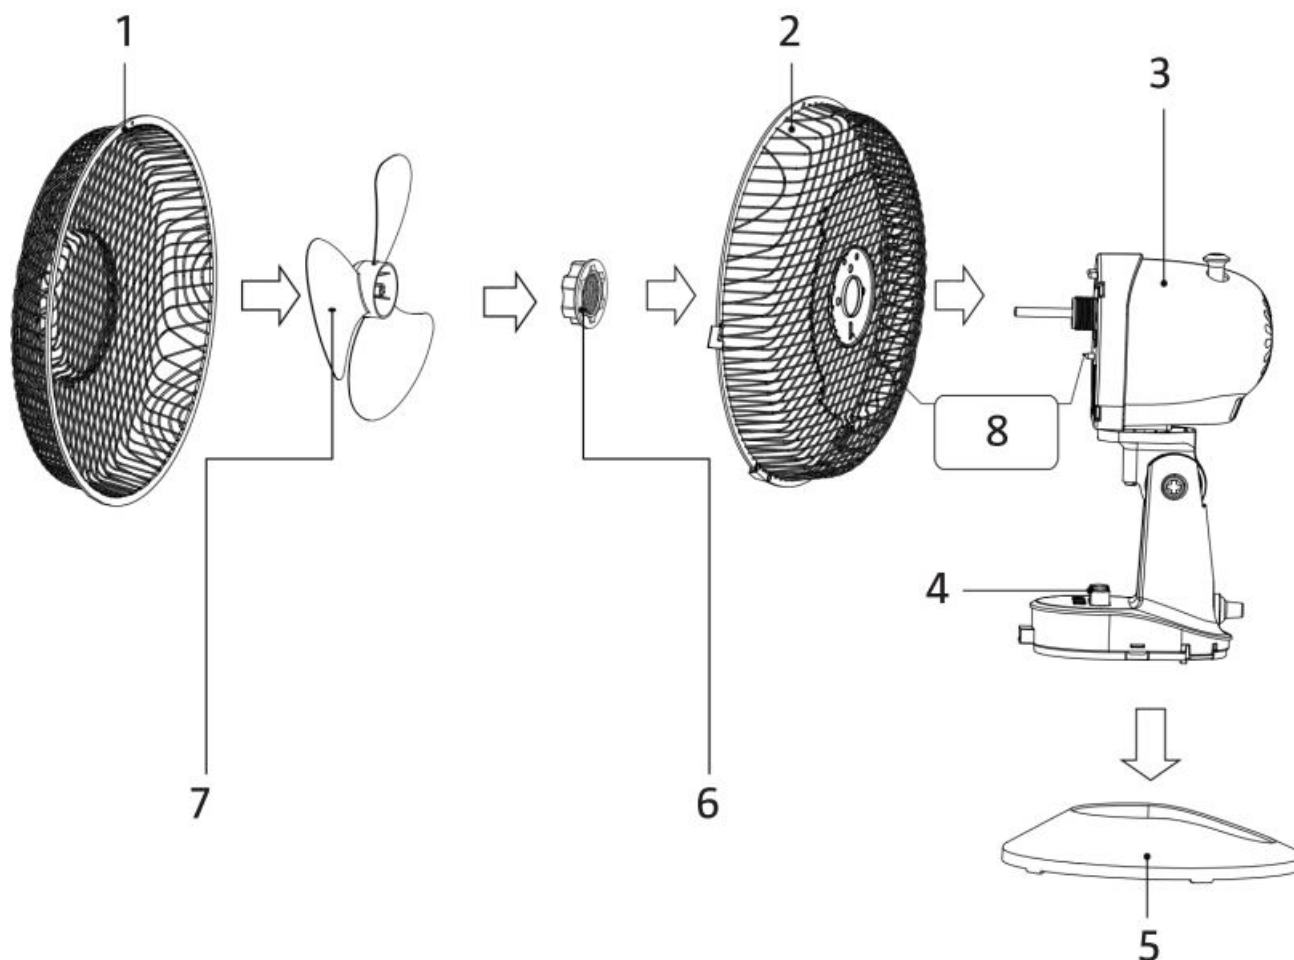


## ASSEMBLY

 1. Fasten the foot on the fan unit.
2. Unscrew the plastic nut from the front of the motor housing by turning it anticlockwise.
3. Place the rear grille against the front of the motor housing. The guide pins on the motor housing should mate in the holes in the rear grille (8).
4. Tighten the plastic nut clockwise. Do not overtighten.
5. Fit the fan rotor on the motor shaft with the slot on the back of the fan rotor over the pin in the motor shaft. Turn the fan rotor by hand after fitting to check that it rotates smoothly and easily.
6. Remove the screw and nut from the back edge of the grille.
7. Place the front grille against the back grille, so that the holes in the edges are in line.

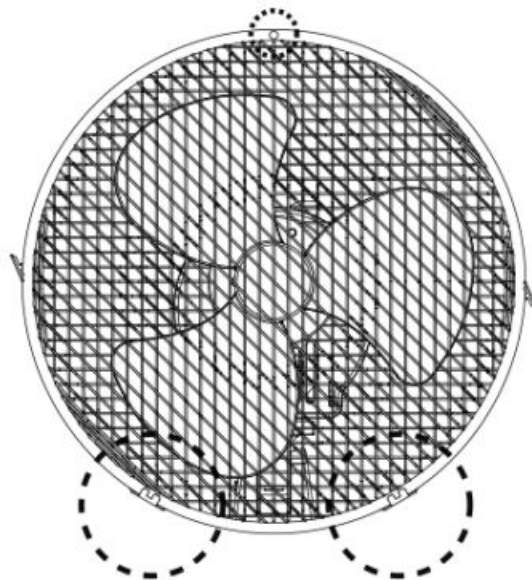

  8. Put the screw through the hole and screw on the nut. Do not tighten fully.
9. Press the grille clips in place over the edge of the grille. Tighten the nut on the screw that goes through the edge of the grille.

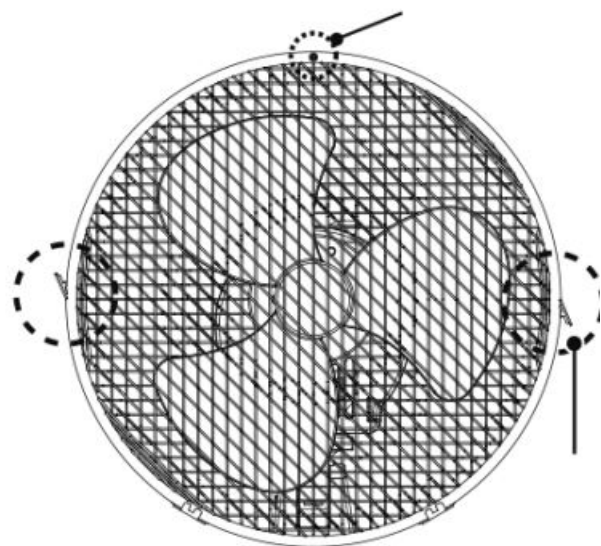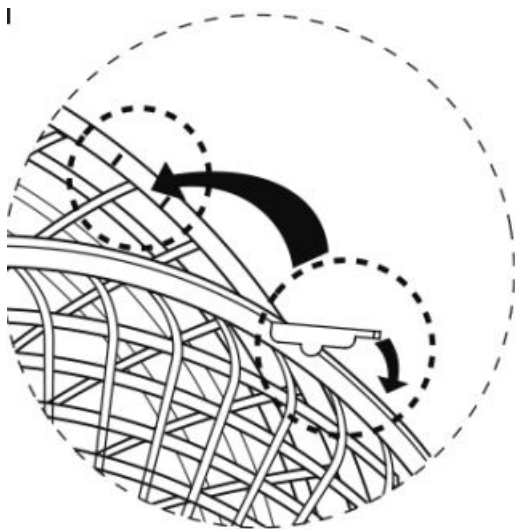

## HOW TO USE

1. Set the required speed with the power switch:
  - 0: Off
  - 7: Low speed
  - 2: High speed
2. To activate/deactivate oscillation, pull up/ press down the oscillation button.
3. Carefully press on the motor part to adjust the air flow in the vertical plane.

## MAINTENANCE

**NOTE:** Pull out the plug from the power point before installation and/or cleaning.

The fan should be cleaned once a month. Clean the fan with a soft cloth moistened with a mild detergent. Make sure that no water or other liquid gets into the fan. Do not use petrol, solvents or detergents that can damage the plastic parts.

