



anslut 016232 LED Luminaire Instruction Manual

[Home](#) » [anslut](#) » anslut 016232 LED Luminaire Instruction Manual 

Contents

- [1 anslut 016232 LED Luminaire](#)
- [2 SAFETY INSTRUCTIONS](#)
- [3 Symbols](#)
- [4 TECHNICAL DATA](#)
- [5 INSTALLATION](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)



anslut 016232 LED Luminaire



SAFETY INSTRUCTIONS

- Disconnect the power supply before installation.

- Check that the rated voltage corresponds to the mains supply voltage.
- Do not connect the product to the mains while it is still in the pack.
- Check that all electrical cables comply with the applicable regulations and that they are connected in accordance with the instructions.
- Never overload the mains. This can result in fire or a risk of electric shock.
- Keep out of the reach of children.
- Do not store the product in a very cold/ hot place to avoid damaging the electronics.
- The electronics in the product are sensitive to knocks and blows. Avoid dropping it.
- Never attempt to replace damaged electrical cables yourself.
- The light source of this luminaire is not replaceable; when the light source reaches its end of life the whole luminaire shall be replaced.
- The product is not dimmable.
- Pay attention so that no concealed wires are damaged in connection with installation.
- Be careful not to damage the insulation on the wires during installation. Make sure that the wires do not come into contact with sharp edges. Damaged insulation can result in a risk of electric shock.
- Do not look directly into the light source.
- The minimum safe distance to an illuminated object is 10 centimetres.
- Products shall be installed in environments where an accumulation of conductive dust on the luminaire may be expected. For locations wiring system should be complied with EN 60364-4-42.

WARNING!

New installations and extensions to existing installations should always be carried out by an authorised electrician. If you have the necessary experience and knowledge (otherwise contact an electrician), you can replace power switches and wall sockets, fit plugs, extension cords and light sockets. Incorrect installation can result in fatal injury and the risk of fire.

Symbols

 
 
 
 
- Approved as per applicable directives.
- Warning: Risk of electric shock.
- Class II.
- The condition to use the luminaires with limited outer surface temperature has been specified in EN 60598-2-24. The luminaire cannot be used with the light source of the voltage more than 1000V, due to the risk of combustible dust, which will not explode in the atmosphere but will accumulate on the luminaires, exists.
- Recycle discarded product as electrical waste.

 
 
 
 
 
TECHNICAL DATA

- Rated voltage 230 V ~ 50 Hz
- Output 22W
- Safety class
- Protection rating IP65
- Luminous flux 2430 lm
- Colour temperature 4000 K
- CRI CRI

- Life span 25000 h
- Off/On 20 000 times
- Energy class E
- Dimmable No
- Diffusion angle 125°
- Max number of lights connected in series 9

INSTALLATION

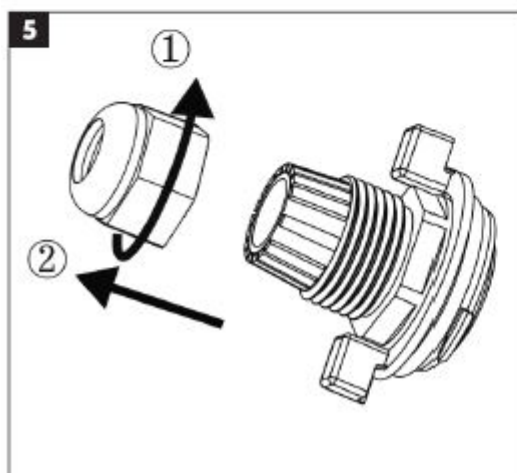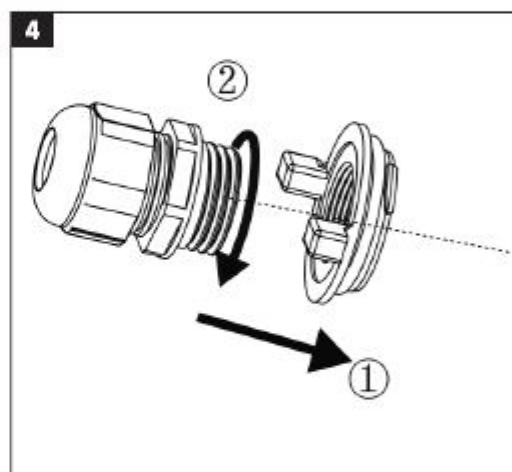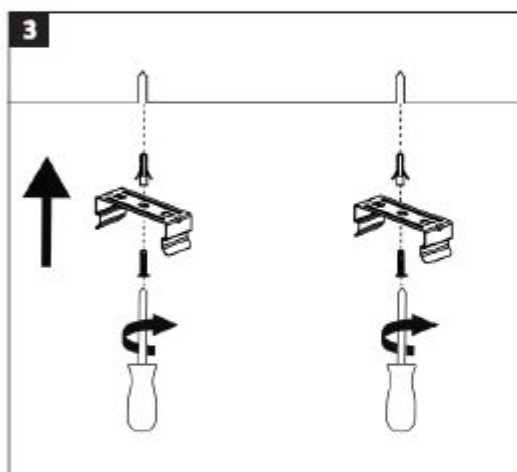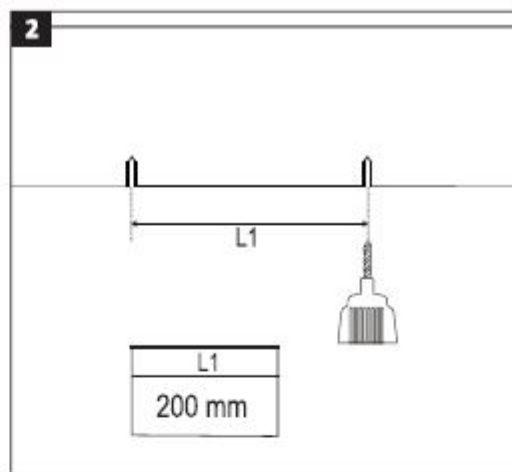

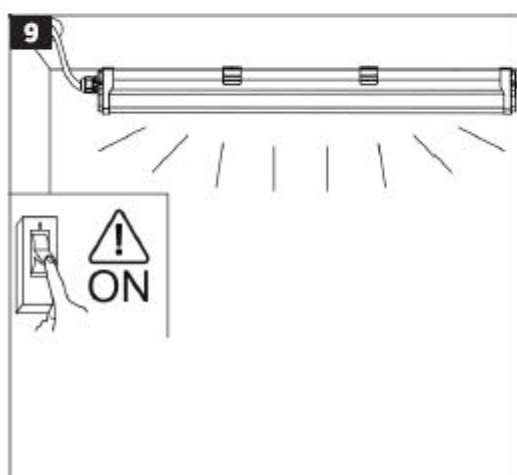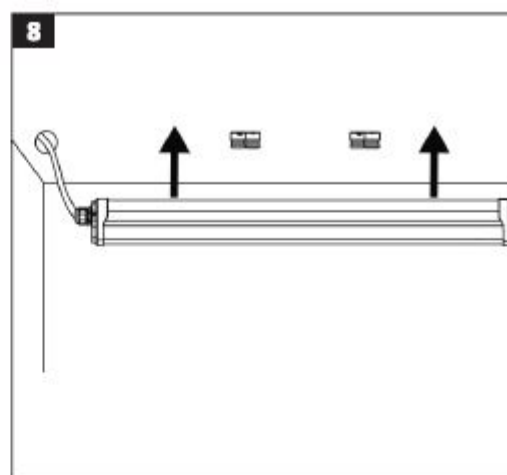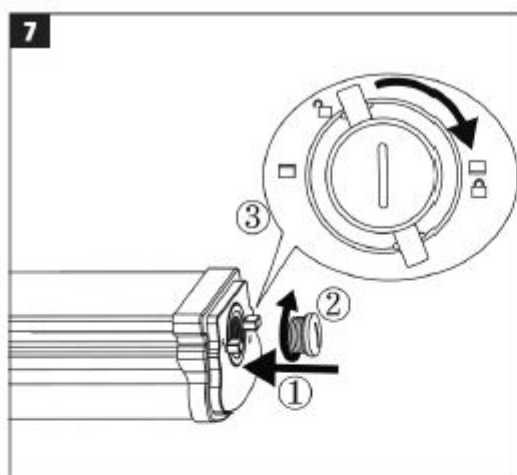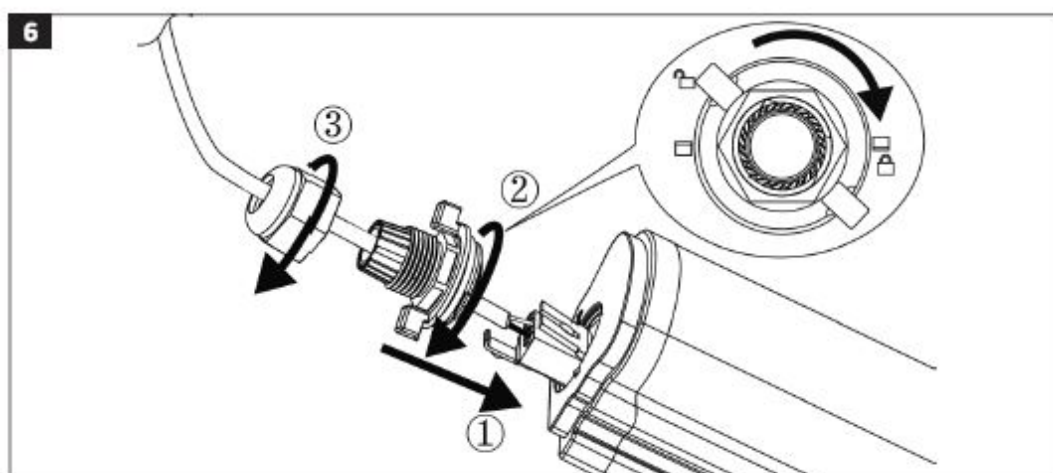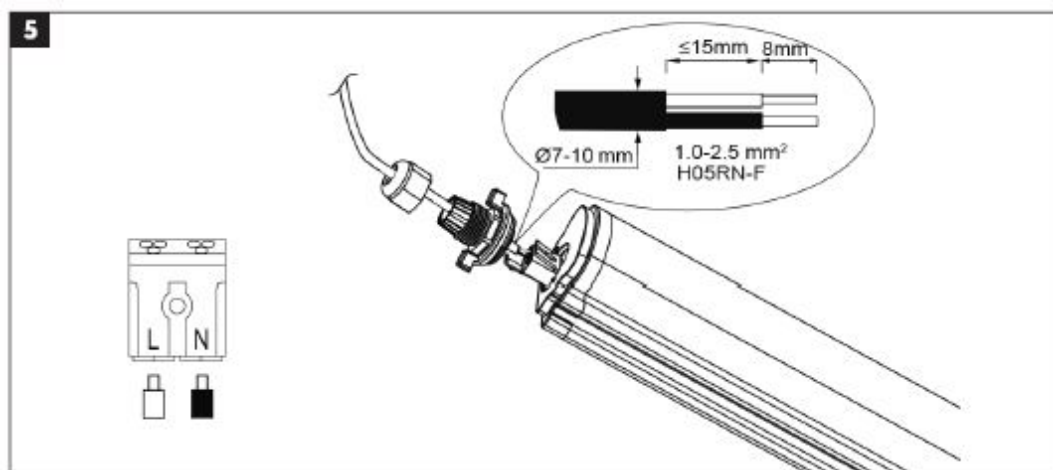






IMPORTANT

- Disconnect the power supply before installation.
- Up to nine lights can be connected in series.

Documents / Resources

	anslut 016232 LED Luminaire [pdf] Instruction Manual 016232, LED Luminaire
	anslut 016232 LED Luminaire [pdf] Instruction Manual 016232, LED Luminaire
	anslut 016232 LED Luminaire [pdf] Instruction Manual 016232, LED Luminaire
	anslut 016232 LED Luminaire [pdf] Instruction Manual 016232, LED Luminaire, 016232 LED Luminaire
	anslut 016232 LED Luminaire [pdf] Instruction Manual 016232, LED Luminaire, 016232 LED Luminaire

References

- [Jula – products for home and garden](#)