

anslut 017414 Convector Heater Instruction Manual

Home » anslut » anslut 017414 Convector Heater Instruction Manual





CONVECTOR HEATER OPERATING INSTRUCTIONS Item no. 017414





A Importan

Important! Read the user instructions carefully before use. Save them for future reference.

(Translation of the original instructions)

This product is only intended for well-insulated areas or sporadic use.

Care for the environment!


Must not be discarded with household waste! This product contains electrical or electronic components that should be recycled. Leave the product for recycling at the designated station e.g. the local authority's recycling station.


Jula reserves the right to make changes. In the event of problems, please contact our customer service. www.jula.com




For the latest version of operating instructions, see www.jula.com 2021-06-24 © Jula AB



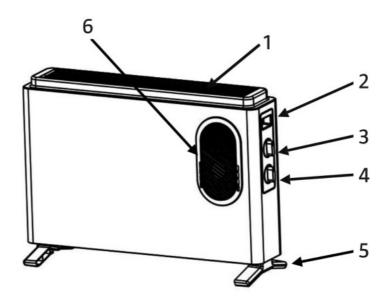

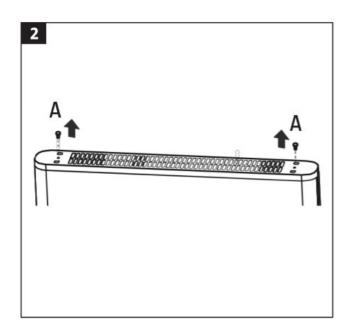

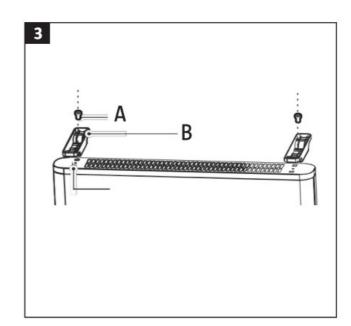

Contents

- 1 SAFETY
- INSTRUCTIONS
- **2 TECHNICAL DATA**
- **3 DESCRIPTION**
- **4 INSTALLATION**
- 5 USE
- **6 HOW TO USE**
- **7 SAFETY SYSTEM**
- **8 MAINTENANCE**
- 9 Documents / Resources
- **10 Related Posts**

SAFETY INSTRUCTIONS

- Check the product, power cord, plug, and all accessories for any damage. Do not use the product if any parts are missing or damaged. Contact the retailer.
- Do not start the product before it is fully installed according to the instructions.
- The product is only intended for extra heating in the home.
- Do not use the product near a bath, shower, or swimming pool. Make sure that the product cannot drop into the
 water, and that water cannot get into the product. Pull out the plug immediately if the product comes into
 contact with water or any other liquid.
- The product must not be controlled by a timer, separate remote control or other similar devices that start and stop the product automatically —fire risk.
- Do not use the product if the power cord or plug is damaged, if the product has been in contact with water, is not working properly, or if it is damaged in any other way.
- Take the product to an authorized service center to be checked, repaired, or adjusted.
- Never immerse the power cord or the plugin water or any other liquid the risk of electric shock. Do not touch the product, the power cord, or plug with wet hands.
- Check that the mains voltage corresponds to the rated voltage on the type plate. The product must be connected to an earthed PowerPoint with a residual current device that has a maximum tripping current of 30 mA.

- Fully unwind the power cord before use. Do not allow the power cord to come into contact with any part of the heater and keep it away from other sources of heat. Do not lay the power cord under carpets or where it can be treading on. Make sure that there is no risk of tripping over it, or it is damaged or put under strain. Do not lay the power cord around a corner, or fold or wind too tightly when the product is not in use.
- Do not use an extension cord unless it is necessary—fire risk. An extension cord must be in good condition and of an approved type, with a minimum cross-sectional area of 3 x1.5 mm2.
- Conned the product to a separate power circuit.
- Do not use the product outdoors or in areas with a floor area of less than 10 m2.
- Switch off the product before pulling out the plug. Never switch off the product by pulling out the plug.
- Do not use the product in an explosive environment, e.g. near flammable liquids, gas or dust.
- Do not place the product near or directly below a power outlet, or near a fire or other source of heat.
- Do not use the product near animals or place it near furniture, paper, curtains or other flammable materials —
 fire risk. Do not place the product closer than 1 meter to any flammable material.
- Never cover the product—fire risk. Keep the ventilation openings on the product clean to prevent overheating and the risk of fire. Do not put anything on the product or attempt to dry clothes on it.
- Make sure that air can circulate freely around the product. Do not place the product near walls or large objects, under furniture or in a cupboard, where there is poor circulation of air. The necessary free space for the exchange of air around the product is specified in the section on installation.
- Never insert foreign objects into the ventilation or outlet openings the risk of electric shock, fire, and/or material damage.
- Switch off the product before pulling out the plug. Pull out the plug when the product is not in use. Do not pull the power cord to pull out the plug.
- Switch off the product, pull out the plug, and wait until all parts have completely cooled before handling, moving, cleaning and/or maintenance.
- The product gets hot when in use. Do not touch hot parts the risk of burn injuries.
- Keep children less than 3 years old under supervision to make sure they do not play with the product.
- The product can be switched on/off by children from 3 to 8 years old only if it is mounted in the correct position to use, and if they are supervised or receive instructions concerning the safe use of the product and understand the risks involved. Do not allow children from 3 to 8 years old to use, clean or maintain the product without supervision.
- This product can be used by children from 8 years and upwards and by persons with physical, sensorial or mental disabilities, or persons who lack experience or knowledge if they are supervised or receive instructions concerning the safe use of the product and understand the risks involved. Keep children under supervision to make sure they do not play with the product. Do not allow children to use, clean or maintain the product without supervision.
- A damaged power cord or plug must be replaced by an authorized service center or other qualified personnel to ensure safe use.
- Keep the product clean. Dust, dirt, and deposits can cause overheating. Remove any impurities at regular intervals. Only use accessories recommended by the manufacturer. Any repairs should be carried out by an authorized service center or other qualified personnel.
- The product must only be used for its intended purpose and in accordance with these Instructions.
- Do not place the product directly below a power outlet.

NOTE:

Failure to follow all the instructions and safety instructions can result in a risk of fire, electric shock, personal injury, and/or material damage. The manufacturer cannot accept liability for personal injury or material damage resulting from failure to follow the instructions.

WARNING

Some parts of the product get very hot — the risk of burn injuries. Keep the product under careful supervision when it is used by, or near children or persons with functional disorders.

SYMBOLS

	Read the instructions.
	WARNING: Do not cover the heater— risk of overheating.
CE	Approved in accordance with the relevant directives.
	Recycle end-of-life products in accordance with local regulations.

TECHNICAL DATA

Rated voltage	230 V – 50 Hz
Output	2000 W
Safety class	II
Size	57 x 17 x 47 cm
Weight	2.8 k

DESCRIPTION

 Air outlet Handle Power dial 	4. Thermostat dial 5. Feet 6. Fan FIG. 1
--	--

INSTALLATION

- 1. Fit the feet under the heater before using it.
- 2. Turn the heater upside down. Unscrew the retaining screws (A).
- 3. Fit the feet (B) on the heater.
- 4. Fasten the feet with the screws.

FIG. 2

USE

BEFORE USE

- Unpack the heater and all the parts from the packaging and place them on a level surface.
- Check that the mains voltage corresponds to the rated voltage on the type plate. Plugin the plug. The heater is now ready to use.
- The first time the heater is switched on, or if it has not been used for some time, it may smell a little. This is normal and soon stops.

IMPORTANT:

- Do not place the heater near walls or corners, where the incoming or outgoing flow of air can be blocked.
- Do not place the heater directly below a PowerPoint.

HOW TO USE

- 1. Place the heater on a level, stable surface.
- 2. Plug the plug into the PowerPoint.
- 3. Turn the power dial (3) to the required model:

•	1200 W (low power + fan on)
•	2000 W (high power + fan on)
0	Off
I	1200 W (low power without fan)
II	2000 W (high power without fan)

Temperature setting

- 1. Adjust the temperature with the thermostat dial (4).
- 2. After use, turn the mode selector to 0.

Switching off

- 1. Turn the power dial to 0.
- 2. Turn the thermostat dial to 0.
- 3. Pull out the plug from the PowerPoint.

SAFETY SYSTEM

The heater has two types of safety systems:

- 1. The overheating protection switches off the heater if it gets too hot. This can occur if there is inadequate circulation of air around the heater, for example, if the heater is partially or fully covered over, is placed too near walls or other objects, or if the inlet and/or outlet openings are blocked. Set the heater in 0 modes and allow it to cool before starting it again.
- 2. The tilt guard switches off the heater if it should tip over. The heater starts again when it is put upright.

MAINTENANCE

NOTE:

Switch off the heater, pull out the plug, and allow it to cool before cleaning and/or maintenance.


CLEANING

- Wipe the outside of the heater at regular intervals with a damp cloth.
- Do not use strong or abrasive detergents, wax or polish.
- Clean the inlet and outlet grilles with a vacuum cleaner at regular intervals. Be careful not to touch or damage any internal parts when cleaning.
- No other parts of the heater require maintenance.

STORAGE

If the heater is not going to be used for some time, clean it, and put it in the original packaging if possible. Store upright in a dry, cool, and dust-free place.

Item	Symbol	Value	Unit
Heat output	,		
Nominal heat output	Pnom	2.0	kW
Minimum heat output (indicative)	Pmin	1.	kW
Maximum continuous heat output	Pmax,c	2.0	kW
Auxiliary electricity consumption			
At normal heat output	elmax	N/A	kW
At minimum heat output	elmin	N/A	kW
In standby mode	elS13	N/A	kW
Type of heat input, for electric storage local	space heaters only (select	one)	'
Manual heat charge control, with integrated thermostat			No
Manual heat charge control with room and/or outdoor temperature feedback			No
Electronic heat charge control with room and/or outdoor temperature feedback			No
Fan-assisted heat output			No
Type of heat output/room temperature contr	ol (select one)		
Single-stage heat output and no room temperature control			No
Two or more manual stages, no room temperature control			No
With mechanic thermostat room temperature control			Yes
With electronic thermostat room temperature control			No
Electronic room temperature control plus day timer			No
Electronic room temperature control plus week timer			No
Other control options (multiple selections po	ssible)		
Room temperature control, with presence detection			No
Room temperature control, with open window detection			No
With distance control option			No
With adaptive start control			No
With working time limitation			No
With black bulb sensor			No
Contact details: www.jula.com			+

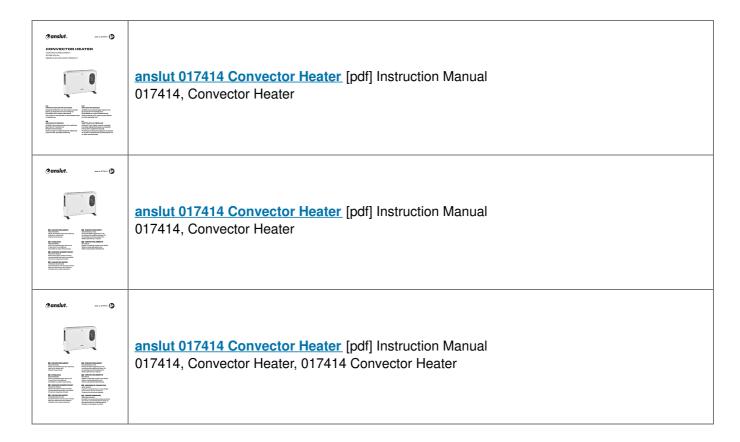

Manuals+, home priv

privacy