



anslut 017632 LED Bulkhead Light Instruction Manual

[Home](#) » [anslut](#) » anslut 017632 LED Bulkhead Light Instruction Manual 



**017632 LED Bulkhead Light
Instruction Manual**



Contents

- 1 LED BULKHEAD LIGHT
- 2 SAFETY
- INSTRUCTIONS
- 3 SYMBOLS
- 4 TECHNICAL DATA
- 5 INSTALLATION
- 6 MAINTENANCE
- 7 DISMANTLE PROCESS
- 8 Documents / Resources
- 9 Related Posts

LED BULKHEAD LIGHT

OPERATING INSTRUCTIONS

Important! Read the user instructions carefully before use. Save them for future reference. (Translation of the original instructions).

Care for the environment!

Recycle discarded products in accordance with local regulations.

Jula reserves the right to make changes. For the latest version of operating instructions, see www.jula.com

 
 


JULA AB, BOX 363, SE-532 24 SKARA

2022-06-28

© Jula AB


1

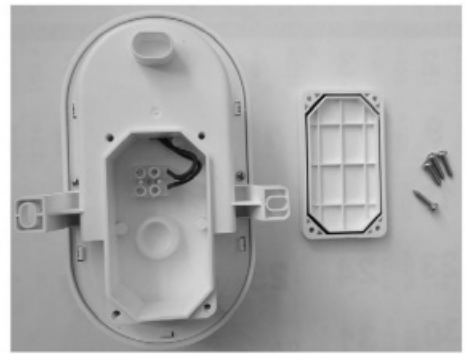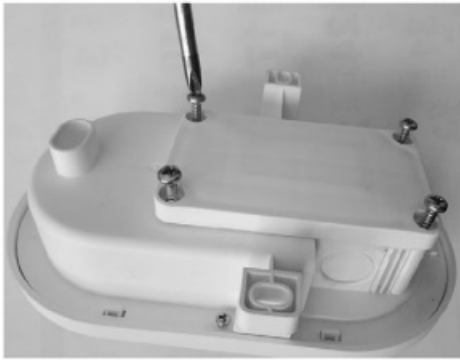


2



 3

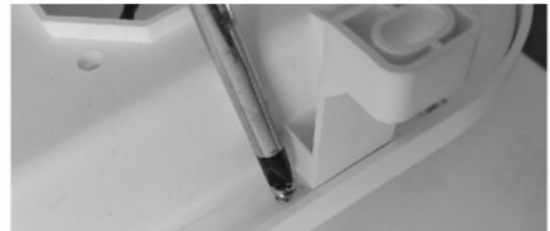

4

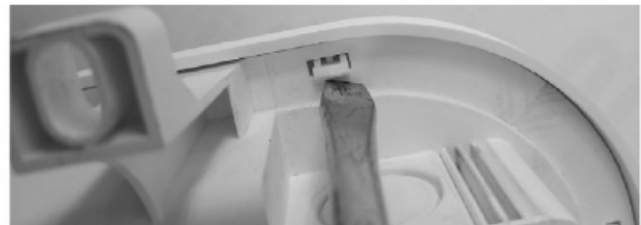 

5**6**





SAFETY INSTRUCTIONS


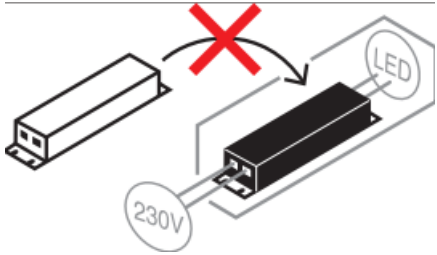
- Read these instructions carefully before installing the product. Always consult qualified personnel in doubtful cases.
- Intended for indoor and outdoor use.
- The light source is not replaceable. When the light source has reached the end of its useful life the complete light must be replaced.
- Disconnect the power supply before starting the installation.
- Check that the mains voltage corresponds to the rated voltage on the type plate.
- Always follow the electrical specifications on the product labeling.
- The product must not be covered with anything that obstructs ventilation, e.g. insulation, foil, paper, plastic, or the equivalent.
- Do not use the product if the glass cover is damaged.
- Never modify the lamp, this could result in serious material damage/personal injury, and will invalidate the warranty.
- Check that no parts of the product are missing or damaged. Supplement/replace missing/damaged parts before starting the installation.
- Keep out of the reach of children.
- Never touch the product when it is in use. Switch off the product and allow it to cool before touching it.
- Do not install the product near sources of heat.

ELECTRICAL SAFETY

New installations and extensions to existing systems should always be carried out by an authorized electrician. If you have the necessary experience and knowledge (otherwise contact an electrician), you can replace power switches and wall sockets, fit plugs, extension cords, and light sockets. Incorrect installation can result in fatal injury and the risk of fire.

SYMBOLS

	Read the instructions.
	Safety class II.
	Approved in accordance with the relevant directives.
	Recycle discarded products as electrical waste.

	Non- replacable light source.
	Non- replacable control gear.

TECHNICAL DATA

Rated voltage	230 V — 50 Hz
Output	5.5 W
Safety class	II
Protection rating	IP44
Luminous flux	600 l'm
Color temperature	3000 K
Life span	25000 h
Off/on	20 000 times
Energy class	F
Diffusion angle	120°
Power factor	0.9
CRI	>80
Ambient temperature	-20-40°C

INSTALLATION

IMPORTANT:

Switch off the power supply before installing the product.

1. Switch off the power supply.
2. Measure where the light is to be placed.
3. Drill holes.
4. Thread the supplied silicone caps on the wires.
5. Connect the wires to the correct terminals and make sure that no copper wires are exposed outside the terminals.
6. Switch on the power supply.

MAINTENANCE

Disconnect the power supply before cleaning the product.

1. Wipe the light with a dry or slightly damp cloth.
2. Wait until the light is completely dry before switching the power supply on again.

NOTE:

Do not use detergents, alcohol, solvents or the equivalent to clean.

DISMANTLE PROCESS

1. Dismantle the rear cover.

BILD 1

2. Take off the terminal.

BILD 2

3. Dismantle the 2 screws.

BILD 3

4. Take the clips off the cover.

BILD 4

5. Dismantle the cover.


BILD 5

6. Finished.

BILD 6



Documents / Resources

	<p>anslut 017632 LED Bulkhead Light [pdf] Instruction Manual 017632, LED Bulkhead Light, 017632 LED Bulkhead Light, Bulkhead Light, Light</p>
--	---