



# anslut 018971 Work Lamp LED Instruction Manual

[Home](#) » [anslut](#) » anslut 018971 Work Lamp LED Instruction Manual 

## Contents

- [1 anslut 018971 Work Lamp LED](#)
- [2 SAFETY INSTRUCTIONS](#)
- [3 TECHNICAL DATA](#)
- [4 DESCRIPTION](#)
- [5 USE](#)
- [6 MAINTENANCE](#)
  - [6.1 RECYCLING](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)



**anslut 018971 Work Lamp LED**



## SAFETY INSTRUCTIONS

- The product must be connected to an earthed power point.
- Keep power cords and extension cords away from cutting tools, sharp objects and other potential risks, such as wet floors and solvents.
- Check at regular intervals all electrical connections and power cords for damage. Rectify any faults before using the light. Always have the wiring and connections checked by an authorized electrician.
- Check that the mains voltage corresponds to the rated voltage on the type plate.
- Do not use the product in an explosive environment, e.g. near flammable liquids, gas or dust. Do not use the product near flammable materials.
- Do not look directly into the light source.
- Do not use the product if the glass front is cracked or damaged. The product must be discarded if the glass front is cracked or damaged.
- The light source is not replaceable. The entire product must be replaced if it stops working.
- The minimum distance between the product and an illuminated object is one meter.

## WARNING!

- The product gets very hot when in use – risk of burn injuries.
- Keep flammable materials away from the product.
- Make sure there is enough ventilation to prevent the product getting too hot.

## SYMBOLS

- Read the instructions.
- Approved in accordance with the relevant directives.
- Protective earthing.
- The product must be discarded if the glass front is cracked or damaged.
- Recycle discarded products in accordance with local regulations.
- The light source is not replaceable.


- Non-replacable control gear.

## TECHNICAL DATA

- Rated voltage 230 V ~ 50 Hz
- Output 20 W
- Protection rating IP65
- Luminous flux 2000 lm
- Colour temperature 4000 K
- Cord length 2.5 m

## DESCRIPTION

1. Floodlight
2. Assembly screw
3. Lock ring to adjust height **FIG. 1**

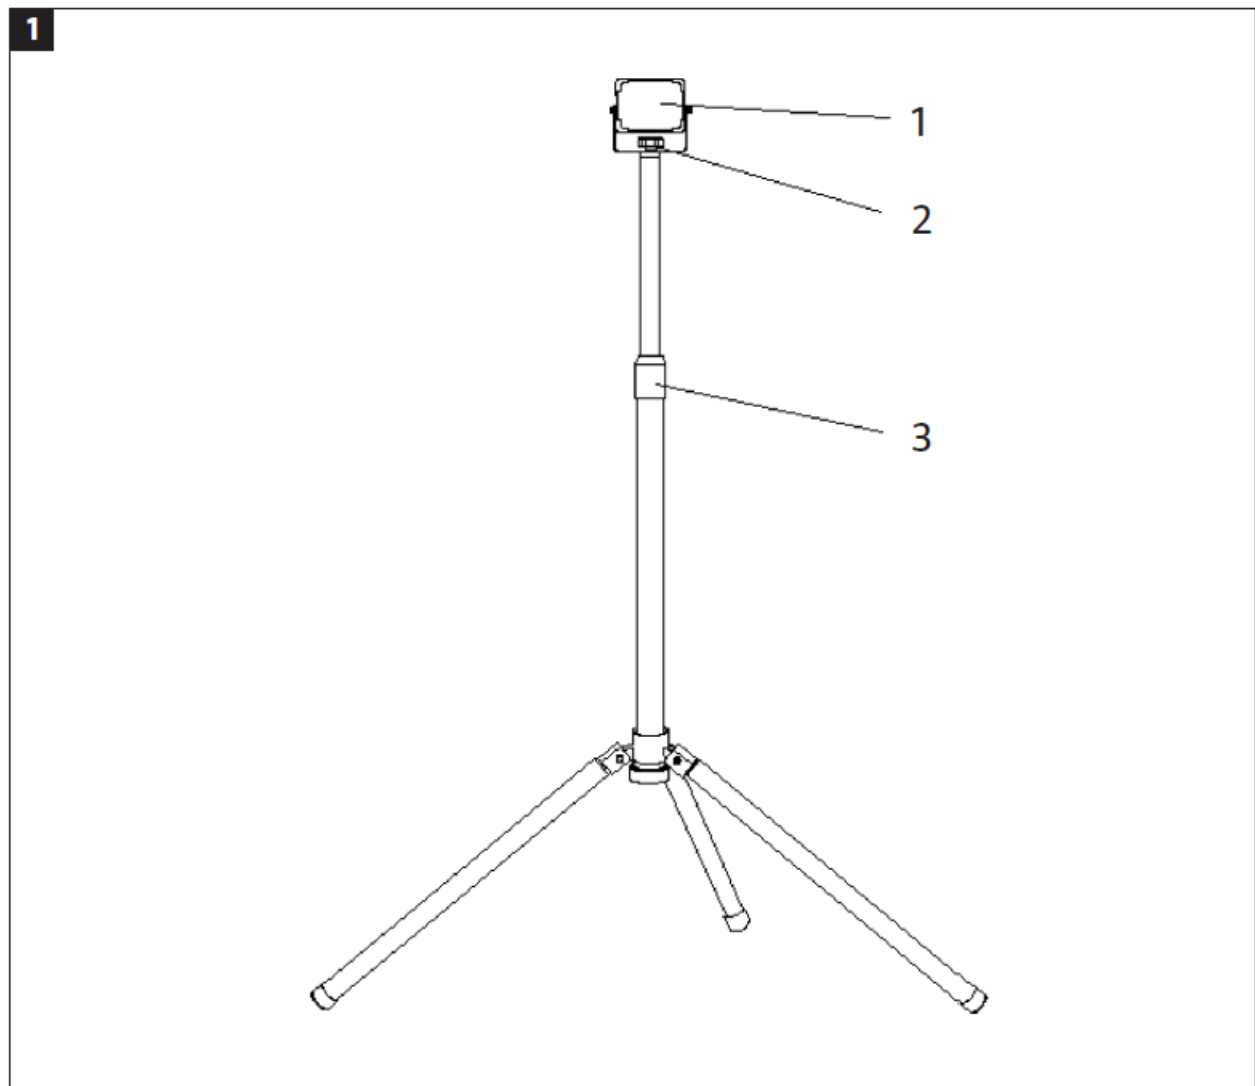

## USE

1. Fold out the stand legs.
2. Undo the lock ring and adjust to the required height on the stand.


3. Tighten the lock ring.
4. Place the work light at a safe distance from the nearest object. Align the light source in the required direction.
5. Plug the plug into a PowerPoint.

## MAINTENANCE

### RECYCLING

Recycle end-of-life products in accordance with local regulations. The light source should be removed from the lamp and recycled separately. See the description of the method below.

1. Undo the nuts and screws between the stand and floodlight by hand.
2. Cut the top corner of the floodlight housing with a hacksaw. **FIG. 2**

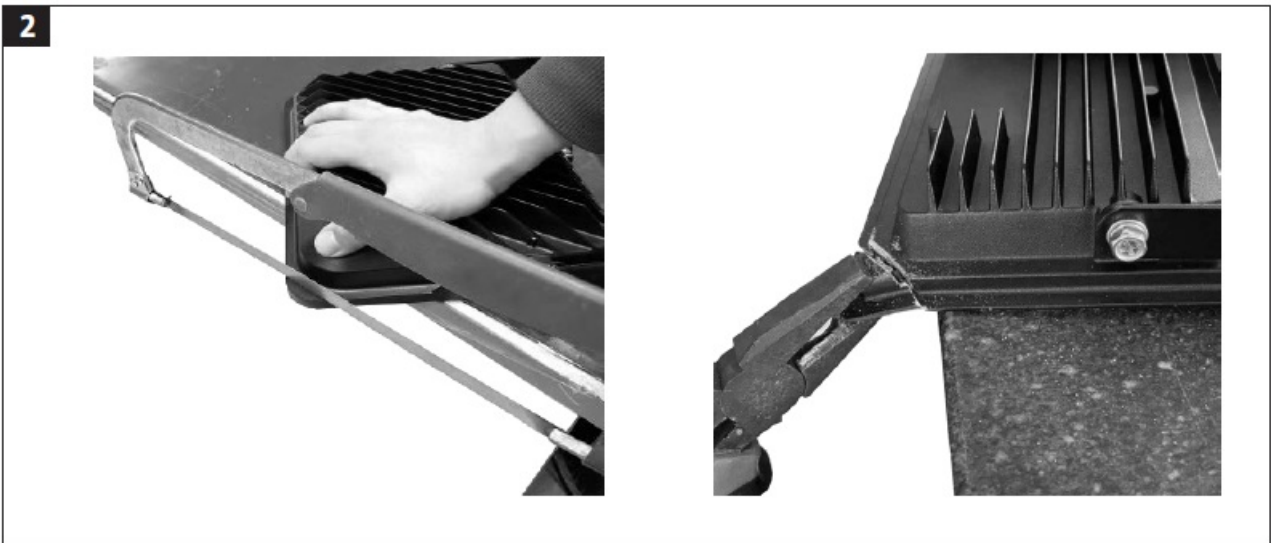

3. Insert a flat-tip screwdriver in the gap between the glass and the casing, and carefully pry both parts apart. Stick another screwdriver between the glass and the casing and carefully bend it apart. Continue along the edge round the lamp until the glass comes loose. **FIG. 3**





4. Lift off the glass to access the LED light source. **FIG. 4**



5. Remove the light source.

## Documents / Resources

	<a href="#">anslut 018971 Work Lamp LED [pdf] Instruction Manual</a> 018971, Work Lamp LED, 018971 Work Lamp LED
	<a href="#">anslut 018971 Work Lamp LED [pdf] Instruction Manual</a> 018971 Work Lamp LED, 018971, Work Lamp LED, Lamp LED, Lamp