

anslut 019449 Work Lamp LED Instruction Manual

[Home](#) » [anslut](#) » anslut 019449 Work Lamp LED Instruction Manual 





ARBETSLAMPA LED
Item no. 019449




Contents

- [1 OPERATING INSTRUCTIONS](#)
- [2 SAFETY INSTRUCTIONS](#)
- [3 SYMBOLS](#)
- [4 TECHNICAL DATA](#)
- [5 DESCRIPTION](#)
- [6 ASSEMBLY](#)
- [7 MAINTENANCE](#)
- [8 Documents / Resources](#)
- [9 Related Posts](#)

OPERATING INSTRUCTIONS



Important! Read the user instructions carefully before use. Save them for future reference. (Translation of the original instructions)

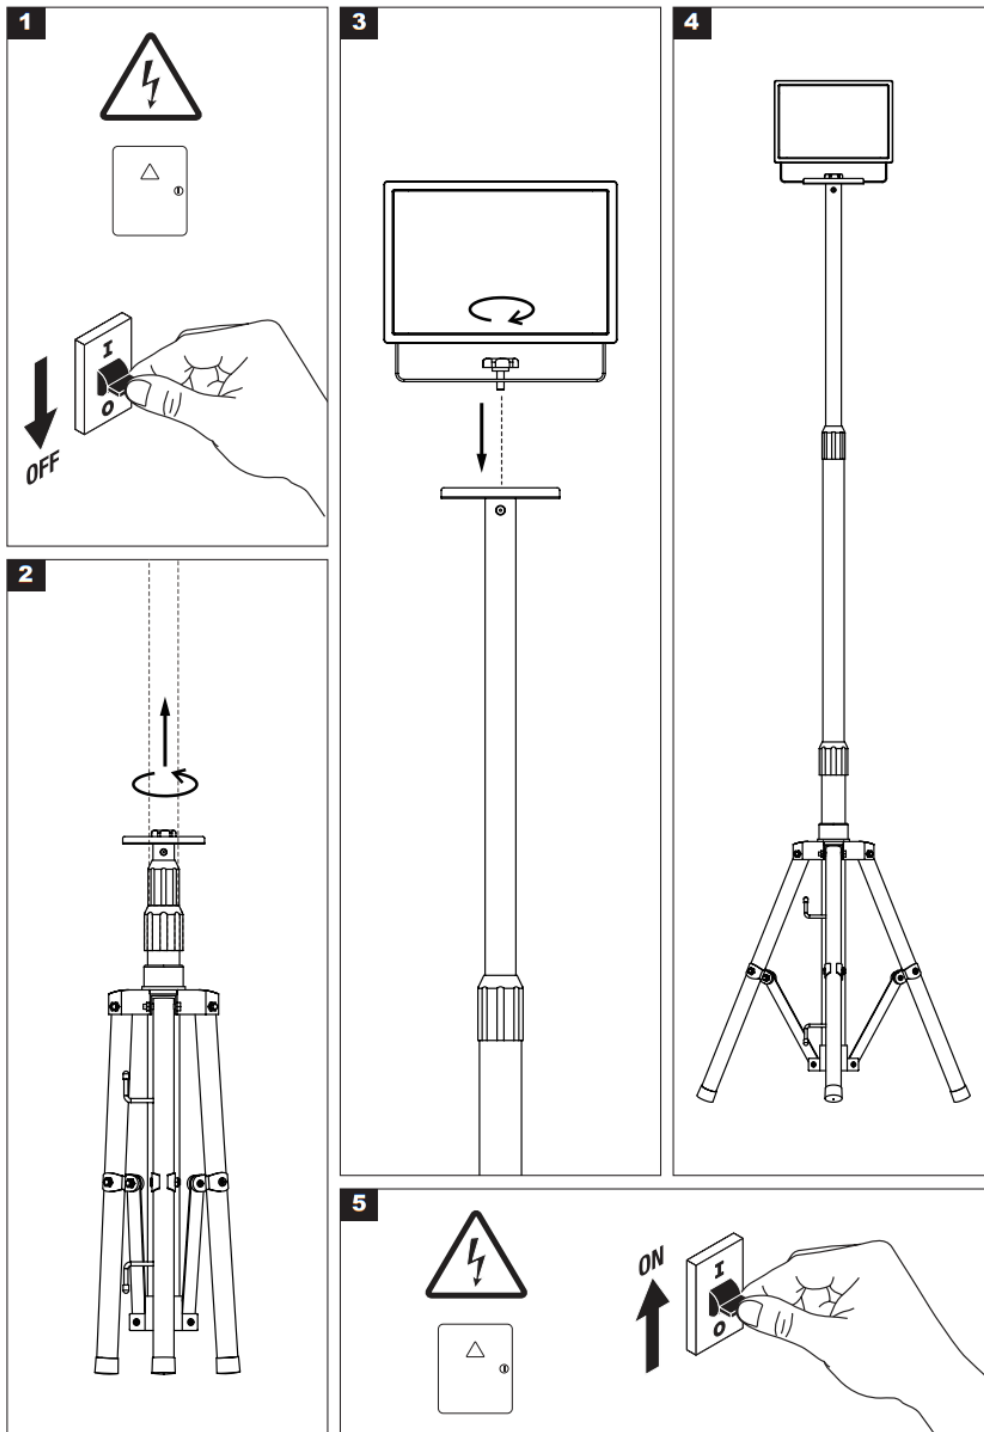



SAFETY INSTRUCTIONS








- The product must be connected to an earthed power point.
- Keep power cords and extension cords away from cutting tools, sharp objects and other potential risks, such as wet floors and solvents.
- Check at regular intervals all electrical connections and power cords for damage. Rectify any faults before using the light. Always have the wiring and connections checked by an authorised electrician.
- Check that the mains voltage corresponds to the rated voltage on the type plate.
- Do not use the product in an explosive environment, e.g. near flammable liquids, gas or dust. Do not use the product near flammable materials.
- Do not look directly into the light source.
- Do not use the product if the glass front is cracked or damaged. The product must be discarded if the glass front is cracked or damaged.

- The light source is not replaceable. The entire product must be replaced if it stops working.
- The minimum distance between the product and an illuminated object is one metre.

WARNING!

- The product gets very hot when in use – risk of burn injuries.
- Keep flammable materials away from the product.
- Make sure there is enough ventilation to prevent the product getting too hot.

SYMBOLS

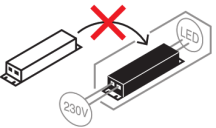	Read the instructions.
	Approved in accordance with the relevant directives.
	Protective earthing.
	The product must be discarded if the glass front is cracked or damaged.
	Recycle discarded product in accordance with local regulations.
	The light source is not replaceable.
	Non-replaceable control gear.

TECHNICAL DATA

Rated voltage	230 V ~ 50 Hz
Output	50 W
Luminous flux	4250 lm
Colour temperature	4000 K
Colour tone	Cold white
Protection rating	IP65
Cord length	3 m
Size	H170 x L81 x W81 cm

DESCRIPTION

Work lamp with a vertically adjustable telescopic stand. Angularly adjustable lamp housing made of aluminium and toughened floodlight glass with an LED light source with very bright luminous flux. The lamp is dustproof, splashproof and approved for indoor and outdoor use.

ASSEMBLY

Assemble the product as shown in the figures.

FIG. 1-5

MAINTENANCE

RECYCLING

Recycle end-of-life product in accordance with local regulations. The light source should be removed from the lamp and recycled separately. See description of method below.

1. Undo the nuts and screws between the stand and floodlight by hand.
2. Cut the top corner of the floodlight housing with a hacksaw. FIG. 6
3. Insert a flat-tip screwdriver in the gap between the glass and the casing, and carefully pry both parts apart.
Stick another screwdriver between the glass and the casing and carefully bend apart. Continue along the edge round the lamp until the glass comes loose. **FIG. 7**
4. Lift off the glass to access the LED light source. **FIG. 8**
5. Remove the light source.



Jula reserves the right to make changes.


For latest version of operating instructions, see www.jula.com

JULA AB, BOX 363, SE-532 24 SKARA

2021-12-13

© Jula AB

Documents / Resources

	<p>anslut 019449 Work Lamp LED [pdf] Instruction Manual 019449, Work Lamp LED, Lamp LED, Work Lamp, Lamp, 019449</p>
---	--