

anslut 019884 LED Floodlight Instruction Manual

Home » anslut » anslut 019884 LED Floodlight Instruction Manual



Contents

- 1 anslut 019884 LED
- **Floodlight**
- **2 SAFETY INSTRUCTIONS**
- **3 ELECTRICAL SAFETY**
- 4 SYMBOLS
- **5 TECHNICAL DATA**
- **6 INSTALLATION**
- 7 REMOVAL
- 8 Documents / Resources
- 9 Related Posts



anslut 019884 LED Floodlight



- Always switch off the power supply before installation, connection and service.
- The product must be connected to an earthed power supply on installation.
- The product can be mounted on a surface of flammable material.
- Check that the mains voltage corresponds to the rated voltage on the type plate. Incorrect connection can result in a risk of electric shock. The electrical installation should be carried out by an authorised electrician.
- Never modify the product, this could result in serious personal injury and will invalidate the warranty.
- A damaged power cord or plug must be replaced by an authorised service centre or other qualified personnel to ensure safe use.
- The product must be discarded if the glass front is cracked.
- The LED light source is not replaceable. When the light source has reached the end of its useful life the complete product must be replaced.

WARNING


- This product becomes very hot during use risk of burn injuries. Keep flammable materials away from the product.
- Ensure good ventilation to provide adequate cooling for the product.
- The minimum distance to an illuminated object is 1 meter when the product is switched on.
- The minimum distance to objects above the product is 15 cm.

ELECTRICAL SAFETY

New installations and extensions to existing systems should always be carried out by an authorised electrician. If you have the necessary experience and knowledge (otherwise contact an electrician), you can replace power switches and wall sockets, fit plugs, extension cords and light sockets. Incorrect installation can result in fatal injury and the risk of fire.

SYMBOLS

	The product must be discarded if the glass front is cracked.
1.0m	The minimum distance to an illuminated object is 1 meter when the product is s witched on.
-)	Non replaceable light source.
2301	Non replaceable actuator.

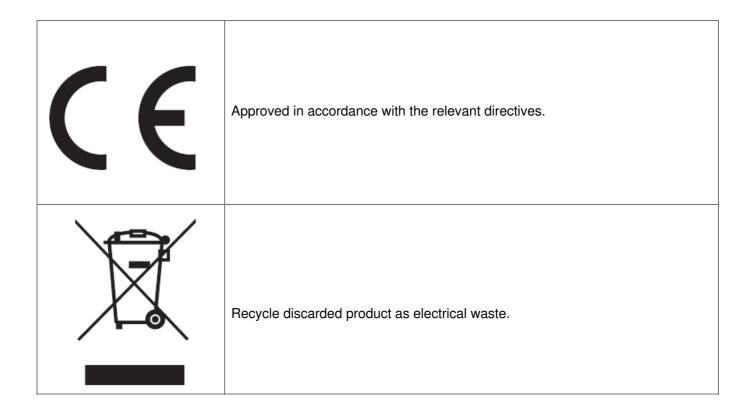

TECHNICAL DATA

Rated voltage	230 V ~ 50 Hz
Output	30 W
Protection rating	IP65
Energy class	F
Luminous flux	2550 lm
Colour temperature	4000 K
Dimmable	No
Life span	25000 h

INSTALLATION

- 1. Switch off the power supply.
- 2. Remove the cover from the lamp housing.
- 3. Use the bracket as a template to mark out the mounting holes and drill holes in these positions.
- 4. Put expander plugs in the holes. Screw on the bracket.
- 5. Fit the lamp housing on the bracket.
- 6. Connect the live wire L (brown), neutral wire N (blue) and earth wire yellow/green.
- 7. Fit the cable grommet.
- 8. Connect the power supply.

NOTE

The product is only intended to be mounted on a wall.

REMOVAL

Undo the 4 screws on the back.



Remove the glass and reflector. The glass is not glued for 10 W and 20 W.



The glass is glued on the casing for 30 W and 50 W. To remove the glass, put tape on the glass to protect it if it breaks and warm with a hair dryer to soften the glue. Carefully remove the glass with a knife. Remove the reflector.



Remove the 2 screws for the LED module. Cut the wires and remove the LED module.





Documents / Resources



anslut 019884 LED Floodlight [pdf] Instruction Manual 019884, LED Floodlight, 019884 LED Floodlight, Floodlight

Manuals+,