




anslut 019902 LED Floodlight Instruction Manual

[Home](#) » [anslut](#) » anslut 019902 LED Floodlight Instruction Manual 



LED FLOODLIGHT

Item no. 019902 



Contents

- [1 OPERATING INSTRUCTIONS](#)
- [2 SAFETY INSTRUCTIONS](#)
- [3 SYMBOLS](#)
- [4 TECHNICAL DATA](#)
- [5 INSTALLATION](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)

OPERATING INSTRUCTIONS



Important! Read the user instructions carefully before use. Save them for future reference. (Translation of the original instructions)

SAFETY INSTRUCTIONS

Read these instructions carefully before installation, and save them for future reference.

- Always switch off the power supply before installation, connection, and service.
- The product must be connected to an earthed power supply on installation.
- The product can be mounted on a surface of flammable material.
- Check that the mains voltage corresponds to the rated voltage on the type plate. Incorrect connection can result in a risk of electric shock. The electrical installation should be carried out by an authorized electrician.
- Never modify the product, this could result in serious personal injury and will invalidate the warranty.
- A damaged power cord or plug must be replaced by an authorized service center or other qualified personnel to ensure safe use.
- The product must be discarded if the glass front is cracked.
- The LED light source is not replaceable. When the light source has reached the end of its useful life the complete product must be replaced.







WARNING!

- This product becomes very hot during use – the risk of burn injuries. Keep flammable materials away from the product.
- Ensure good ventilation to provide adequate cooling for the product.
- The minimum distance to an illuminated object is 1 meter when the product is switched on.
- The minimum distance to objects above the product is 15 cm.

ELECTRICAL SAFETY

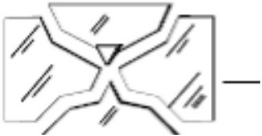New installations and extensions to existing systems should always be carried out by an authorized electrician. If you have the necessary experience and knowledge (otherwise contact an electrician), you can replace power switches and wall sockets, fit plugs, extension cords, and light sockets. Incorrect installation can result in fatal injury and the risk of fire.

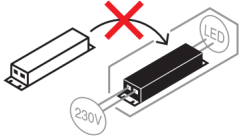SYMBOLS

	The product must be discarded if the glass front is cracked.
	The minimum distance to an illuminated object is 1 meter when the product is switched on.
	Non-replaceable light source.
	Non-replaceable actuator.
	Approved in accordance with the relevant directives.
	Recycle discarded products as electrical waste.

TECHNICAL DATA

Rated voltage	230 V ~ 50 Hz
Output	50 W
Protection rating	IP65
Energy class	F
Luminous flux	4250 lm
Color temperature	4000 K
Dimmable	No
Life span	25000 h

INSTALLATION

1. Switch off the power supply.
2. Remove the cover from the lamp housing.
3. Use the bracket as a template to mark out the mounting holes and drill holes in these positions. Put expander plugs in the holes. Screw on the bracket.
4. Fit the lamp housing on the bracket.
5. Connect the live wire L (brown), neutral wire N (blue), and earth wire (yellow/green).
6. Fit the cable grommet.
7. Connect the power supply.

NOTE:

The product is only intended to be mounted on a wall.

REMOVAL

1. Undo the 4 screws on the back.

FIG. 1

2. Remove the glass and reflector.

The glass is not glued for 10 W and 20 W.

FIG. 2

The glass is glued on the casing for 30 W and 50 W.

 
To remove the glass, put tape on the glass to protect it if it breaks and warm with a hair dryer to soften the glue. Carefully remove the glass with a knife. Remove the reflector.

FIG. 3



 
3. Remove the 2 screws for the LED module.

FIG. 4

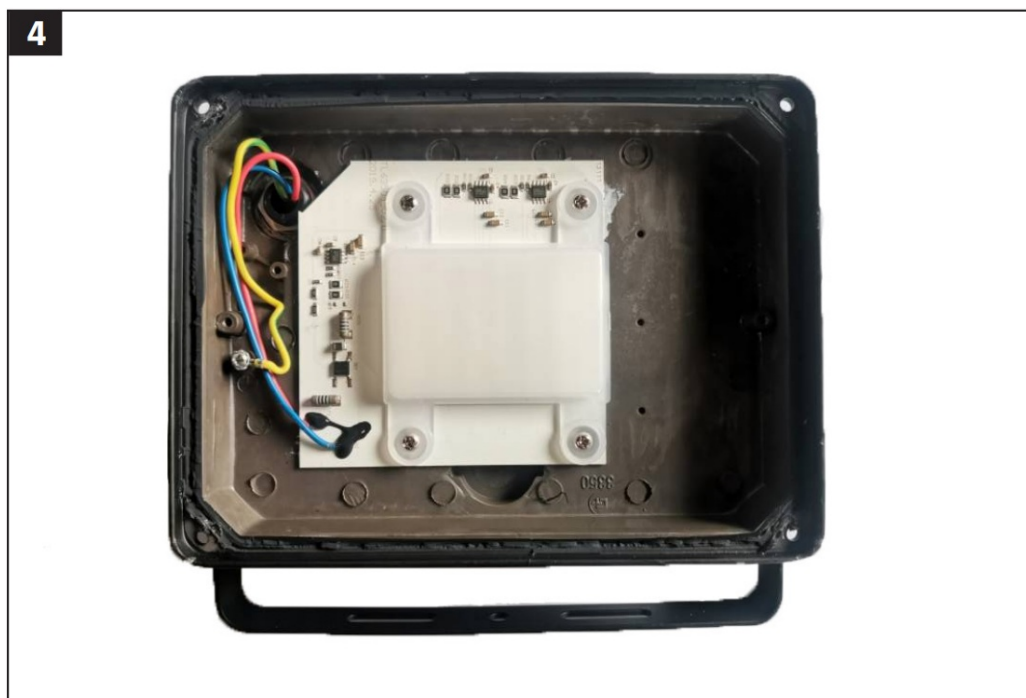

4. Cut the wires and remove the LED module.

FIG. 5

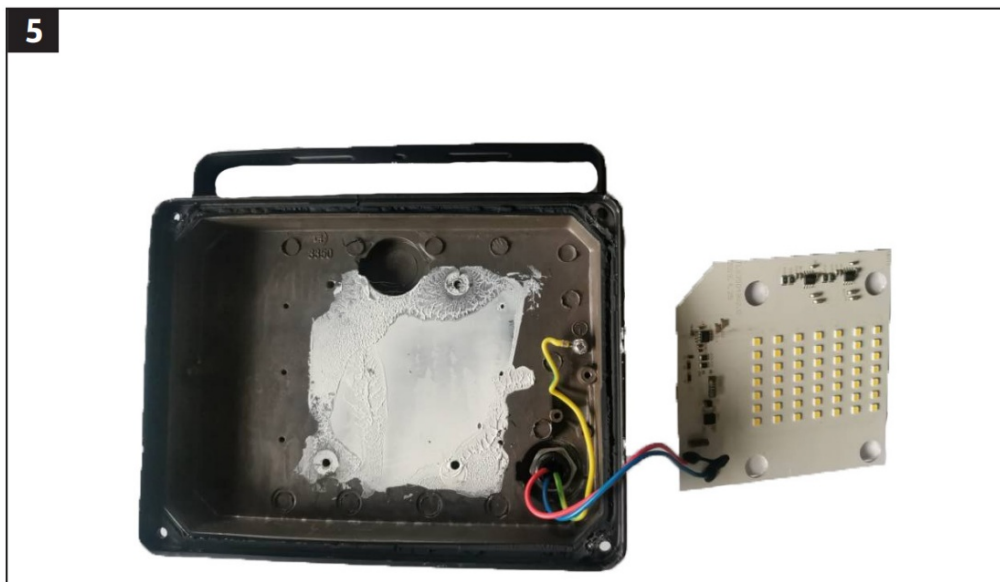

Jula reserves the right to make changes.

For the latest version of operating instructions, see www.jula.com

2022-02-23

© Jula AB

JULA AB, BOX 363, SE-532 24 SKARA

Documents / Resources



[anslut 019902 LED Floodlight](#) [pdf] Instruction Manual
019902, LED Floodlight, 019902 LED Floodlight, Floodlight