



anslut 023906 Battery Powered LED Work Lamp Instruction Manual

[Home](#) » [anslut](#) » anslut 023906 Battery Powered LED Work Lamp Instruction Manual 

Contents

- [1 anslut 023906 Battery Powered LED Work Lamp](#)
- [2 SAFETY INSTRUCTIONS](#)
- [3 SYMBOLS](#)
- [4 TECHNICAL DATA](#)
- [5 DESCRIPTION](#)
- [6 ASSEMBLY](#)
- [7 USE](#)
- [8 TROUBLESHOOTING](#)
- [9 STORAGE](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)
- [11 Related Posts](#)






anslut 023906 Battery Powered LED Work Lamp



SAFETY INSTRUCTIONS

- Batteries must not be incinerated.
- Do not look directly into the COB light – risk of damage to eyes.
- This is not a toy.
- The product contains small parts. Not suitable for children under 5 years of age.
- This product is not waterproof – do not expose it to rain or any other precipitation or liquid.

SYMBOLS

	Read the instructions.
	Approved in accordance with the relevant directives.
	Recycle discarded product in accordance with local regulations.

TECHNICAL DATA

- **Colour temperature:** 6500 K
- **Colour tone:** Cold white
- **Luminous flux:** 200 lm
- **Protection rating:** IP20
- **Length:** 13.2 cm
- **Battery type:** x3 size R03/AAA (sold separately)

- **Light source:** COB

DESCRIPTION

- This universal work light is ideal for use when working in garages, workshops and carrying out building maintenance work. It has a hook hanger and a 180 degree swivel magnetic base that allow for convenient positioning.
- Very bright COB light. Ideal for outbuildings and residential properties. The swivel magnetic base makes it easy to direct the light where it is needed. It can also be hung in multiple spaces thanks to its convenient hook.

ASSEMBLY

INSERTING/REPLACING BATTERIES

1. Open the battery compartment.
2. Remove the old batteries and insert new ones of the same type, with the correct polarity (see markings).
3. Always replace all the batteries at the same time.
4. Replace the battery cover.

USE

Press the power switch at the top to turn the product on and off.

TROUBLESHOOTING

1. Check that the battery polarity is correct.
2. If the polarity is wrong, turn each incorrectly inserted battery one at a time.

STORAGE

1. Store the product away from direct sunlight and high temperatures.
2. Remove the batteries if the product is not going to be used for some time.

Documents / Resources

anslut.
023906

anslut 023906 Battery Powered LED Work Lamp [pdf] Instruction Manual
023906, Battery Powered LED Work Lamp, 023906 Battery Powered LED Work Lamp, LED Work Lamp, Work Lamp, Lamp

- 1. INTERDEPENDENT ARREST LAMP LED
(Interdependent arrest lamp)
- 2. INTERDEPENDENT ARREST LAMP LED
(Interdependent arrest lamp)
- 3. CALLUNA ARREST LAMP LED
(Calluna arrest lamp)
- 4. BATTERY POWERED POWER LAMP LED
(Battery powered power lamp)
- 5. LED ARREST LAMP LED
(LED arrest lamp)
- 6. ARREST LAMP LED
(Arrest lamp)
- 7. LAMP OF COUNTRY & LAMP LED
(Lamp of country & lamp LED)
- 8. INTERDEPENDENT, INTERDEPENDENT
(Interdependent, interdependent)

References

- **J** Jula "products for home and garden"

