



## anslut 423927 Lamp Post Instruction Manual

[Home](#) » [anslut](#) » anslut 423927 Lamp Post Instruction Manual 

### Contents

- [1 anslut 423927 Lamp Post](#)
- [2 SAFETY INSTRUCTIONS](#)
- [3 ELECTRICAL SAFETY](#)
- [4 TECHNICAL DATA](#)
- [5 INSTALLATION](#)
- [6 MAINTENANCE](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)



## anslut 423927 Lamp Post



### SAFETY INSTRUCTIONS

**Read the operating instructions carefully before use.**

Save them for future reference.

**WARNING:** Check that the power supply is disconnected prior to installation.

- The product can not be used as street lighting.
- The bulb gets hot when it is switched on. Do not touch the bulb until it has cooled.
- Disconnect the power supply and allow the bulb to cool before changing.
- Never use bulbs with a higher output power than that specified in the technical data.
- Never use the product if the protective cover or glass is damaged or cracked. Replace defective parts as soon as possible.
- Never look directly at the light source.
- The earth wire must always be connected.
- Use wires with a cross sectional area of at least 1 mm<sup>2</sup>
- Use a 2-way switch.

### ELECTRICAL SAFETY

New installations and extensions to existing installations should always be carried out by an authorised electrician. If you have the necessary experience and knowledge (otherwise contact electrician), you may replace switches and power points, fit plugs, extension cords and light sockets. Incorrect installation can result in electric shock or fire.

### TECHNICAL DATA


- Rated voltage 230 V ~ 50 Hz
- Protection rating IP44

- Socket base 3x E27
- Max. output (light source) 60W
- Height 220 cm

## INSTALLATION

**WARNING:** Check that the power supply is disconnected prior to installation. Follow the instructions below.

Install according to steps 7-6 below.

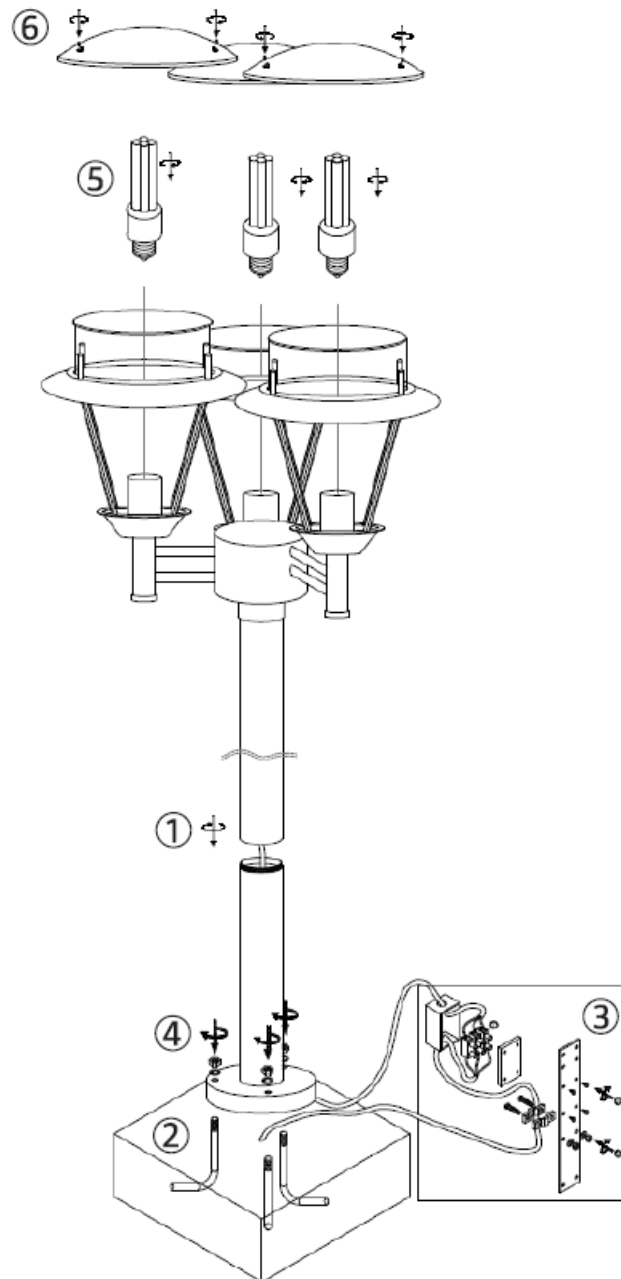

## MAINTENANCE


Treat with acid-free oil, for example, WD-40, 3-4 times per year. We do not recommend the use of stainless steel luminaires in exposed and corrosive environments.

### Changing the bulb

**IMPORTANT:** Disconnect the power supply before changing the bulb.

1. Remove the top cover.
2. Allow the bulb to cool and then screw it out carefully (do not touch the bulb with your bare hands).
3. Carefully screw in the new bulb.
4. Fit the upper cover before reconnecting the power supply.

## Documents / Resources

 The image shows the front cover of the instruction manual for the Anslut 423927 Lamp Post. It features the Anslut logo at the top left, a small image of the lamp post, and a list of contents in Swedish. The model number 423927 is printed in the top right corner.	<p><a href="#">anslut 423927 Lamp Post</a> [pdf] Instruction Manual 423927, Lamp Post, 423927 Lamp Post, Post</p>
--	---