



ANSMANN AES7 Timer Switchable Energy Saving Socket User Manual

[Home](#) » [ANSMANN](#) » ANSMANN AES7 Timer Switchable Energy Saving Socket User Manual 

Contents

- 1 ANSMANN AES7 Timer Switchable Energy Saving Socket
- 2 Product Information
- 3 Product Usage Instructions
- 4 GENERAL INFO FOREWORD
- 5 SAFETY – EXPLANATION OF NOTES
- 6 GENERAL SAFETY INSTRUCTIONS
- 7 DANGER OF FIRE AND EXPLOSION
- 8 GENERAL INFORMATION
- 9 FUNCTIONS
- 10 INITIAL USE
- 11 TECHNICAL DATA
- 12 DESCRIPTION SYMBOLS
- 13 Customer service
- 14 Documents / Resources
 - 14.1 References
- 15 Related Posts



ANSMANN AES7 Timer Switchable Energy Saving Socket



Product Information

• Specifications

- **Connection:** 230V AC / 50Hz
- **Load:** max. 3680 / 16A (inductive load 2A)
- **Accuracy:** The product complies with the requirements of the EU directives.

• General Information

- Please unpack all parts and check that everything is present and undamaged. Do not use the product if damaged. In this case, contact your local authorized specialist or the service address of the manufacturer.

• Safety – Explanation of Notes

- Please take note of the following symbols and words used in the operating instructions, on the product and the packaging:

• General Safety Instructions

- This product may be used by children from the age of 8 and by persons with reduced mobility.
- Use only an easily accessible mains socket so that the product can be quickly disconnected from the mains in the event of a fault.
- Do not use the device if it is wet. Never operate the device with wet hands.
- The product may only be used in closed, dry, and spacious rooms, away from combustible materials and liquids. Disregarding can result in burns and fires.

Product Usage Instructions

• FAQ

- **Q:** Can children use this product?
- **A:** This product may be used by children from the age of 8 and by persons with reduced mobility.
- **Q:** Can I use multiple devices at once?
- **A:** No, you should only plug in one device at a time.
- **Q:** Can I use this product in extreme weather conditions?
- **A:** No, you should never expose the product to extreme conditions, such as extreme heat/cold etc. It should not be used in the rain or in damp areas.

GENERAL INFO FOREWORD

- Please unpack all parts and check that everything is present and undamaged.
- Do not use the product if damaged.
- In this case, contact your local authorized specialist or the service address of the manufacturer.

SAFETY – EXPLANATION OF NOTES

Please take note of the following symbols and words used in the operating instructions, on the product and on the packaging:

- **Information** | Useful additional information about the product
- **Note** | The note warns you of possible damage of all kinds
- **Caution** | **Attention** – Hazard can lead to injuries
- **Warning** | **Attention** – Danger! May result in serious injury or death

GENERAL

- These operating instructions contain important information for the first use and normal operation of this product.
- Read through the complete operating instructions carefully before using the product for the first time.
- Read the operating instructions for other devices which are to be operated with this product or which are to be connected to this product.
- Keep these operating instructions for future use or future users' reference.
- Failure to follow the operating instructions and safety instructions may result in damage to the product and hazards (injuries) for the operator and other persons.
- The operating instructions refer to applicable standards and regulations of the European Union. Please also adhere to the laws and guidelines specific to your country.

GENERAL SAFETY INSTRUCTIONS

- This product may be used by children from the age of 8 and by persons with reduced physical, sensory, or mental abilities or lack of experience and knowledge if they have been instructed on the safe use of the product and are aware of the hazards.
- Children are not permitted to play with the product. Children are not permitted to carry out cleaning or care

without supervision.

- Keep the product and the packaging away from children. This product is not a toy.
- Children should be supervised to ensure that they do not play with the product or packaging.
- Do not leave the device unattended whilst operating.
- Do not expose to potentially explosive environments where there are flammable liquids, dust, or gases.
- Never submerge the product in water or other liquids.
- Use only an easily accessible mains socket so that the product can be quickly disconnected from the mains in the event of a fault.
- Do not use the device if it is wet. Never operate the device with wet hands.
- The product may only be used in closed, dry, and spacious rooms, away from combustible materials and liquids. Disregarding can result in burns and fires.

DANGER OF FIRE AND EXPLOSION

- Do not cover the product – risk of fire.
- Only plug in one device at a time.
- Never expose the product to extreme conditions, such as extreme heat/cold, etc.
- Do not use in the rain or in damp areas.

GENERAL INFORMATION

Do not throw or drop

- Do not open or modify the product! Repair work shall only be carried out by the manufacturer or by a service technician appointed by the manufacturer or by a similarly qualified person.

ENVIRONMENTAL INFORMATION DISPOSAL

- Dispose of packaging after sorting by material type. Cardboard and cardboard to the waste paper, film to the recycling collection.
- Dispose of the unusable product by legal provisions.
- The „waste bin“ symbol indicates that, in the EU, it is not permitted to dispose of electrical equipment in household waste.
- For disposal, pass the product on to a specialist disposal point for old equipment, use the return and collection systems in your area, or contact the dealer from whom you purchased the product.

LIABILITY DISCLAIMER

- The information contained within these operating instructions can be changed without prior notification.
- We accept no liability for direct, indirect, incidental, or other damage or consequential damage arising through improper handling/ use or disregard of the information contained within these operating instructions.

FUNCTIONS

- 24-hour display
- Mechanical time wheel with 96 segments
- Up to 48 programs for the on/off function
- Child safety device
- Housing with IP44 splash-proof protection

INITIAL USE






1. Turn the time wheel clockwise until the arrow mark on the right edge points to the current time.
2. Press down the little black hooks of the programming border at the points where the power is to be switched on.
3. To reset, push the hooks back up.
4. Plug the timer into a suitable socket and connect your device with a suitable IP44 „Schuko“ plug.

TECHNICAL DATA

- **Connection:** 230V AC / 50Hz
- **Load:** max. 3680 / 16A (inductive load 2A)
- **Operating temperatures:** -6 to +30°C
- **Accuracy:** ± 6 min/day

The product complies with the requirements of the EU directives. Subject to technical changes. We assume no liability for printing errors.

DESCRIPTION SYMBOLS


	Schutzklasse I Class 1 equipment
	Verwendung nur in Innenräumen Indoor use only
	Übereinstimmung mit den EU-Richtlinien Conforms to the European directive
	Elektroschrott (WEEE-Richtlinie) Waste of Electrical and Electronic Equipment (WEEE-Guideline)
	Batterieentsorgungsinformation - Nicht in den Hausmüll! Battery disposal information - Not for household waste
IP44	IP-Schutzklasse IP-Protection class

Customer service

- ANSMANN AG
- Industriestrasse 10
- 97959 Assamstadt
- Germany

- **Hotline:** +49 (0) 6294 / 4204 3400
 - **E-Mail:** hotline@ansmann.de.
 - MA-1260-0013/V1/08-2023
 - BEDIENUNGSANLEITUNG USER MANUAL AES7
-

Documents / Resources

	<p>ANSMANN AES7 Timer Switchable Energy Saving Socket [pdf] User Manual AES7 Timer Switchable Energy Saving Socket, AES7, Timer Switchable Energy Saving Socket, Switchable Energy Saving Socket, Energy Saving Socket, Saving Socket, Socket</p>
---	---

References

- [User Manual](#)