

Home » ANSMANN » ANSMANN APM1 Socket Mains Power Meter User Manual 🏗





USER MANUAL APM1



Contents [hide]

- 1 APM1 Socket Mains Power Meter
- **2 GENERAL SAFETY INSTRUCTIONS**
- 3 DANGER OF FIRE AND EXPLOSION
- 4 TECHNICAL DATA
- **5 DESCRIPTION SYMBOLS**
- 6 Documents / Resources
 - 6.1 References

APM1 Socket Mains Power Meter

⊘ GENERAL INFO / FOREWORD

Please unpack all parts and check that everything is present and undamaged. Do not use the product if damaged. In this case, contact your local authorised specialist or the service address of the manufacturer.

SAFETY - EXPLANATION OF NOTES

Please take note of the following symbols and words used in theoperating instructions, on the product and on the packaging:

- (i) = Information | Useful additional information about the product
- Ø = Note | The note warns you of possible damage of all kinds
- \triangle = **Caution** | Attention Hazard can lead to injuries
- ▲ = Warning | Attention Danger! May result in serious injury or death

⊘ GENERAL

These operating instructions contain important information for the first use and normal operation of this product.

Read through the complete operating instructions carefully before using the product for the first time. Read the operating instructions for other devices which are to be operated with this product or which are to be connected to this product. Keep these operating instructions for future use or for future users' reference. Failure to follow the operating instructions and safety instructions may result in damage to the product and hazards (injuries) for the operator and other persons.

The operating instructions refer to applicable standards and regulations of the European Union. Please also adhere to the laws and guidelines specific to your country.

▲ GENERAL SAFETY INSTRUCTIONS

This product may be used by children from the age of 8 and by persons with reduced physical, sensory or mental abilities or lack of experience and knowledge, if they have been instructed on the safe use of the product and are aware of the hazards. Children are not permitted to play with the product. Children are not permitted to carry out cleaning or care without supervision.

Keep the product and the packaging away from children.

This product is not a toy. Children should be supervised in order to ensure that they do not play with the product or packaging.

Do not leave the device unattended whilst operating.

Do not expose to potentially explosive environments where there are flammable liquids, dusts or gases.

Never submerge the product in water or other liquids.

Use only an easily accessible mains socket so that the product can be quickly disconnected from the mains in the event of a fault.

Use the product exclusively with the accessories included with it.

Do not use the device if it is wet. Never operate the device with wet hands.

The product may only be used in closed, dry and spacious rooms, away from combustible materials and liquids. Disregard can result in burns and fires.

▲ DANGER OF FIRE AND EXPLOSION

Do not use while still in the packaging.

Do not cover the product – risk of fire.

Never expose the product to extreme conditions, such as extreme heat/cold etc.

Do not use in the rain or in damp areas.

GENERAL INFORMATION

- Do not throw or drop
- Do not open or modify the product! Repair work shall only be carried out by the manufacturer or by a service technician appointed by the manufacturer or by a similarly qualified person.
- Disconnect the device from the power supply only by pulling on the plug or plug housing, never on the cable.
- Only plug in one device at a time.

The ANSMANN APM1 has a programmable consumption cost calculation.

⊘ ENVIRONMENTAL INFORMATION | DISPOSAL

Dispose of packaging after sorting by material type.

Cardboard and cardboard to the waste paper, film to the recycling collection.

Dispose of the unusable product in accordance with legal provisions. The "waste bin" symbol indicates that, in the EU, it is not permitted to dispose of electrical equipment in household waste.

For disposal, pass the product on to a specialist disposal point for old equipment, use the return and collection systems in your area or contact the dealer from whom you purchased the product.

In this way you will fulfil your legal obligations and contribute to environmental protection.

⊘ LIABILITY DISCLAIMER

The information contained within these operating instructions can be changed without prior notification.

We accept no liability for direct, indirect, incidental or other damage or consequential damage arising though improper handling/use or through disregard of the information contained within these operating instructions.

(1) PROPER INTENDED USE

This device is an energy measurement device that allows you to measure and store the electrical power of household appliances connected to the 230V mains.

(i) FUNCTIONS

- Cost calculation for the total measurement
- Energy consumption (kWh)
- Current power (W)
- Current mains voltage (V)
- Reset button
- Child safety device

1. INITIAL USE

Press the ,RESET' button with a paper clip to clear all settings.

2. SETTING THE INDIVIDUAL ELECTRICITY TARIFF

- 2.1 You can set your costs per kWh, which you can take from your electricity tariff. (max. 99.99)
- 2.2 Press the "MODE" button to enter the price mode (€).
- 2.3 Press the "SET" button. The last digit of the price entry flashes and can be set to the correct value by repeatedly pressing the "SET" button.

- 2.4 The "MODE" button confirms the entered value and jumps to the next field.
- 2.5 Once all settings have been made, wait approx. 10 seconds and the entries will be saved.
- 2.6 Press the 'RESET' button with a pointed object to clear allof the previously recorded values.

① 3. DISPLAY MODES

3.1 Mains voltage

The display "V" stands for volts and shows the current mains voltage of the socket used (max. 9999V).

3.2 Current power

The display "W" stands for watts and shows the current power draw (max. 9999W).

3.3 Energy consumption

The display "KWh" shows the summed energy consumption in KWh (max. 9999KWh).

3.4 Summed costs

The display "Total €" shows the summed costs during the measurement (max. 9999).

3.5 Costs per kWh

The display "€" shows the programmed value of the costs per KWh (max. 99.99)

① 4. RESET

Use a paper clip to press the reset button in the middle of the control panel to reset the device and delete all values.

① TECHNICAL DATA

Connection:	230 V AC / 50 Hz
Load:	max. 3680 / 16 A
Measuring category:	CAT II
Protection class:	I
IP protection class:	IP20
Power consumption at no-load:	0.300 W
Operating temperatures:	-10°C +40°C

C € The product complies with the requirements from the EU directives.
Subject to technical changes. We assume no liability for printing errors.
ANSMANN AG Industriestr. 10 D-97959 Assamstadt Germany . www.ansmann.de

DESCRIPTION SYMBOLS

(1)	Class 1 equipment
	Indoor use only
C€	Conforms to the European directive
NATE DAY DAYS DOS	UK Conformity Assessed
<u> </u>	Waste of Electrical and Electronic Equipment (WEEE-Guideline)
Ţį.	Read the operating instructions carefully before use!



Documents / Resources



ANSMANN APM1 Socket Mains Power Meter [pdf] User Manual
APM1 Socket Mains Power Meter, APM1, Socket Mains Power Meter, Mai

ns Power Meter, Power Meter, Meter

References

- User Manual
- ANSMANN
- ♠ ANSMANN, APM1, APM1 Socket Mains Power Meter, Mains Power Meter, Meter, Power meter, Socket Mains Power Meter

Leave a comment

Comment *		
Name		
Email		
Website		
Save my name, email, and website in this browser for the next time I com	nment.	
Post Comment		
Search:		
e.g. whirlpool wrf535swhz	Search	

Manuals+ | Upload | Deep Search | Privacy Policy | @manuals.plus | YouTube

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.