



ANSMANN PRO 3000R LED Torch User Manual

[Home](#) » [ANSMANN](#) » ANSMANN PRO 3000R LED Torch User Manual 

Contents

- [1 ANSMANN PRO 3000R LED Torch](#)
- [2 Product Usage Instructions](#)
- [3 SAFETY – EXPLANATION OF NOTES](#)
- [4 GENERAL SAFETY INSTRUCTIONS](#)
- [5 GENERAL INFORMATION](#)
- [6 ENVIRONMENTAL INFORMATION](#)
- [DISPOSAL](#)
- [7 PRODUCT DESCRIPTION](#)
- [8 FIRST USE](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)



ANSMANN PRO 3000R LED Torch



Specifications:

- Rechargeable battery pack: Li-Ion 3.6 V 5100 mAh | 18.36 Wh
- Charging input: 1 A | 5 V (DC)
- Charging time: 6 hours (Type-C)
- LED specifications: 3x 10 W LEDs
- Color Rendering Index (Ra): 70
- Color temperature: 6000 K
- LED lifespan: >75,000 hours
- IP rating: IP67
- Weight: 326 g
- Dimensions: 153.7 x 41 x 41 mm

Product Usage Instructions

Safety Precautions:

- Do not place the light source side down or let it fall on that side.
- Ensure all illuminated objects are at least 10 cm away from the lamp.
- Charge the product only in closed, dry, and spacious rooms away from combustible materials and liquids.
- Avoid extreme conditions like heat, cold, rain, or damp areas.

First Time Use:

- The torch has 6 modes accessed by pressing the button:
 1. Low power
 2. Medium power
 3. High power
- To activate boost mode during operation, hold down the button.
- To switch between strobe/SOS mode during operation, double-click the button.

Charging Instructions:

- When charging, LED flashes red means charging, and LED lights up red when fully charged.
- Avoid simultaneous lighting and charging as it is not possible.

FAQ:

1. Q: Can the LED cover or light source be replaced?





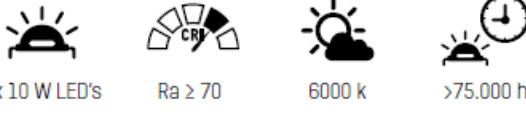









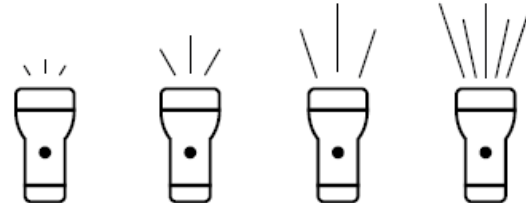


A: No, if the LED cover or light source is damaged or reached the end of its service life, the entire lamp must be replaced.

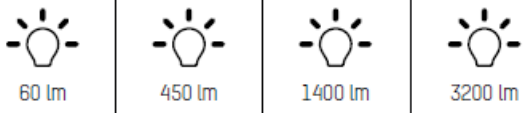2. Q: What to do in case of battery fluid contact with skin?

A: Rinse affected areas with fresh water immediately and seek medical attention.

3. Q: How to prevent overheating of built-in electronics?

A: Do not activate boost mode multiple times in succession to prevent overheating.

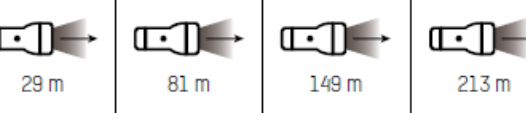				 Li-Ion 3.6 V 5100 mAh 18.36 Wh		 1 A 5 V (DC)	 6 h (Type-C)
 3x 10 W LED's Ra ≥ 70 6000 k >75.000 h				 IP67		 III	
 60 lm 450 lm 1400 lm 3200 lm				 -10° C ... 40° C		 -20° C ... 25° C	 0° C ... 45° C
 210 lx 1630 lx 5600 lx 11310 lx				 Aluminium		 326 g	 153.7 x 41 x 41 mm
 76 h 7.5 h 4.5 h							
 29 m 81 m 149 m 213 m							

SAFETY – EXPLANATION OF NOTES

Please take note of the following symbols and words used in the operating instructions, on the product and on the packaging:



= Information | Useful additional information about the product



= Note | The note warns you of possible damage of all kinds



= Caution | Attention – Hazard can lead to injuries



= Warning | Attention – Danger! May result in serious injury or death

PROPER INTENDED USE

The product serves as a mobile light source and is not intended for use in other applications. The product is intended exclusively for private, household use and is not suitable for commercial use or for household room lighting and is only for use as described in the operating instructions. Use outside that stipulated in the information is improper use and this can result in damage to property or personal injury. We accept no liability for damage caused by incorrect or improper use.

- In boost mode, the torch automatically reverts to normal brightness after a certain amount of time. This is to prevent the built-in electronics from overheating.
- Do not activate the boost mode several times in succession!



GENERAL SAFETY INSTRUCTIONS

This product may be used by children from the age of 8 and by persons with reduced physical, sensory or mental abilities or lack of experience and knowledge, if they have been instructed on the safe use of the product and are aware of the hazards. Children are not permitted to play with the product. Children are not permitted to carry out cleaning or care without supervision.

Keep the product and the packaging away from children. This product is not a toy. Children should be supervised in order to ensure that they do not play with the product or packaging.

Avoid eye injuries – Never look directly into the beam of light or shine it into other people's faces. If this occurs for too long, the blue light portion of the beam can cause retinal damage.

Never touch a device that is connected to the mains with wet hands, or if it has fallen into water. In this case, first switch off the house circuit breaker and then pull out the mains plug.

Do not expose to potentially explosive environments where there are flammable liquids, dusts or gases.

Never submerge the product in water or other liquids.

Use only an easily accessible mains socket so that the product can be quickly disconnected from the mains in the event of a fault.

All illuminated objects must be at least 10cm away from the lamp.

Use the product exclusively with the accessories included with it.

Never try to open, crush or heat a standard/rechargeable battery or set it on fire. Do not throw into a fire.



The product may only be charged in closed, dry and spacious rooms, away from combustible materials and liquids. Disregard can result in burns and fires.

Leaking battery fluid can cause irritation if it comes into contact with the skin. Immediately rinse affected areas with fresh water and then seek medical attention.

Do not short-circuit connection terminals or batteries.



DANGER OF FIRE AND EXPLOSION

Do not use while still in the packaging.

Do not cover the product – risk of fire.

Never expose the product to extreme conditions, such as extreme heat/cold etc.

Do not use in the rain or in damp areas.



GENERAL INFORMATION

- Do not throw or drop
- The LED cover cannot be replaced. If the cover is damaged, the product must be disposed of.
- The LED light source cannot be replaced. If the LED has reached the end of its service life, the complete lamp must be replaced.
- Do not open or modify the product! Repair work shall only be carried out by the manufacturer or by a service technician appointed by the manufacturer or by a similarly qualified person.
- Disconnect the device from the power supply only by pulling on the plug or plug housing, never on the cable.
- Information for the light and mains adapter as well as mains voltage on the socket must match with the type plate.
- The lamp shall not be placed face-down or allowed to topple face-down



RECHARGEABLE BATTERY PACK

The product contains a non-replaceable, rechargeable battery pack. If the rechargeable battery pack is empty, recharge it immediately.

Once fully charged, remove from the charger.

In the event of liquid leaking from the power source, remove this with protective gloves and a dry cloth.



ENVIRONMENTAL INFORMATION DISPOSAL

Dispose of packaging after sorting by material type. Cardboard and cardboard to the waste paper, film to the recycling collection.



■ Dispose of the unusable product in accordance with legal provisions. The „waste bin“ symbol indicates that, in the EU, it is not permitted to dispose of electrical equipment in household waste.

For disposal, pass the product on to a specialist disposal point for old equipment, use the return and collection systems in your area or contact the dealer from whom you purchased the product.



 
Batteries and rechargeable batteries contained in electrical appliances must be disposed of separately whenever possible.

Always dispose of used batteries & rechargeable batteries (only when discharged) in accordance with the local regulations and requirements.

Improper disposal may result in toxic ingredients being released into the environment, which may have adverse health effects on humans, animals and plants.

In this way you will fulfil your legal obligations and contribute to environmental protection.

PRODUCT DESCRIPTION

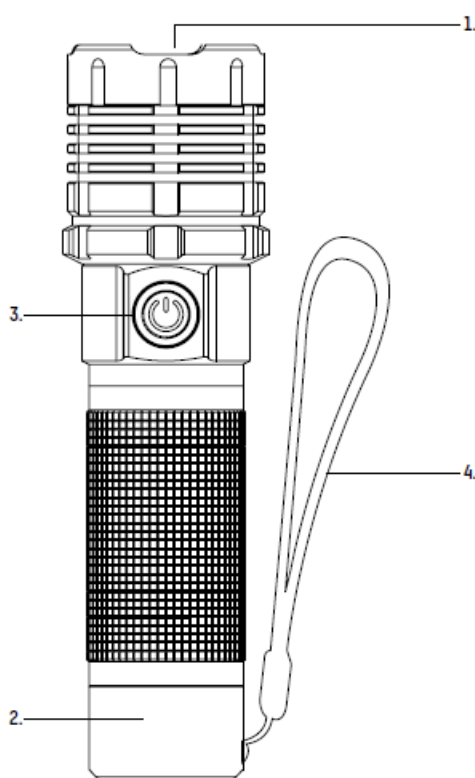

1. Main light
2. Battery compartment
3. Switch
4. Lanyard

FIRST USE

The torch has 6 modes. Pressing the button cycles through the following power levels:

1. Low power
2. Medium power
3. High power
 - During operation, holding down the button activates boost mode.
 - In addition, the strobe/SOS mode is activated/deactivated during operation by double-clicking the button.
In this mode, the button is used to switch back and forth between SOS and strobe mode.

Charge battery

- LED flashes red: charging
- LED lights up red: fully charged

Lighting and charging at the same time is not possible.



The product complies with the requirements from the EU directives.
Subject to technical changes. We assume no liability for printing errors.

Customer service:

ANSMANN AG
Industriestrasse 10
97959 Assamstadt
Germany

Support & FAQ: [ansmann.de](https://www.ansmann.de)

E-Mail: hotline@ansmann.de

Hotline: +49 (0) 6294 / 4204 3400

MA-1600-0445/V1/06-2022

Documents / Resources



[ANSMANN PRO 3000R LED Torch](#) [pdf] User Manual
PRO 3000R LED Torch, PRO 3000R, LED Torch, Torch

References

- [^ ANSMANN AG - We bring products to life](#)
- [User Manual](#)

Manuals+. Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.