


ANTMINER T21 Bitcoin Miner



ANTMINER T21 Bitcoin Miner Installation Guide

[Home](#) » [ANTMINER](#) » ANTMINER T21 Bitcoin Miner Installation Guide 

Contents

- [1 ANTMINER T21 Bitcoin Miner](#)
- [2 Product Information](#)
- [3 Specification](#)
- [4 Working Mode](#)
- [5 Performance Curve](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)



ANTMINER T21 Bitcoin Miner



Product Information

Specifications

- **Model:** T21
- **Version:** L1-10
- **Crypto algorithm/coins:** SHA256/BTC
- **Typical hashrate:** 190 TH/s
- **Power on wall @25:** 3610 Watt
- **Power efficiency on wall @25:** 19.0 J/TH

Frequently Asked Questions

- **Q:** What is the typical hashrate of the T21 model?
 - **A:** The typical hashrate of the T21 model is 190 TH/s.
- **Q:** What are the operating temperature limits for the T21?
 - **A:** The T21 has an operation temperature range of 0~45°C.

Specification

Product Glance	Value
Model	T21
Version	L1-10
Crypto algorithm/coins	SHA256/BTC
Typical hashrate, TH/s(1-1)	190
Power on wall @25°C ⁽¹⁻²⁾ , Watt(1-1)	3610
Power efficiency on wall @25°C, J/TH(1-1)	19.0

Detailed Characteristics

Detailed Characteristics	Value
Power supply	
Power supply AC input voltage range, V(2-1)	380~415V AC
Power supply AC input frequency range, Hz	50~60
Power supply AC input current, A(2-2)	12
Adapted AC output power requirement, W(2-3)	6000
Hardware configuration	
Networking connection mode	RJ45 Ethernet 10/100M
Server size (Length*Width*Height, w/o package), mm	400*212*290
Server size (Length*Width*Height, with package), mm	570*316*430
Net weight, kg	17.0
Gross weight, kg	19.1
Noise, dBA @25°C (2-4)	76
Environment requirements	
Operation temperature, °C	0~45
Storage temperature, °C	-20~70
Operation humidity, RH	10%~90%
Operation altitude, m (2-5)	≤2000

Notes

1. The Hashrate value, Power on wall, and Power efficiency on wall are all typical value. The actual Hashrate value fluctuates by $\pm 3\%$, and the actual Power on wall and Power efficiency on wall fluctuate by $\pm 5\%$.
2. Inlet air temperature.
3. **Caution:** Wrong input voltage may cause server damage.

4. Three-phase AC input, 10 A per wire.
5. **Caution:** It is strongly recommended that the power on wall of the miner does not exceed this value.
6. **Max condition:** Fan is under max RPM (rotation per minute).
7. When the miner is used at an altitude from 900m to 2000m, the highest operating temperature decreases by 1°C for every increase of 300m.

Working Mode


Working mode	NEM(3-1)	HEM(3-2)		
Operation temperature, °C	0~35	0~30	30~40	40~45
Hashrate, TH/s	190	233	214	190
Power on wall, Watt	3610	5126	4708	4180
Power efficiency on wall, J/TH	19.0	22.0	22.0	22.0

Notes


1. **NEM:** Normal Energy Mode
2. **HEM:** High Energy Mode

Performance Curve

Hashrate vs. Ambient Temperature

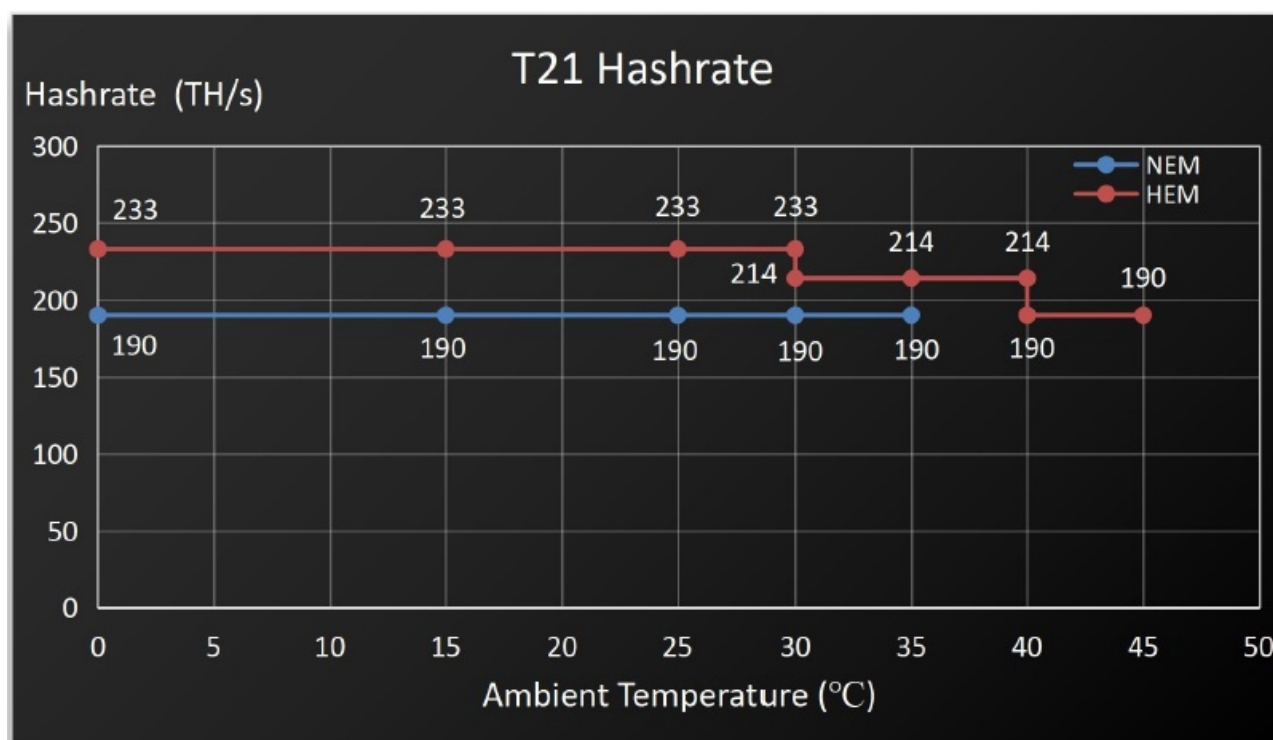

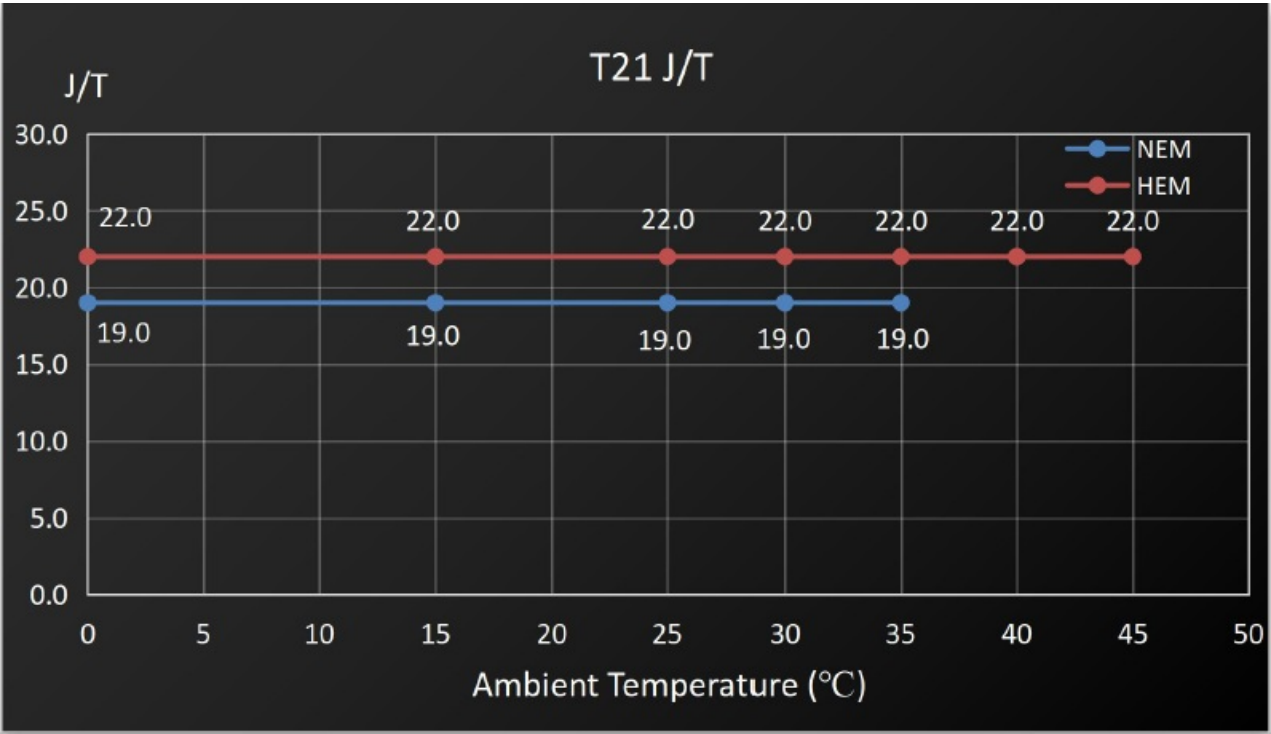

J/T vs. Ambient Temperature



BITAMIN TECHNOLOGIES INC.

www.bitmain.com

Documents / Resources

 T21 Product Manual 	ANTMINER T21 Bitcoin Miner [pdf] Installation Guide T21 Bitcoin Miner, T21, Bitcoin Miner, Miner
--	---

References

-  [BITMAIN](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.