



# ANVIZ FACEDEEP 3 IRT Touchless Facial Recognition Access Control Instructions

[Home](#) » [ANVIZ](#) » ANVIZ FACEDEEP 3 IRT Touchless Facial Recognition Access Control Instructions 



## CAUTION

### Contents

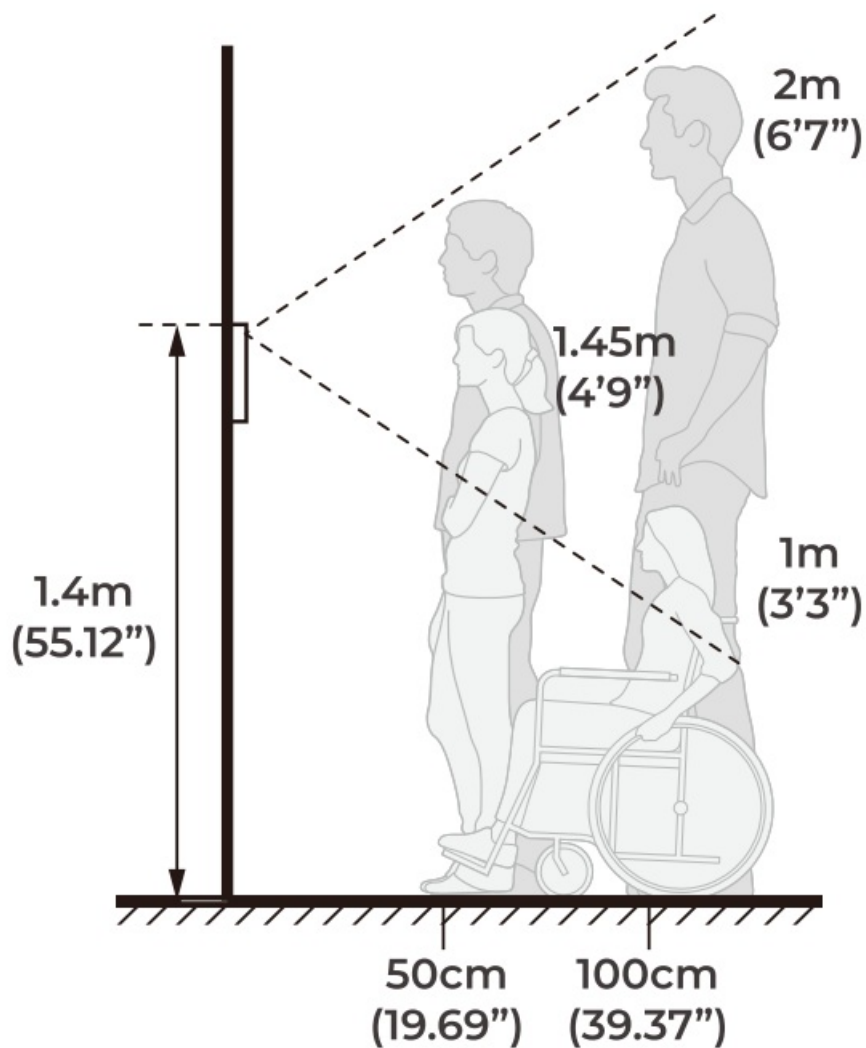
- [1 Temperature Measurement](#)
- [2 Installation](#)
- [3 Documents / Resources](#)
- [4 Related Posts](#)

## Temperature Measurement

1. Warm up the device for at least 20 minutes after power-on to enable the device to reach thermal equilibrium.
2. Maintain an ambient temperature at between 15°C to 32°C (59°F to 89.6°F). Recommend to enable the "Low Temp. Access" option if the ambient temperature is below 15°C (59°F).

## Installation

1. Please install the device at the best height of approximately 1.4 meters (55.12 inches) from the top of the device to the ground.
2. Avoid backlight and direct sunlight.

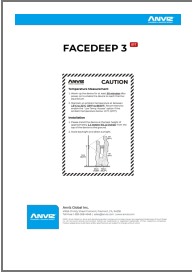
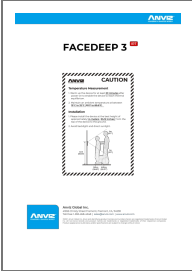


#### Anviz Global Inc.

41656 Christy Street Fremont, Fremont, CA, 94538 Toll-free: 1-855-268-4948 | [sales@anviz.com](mailto:sales@anviz.com) | [www.anviz.com](http://www.anviz.com)

©2021 Anviz Global Inc. Anviz and identifying product names and numbers herein are registered trademarks of Anviz Global Inc. All non-Anviz brands and product names are trademarks or registered trademarks of their respective companies. Product appearance, build status, and/or specifications are subject to change without notice.

#### Documents / Resources

	<p><a href="#">ANVIZ FACEDEEP 3 IRT Touchless Facial Recognition Access Control</a> [pdf] Instructions FACEDEEP 3 IRT, Touchless Facial Recognition Access Control, FACEDEEP 3 IRT Touchless Facial Recognition Access Control, Recognition Access Control</p>
	<p><a href="#">ANVIZ FACEDEEP 3 IRT Touchless Facial Recognition Access Control</a> [pdf] Instructions FACEDEEP 3 IRT, Touchless Facial Recognition Access Control, FACEDEEP 3 IRT Touchless Facial Recognition Access Control, Access Control</p>