



 
ANVIZ FaceDeep 3 Smart Face Recognition System User Guide

[Home](#) » [ANVIZ](#) » ANVIZ FaceDeep 3 Smart Face Recognition System User Guide 



FaceDeep 3 Smart Face Recognition System
User Guide
POWERING A SMARTER WORLD
FaceDeep 3 & FaceDeep 3 IRT
Smart Face Recognition System Quick Guide V1.0



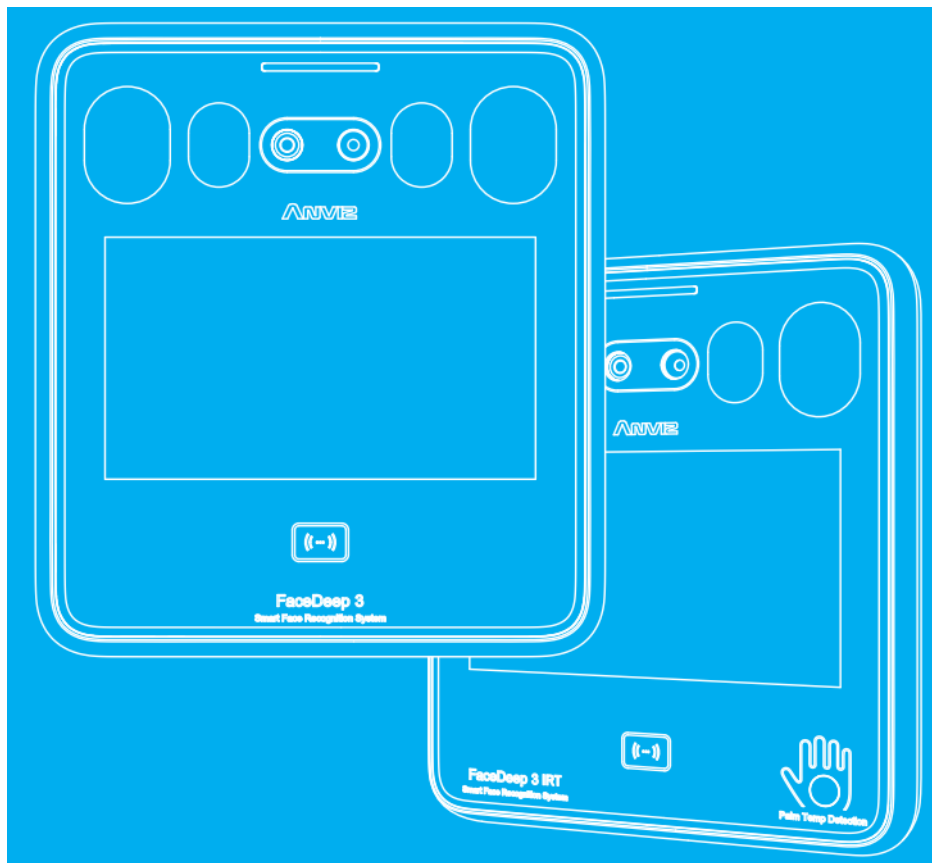

Anviz brand and product are trademarked and protected under the law of the United States. Unauthorized use is prohibited. For more information visit www.anviz.com or email marketing@anviz.com for further help. ©2021 Anviz Global Inc. All Rights Reserved.

 
Notice

- Do not use oily water or sharp objects to stain or damage the display screen.
- Fragile parts are used in the equipment, so please avoid operations such as falling, crashing, bending, or heavily pressing.
- The normal working environment of the display screen and key parts of this equipment is the indoor environment. Beyond this temperature range, the equipment will be less effective with reduced functionality and performance.
Operating temperature: -10~50(14°F ~ 122°F), Operating humidity: 20-90%.
- Please gently wipe the screen and panel with the material of soft cloth.
- Avoid scrubbing with water or detergent. The Face Deep terminal recommended power is DC 12V ~ 2A; When arranging the wires, if the 12V power supply cable is in long-distance, resulting in large resistance, then the insufficient voltage (11V), The device will be repeated restart, system crash and so on.
- When the ambient light change to dark, the Face Deep 3 has filling light itself.


Contents

- 1 Parts List
- 2 Appearance Description
- 3 Installation
- 4 Height
- 5 Steps
- 6 Access Control Power Supply
- 7 Wiring Connection
- 8 Quick Guide General Settings
- 9 Communication Settings
- 10 User Enrollment
- 11 How to Setup Temperature
- 12 Matching Precision Settings
- 13 FAQ
- 14 Documents / Resources
 - 14.1 References
- 15 Related Posts

Parts List

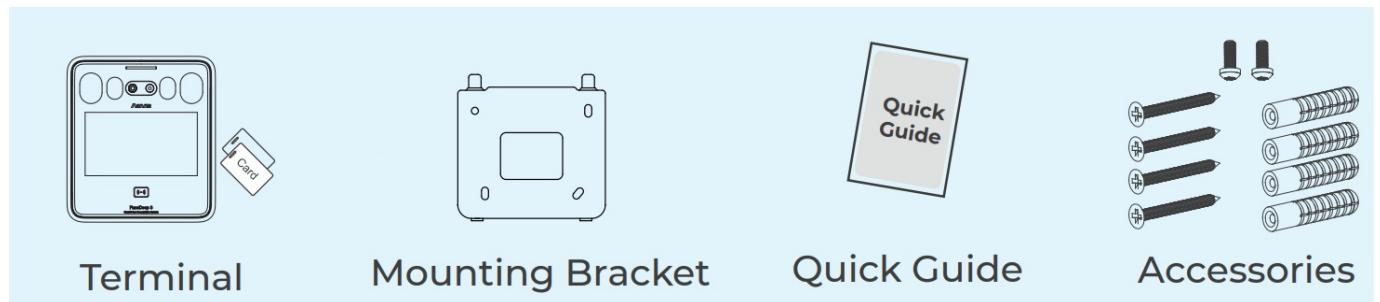

Appearance Description

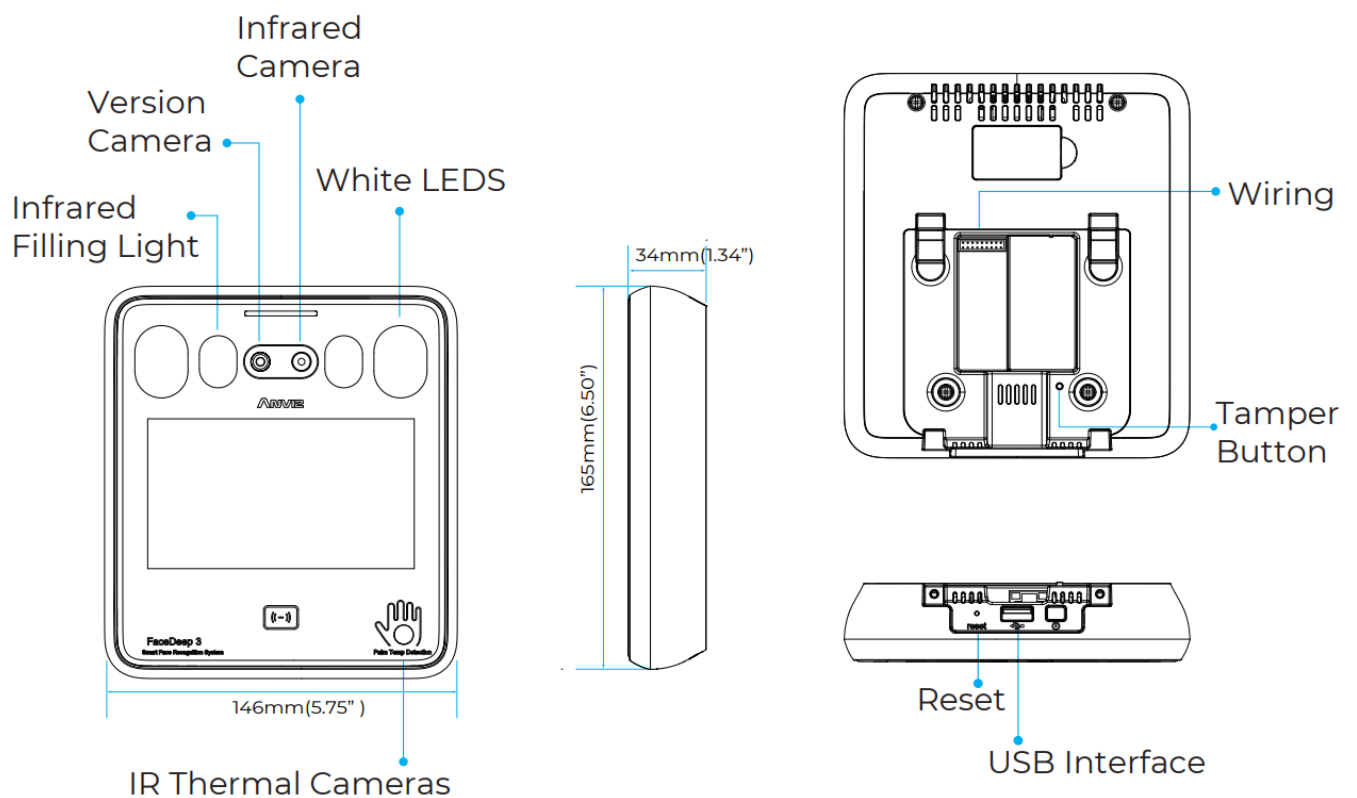 

Installation

The Sunlight and Hard Light may lead to big differences between site image and registered image; backlight, side-light and strong light will influence the recognition experience. (Analysis: from the view of human eyes, the color changes on face skin may result in wrong recognition of identity; unclear exposure area, no matter large or small, may influence the identity judgment.)



Side Light



Strong Light



Back Light

The device shall be installed in places avoiding backlight, side-light, and strong light.



The recommended place for Installation (Please keep 3m away from the window, or does not influenced by sunlight, can be considered for installation)



Backlight, side-light or direct strong light, not suitable for installation.



Other areas, install in suitable places according to actual light impact.



Hard Light



Curtain



Door

 


Wall




Glass Window or Glass Wall



Sunlight Shines Indoor

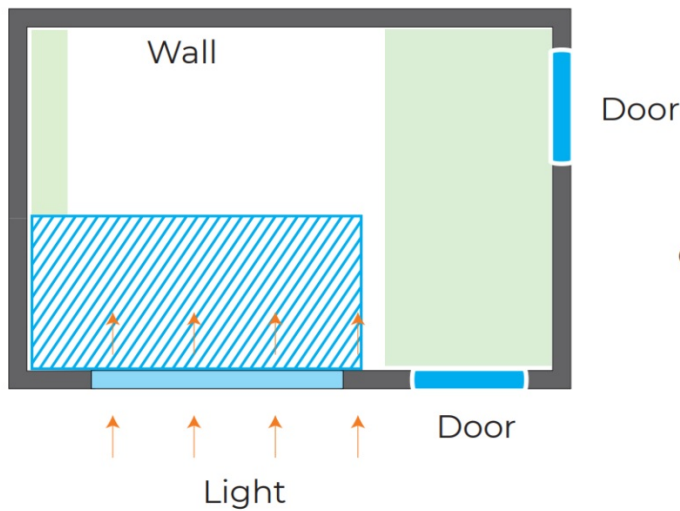

Glass Window


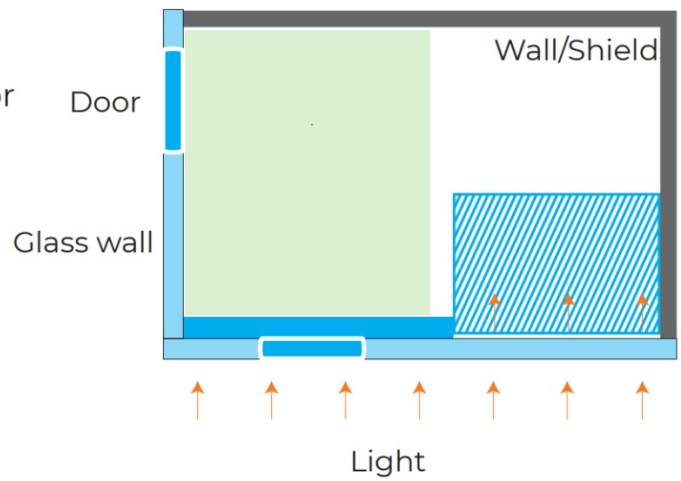 


  Sunlight Shines Through the Door, with Glass Window at One Side
Light Sunlight Shines Through the Door

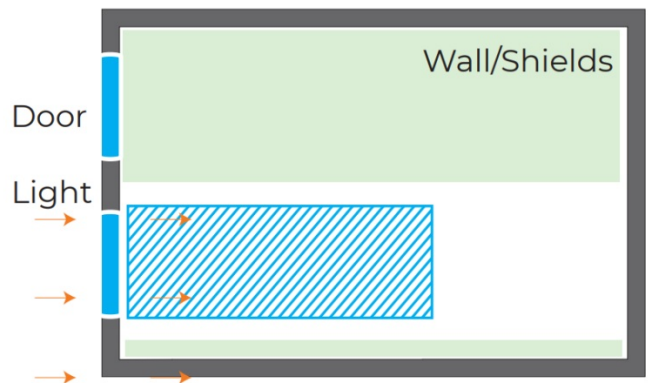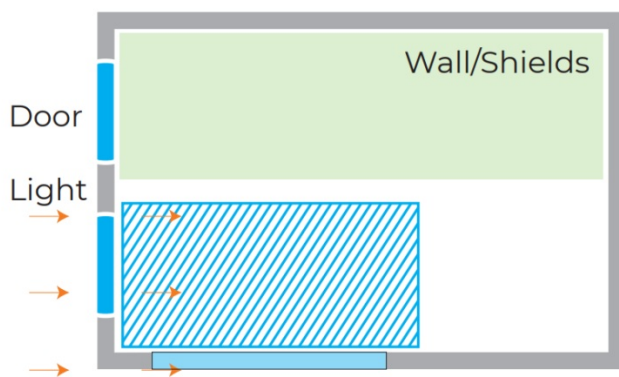

Height

  
Recommend hovering your hand at as close a distance as possible from the device, you will receive a more accurate temperature record.

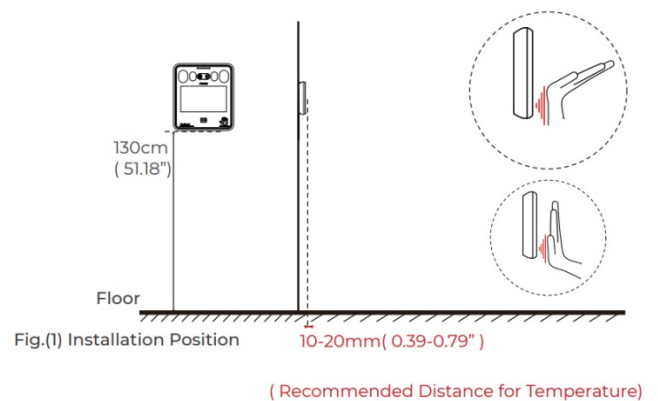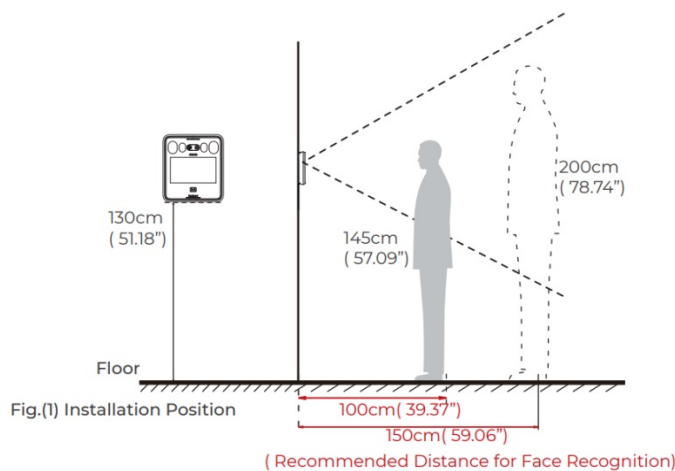


Suggested installation height (the distance between the lens and the ground is 1.5m(59.06"), as the recognizable body height range, 1m distance away from the device, is 1.4-1.8m (55.12-70.87"); the recognizable body height range, 1.5m(59.06") distance away from the device, is 1m-2.2m(39.37-86.61"). (There are some deviations) . The temperature detection range is 30mm(1.18").

Steps

 1 Keep the mounting bracket parallel with the ground and 1.2m distance to the ground. Drill 4 screw holes on the wall according to the mounting bracket,

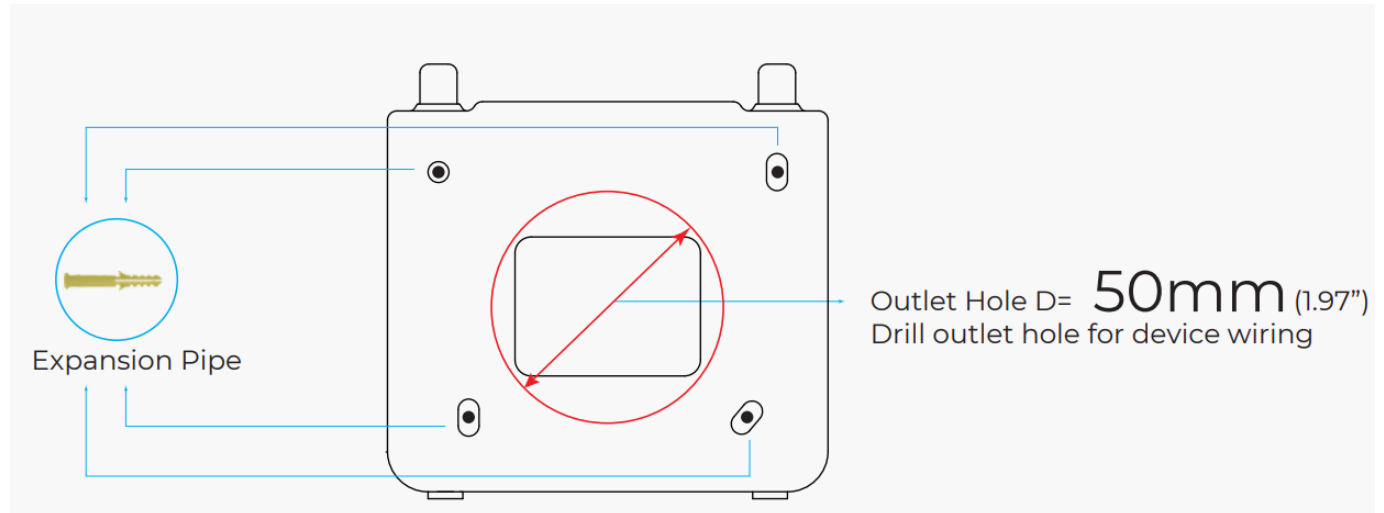

 Please punch out the tail lines from the outlet hole before installing the mounting bracket and use the screws to fix the mounting bracket on the wall. Use the screwdriver to tighten the screw follow the direction indicated, to complete the installation.

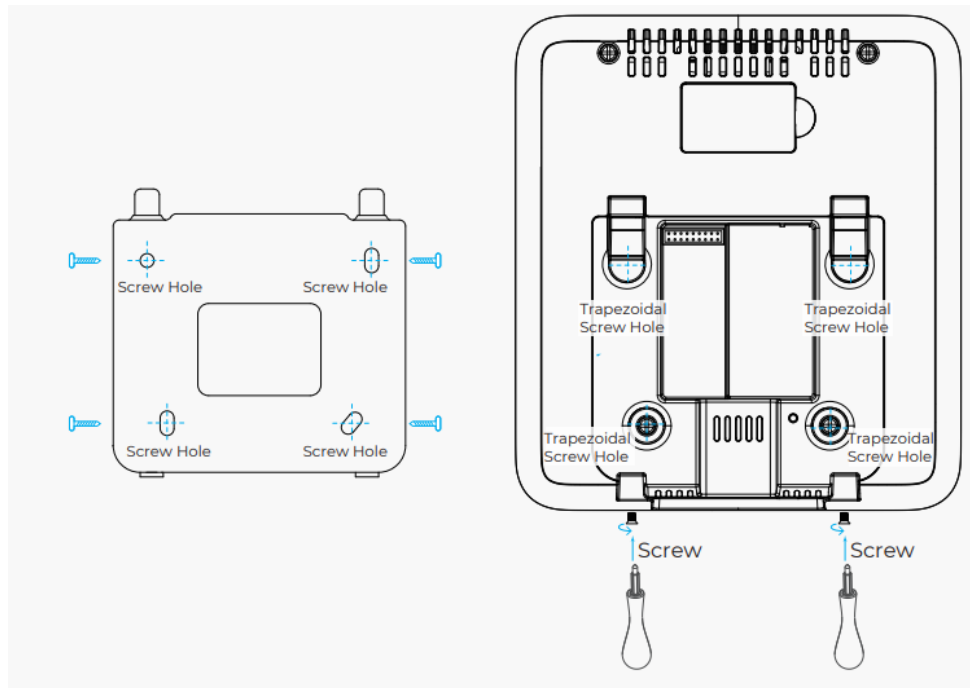

Access Control Power Supply

FORD MICROPOWER
POWER SUPPLY CONTROLLED
MODEL: FC-901/903
INPUT:AC220/230W 50HZ OUTPUT:DC12V, 3Amps+

Quick Guide General Settings



Power on the FaceDeep 3 and wait for the activation. Click, then enter admin ID and password to access the main menu, or click to verify the employee ID and password.

Power on the FaceDeep 3 and wait for the activation. Click, then enter admin ID and password to access the main menu, or click to verify the employee ID and password.	Click then input default ID "0", password "12345" to enter the main menu. You can change the admin password according to your needs, or set other users as administrators.	Enter system settings.
--	--	------------------------

Communication Settings

Click "Network" option to enter network setting page, then select Ethernet or Wi-Fi	Click "Network \ Comm Mode" to select server or client mode.	Set Ethernet parameters on your network environment.
Click the "Network" option to enter network setting page.	Click "Internet" to set WAN mode as Ethernet, and then set DNS IP address.	Click "Comm Mode".

Wi-Fi Setting

< Internet

WAN Mode	NONE
DNS	8.8.8.8

< Comm Mode

Comm Mode	Sever
Port	5010
Comm.PW	Disabled
PW Setting	12345
Server Type	IP Address
Server IP	92.68.0.97

<

Option	
EssID	
IP Mode	
Get DNS	
Device	
IPNetmask	
Gateway	

①

②

Click "Internet" to set WAN mode as Wi-Fi, and then set DNS IP address.

Click "Comm Mode" to select server or client mode.

Click "Wi-Fi" to modify the TCP/IP settings. Click "Choose Wi-Fi" to move to the next steps.

User Enrollment

Quick Face Registration

< Register Face

ID				
123	1	2	3	<
456	4	5	6	Tab
789	7	8	9	
012	.	0	Space	Enter

< 8010 - Sasha

Face in the circle

< 8010 - Sasha

Enrolled

< 8010 - Sasha

Already exist

①

②


< Main

Enroll	User	Data
Network	Setting	Advance

Click "Enroll Face" and input ID for quick face registration.

- Keep face in the center of the detection frame, according to the device request.
- Slightly move the head left and right, up and down during the registration.
- If the registration process takes too long or fails, please change the registration position.
- In some cases, the detection frame might move to the top, it might be triggered by glasses. Take the glasses off, and try one again.

 Registration of Other Authentication Methods

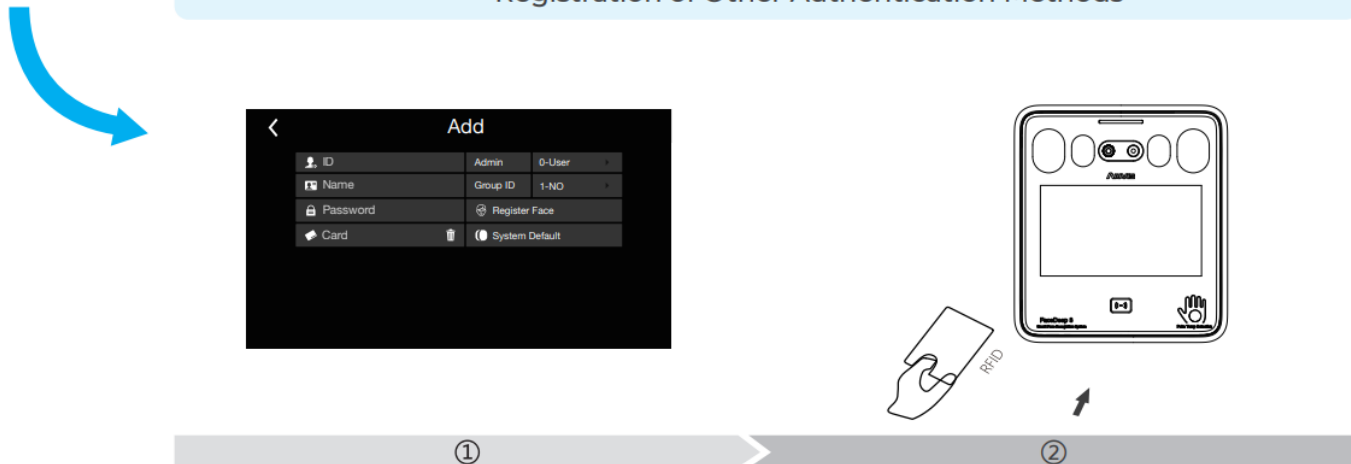



1. Click "User"/"Add" to input ID, Password, and Name. Click "Register Face" to enroll.
2. Click "Card" and swipe the card at the card detection area to finish the registration.



TIPS

Do not cover the forehead and keep the facial area below the eyebrows visible during the face registration. In order to improve comparison accuracy, users need to attempt multiple possible angles. Be careful not to change the facial expression (smiling face, drawn face, wink, etc.).

  To Switch the Status of "IN" or "OUT"

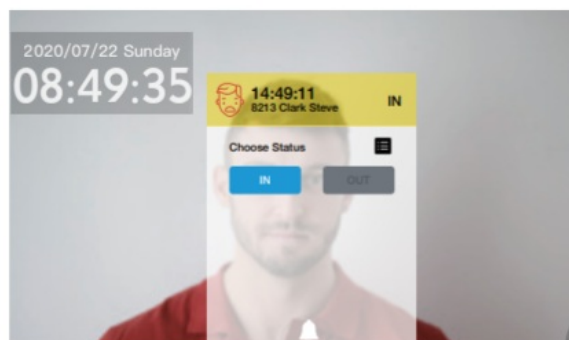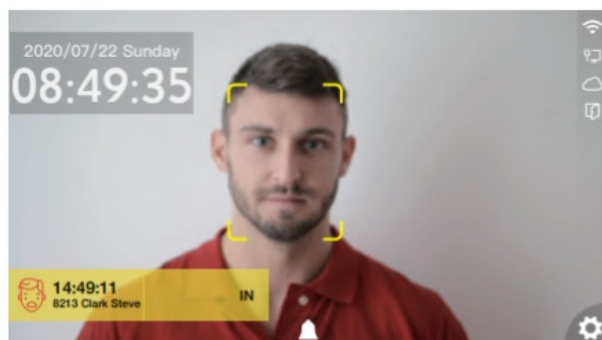

①

②

When the User pass the face verification, the status of "IN" will be available.





Click "IN" → Choose Status → Press "OUT" if need.

To Import and Export the Lots of Face Photos of Users to be Enrolled with USB Disk

- To set up a new folder in the root directory of your USB stick, rename it , eg. “Face”
- Select the Face photos to be imported and rename as the actual ID number, to save these photo files into the Folder of “Face “, eg. 1000001.jpg
- Add a new file of Users.xls in the “Face” folder, and fill in the personnel information you want to import as follows.

User ID	Name	Card NO.	Group No
1000001	James	1.23E+08	1

    4. Copy the Folder as well as the photos to USB Disk, and then insert the USB back to FaceDeep 3 Terminal. 5. Enter Menu—> Press “Data” —>” Import”—>”Data Import”—>”Face Import”—> Press” Import”

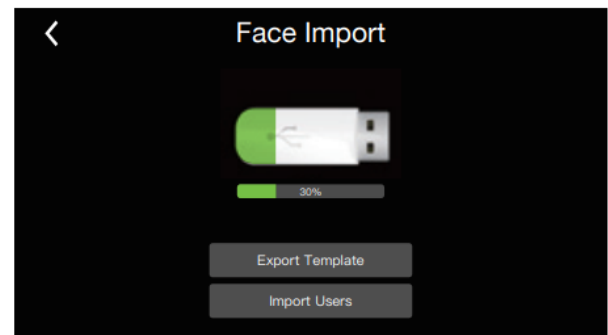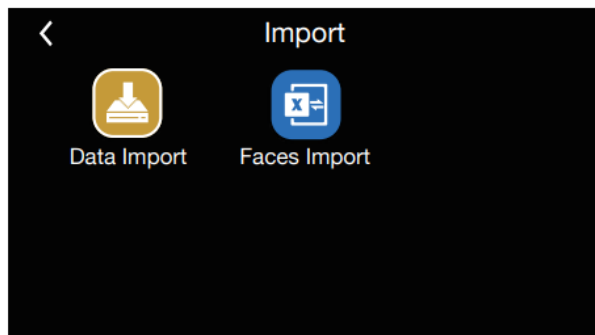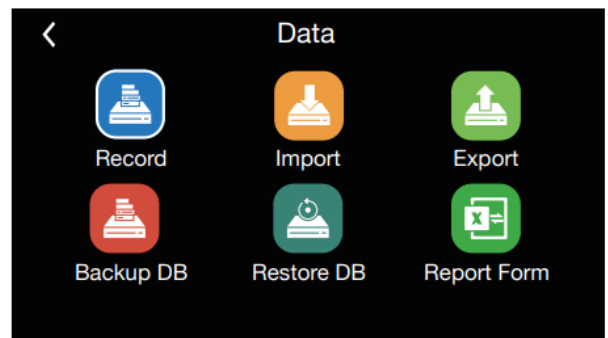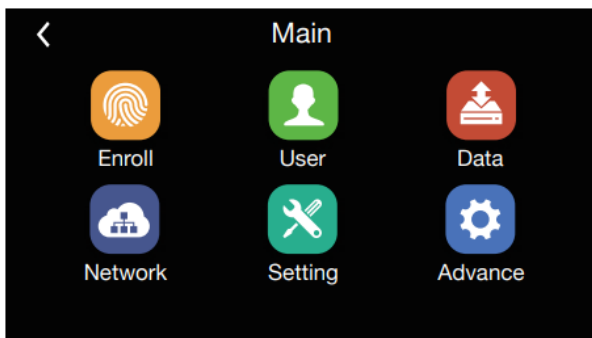


*** The Face Photo of the User should be :**

- File Format: JPG image
- Size: the maximum size are 500KB.
- Dimensions: 100 pixels < Width < 2000 pixels, 100 pixels < Height < 2000 pixels



How to Setup Temperature

 Press” Menu”, Click ” AdvancedTemperature” , then you can reset or modify the setup accordingly if need.

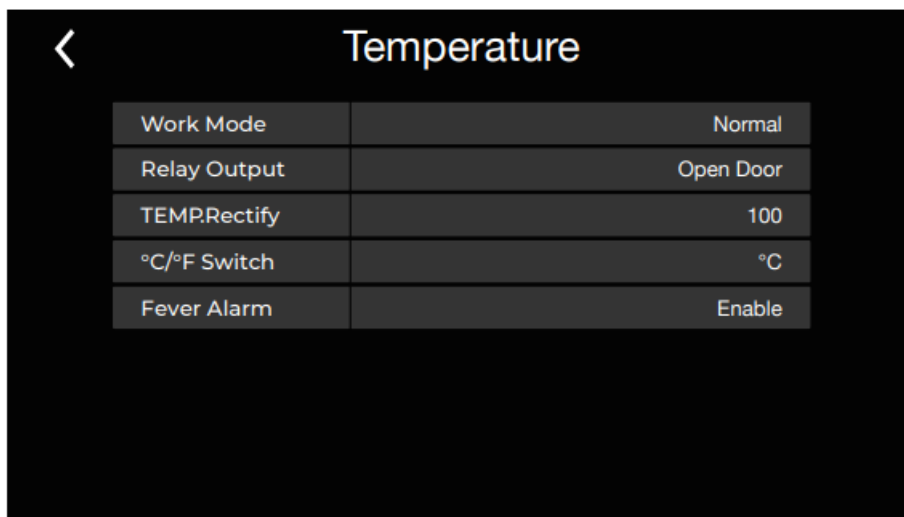

Matching Precision Settings

  - **Three precision levels:** Basic/Good/Excellent
- **Basic:** Excellent face comparison speed.
- **Good:** Fast face comparison speed with high secure protection, recommended.
- **Excellent:** Top security precision, recommended using in a high-security property.

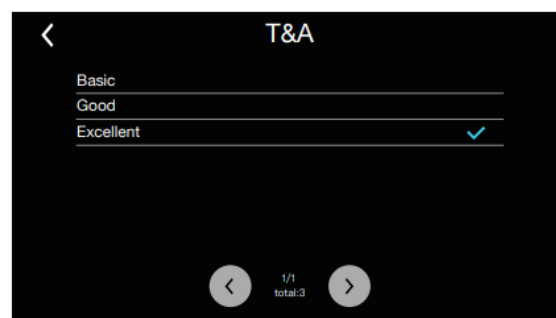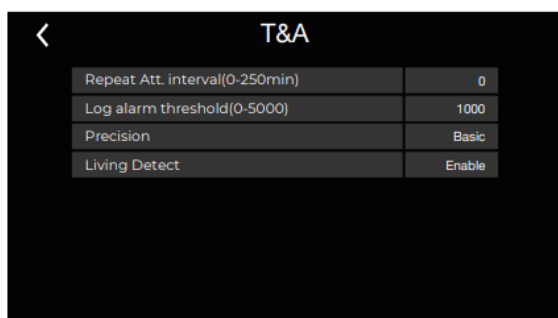

①

Enter from Main menu to
Advanced\T&A\Precision



②

Precision levels :
Basic/Good/Excellent

1. Enter from the Main menu to AdvancedT&APrecision
2. Precision levels: Basic/Good/Excellent

FAQ

In order to protect the environment, Anviz has decided to go "CD Free" campaign since June 1st, 2019. We will provide a QR code for you to download the electronic documents to make sure that you understand how to install and use Anviz devices.

 <p>Dropbox</p>	 <p>Google</p>
https://bit.ly/2WugbYp	https://bit.ly/2Vn0wh6


Anviz brand and product are trademarked and protected under the law of the United States.

Unauthorized use is prohibited.

For more information, please visit www.anviz.com, or send an email to sales@anviz.com for more help.

@2021 Anviz Global Inc. All Rights Reserved.

Documents / Resources

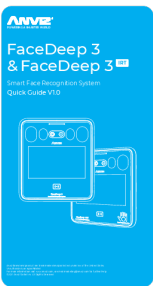	<p>ANVIZ FaceDeep 3 Smart Face Recognition System [pdf] User Guide FaceDeep 3 Smart Face Recognition System, FaceDeep 3, Smart Face Recognition System</p>
--	--

References

- [Anviz Global | Powering a Smarter World](#)
- bit.ly/2J9qA95
- [SoftwareUpdata - Google Drive](#)
- [Dropbox - SoftwareUpdata - Simplify your life](#)