

ANWOLL ANW40 Air Switch Socket User Guide

Home » ANWOLL » ANWOLL ANW40 Air Switch Socket User Guide 🖫

Contents

- 1 ANWOLL ANW40 Air Switch
- Socket
- **2 Product Features**
- **3 Install Instruction**
- **4 PARTS INCLUDED**
- 5 Documents / Resources
- 5.1 References
- **6 Related Posts**




ANWOLL ANW40 Air Switch Socket



- welcome to choose Pis read the user manual before applying.
- ANW2440 is suitable for food waste disposal, swimming pools, hot springs, cleaning equipment, medical equipment, etc., for indoor use only.

Product Features


• Rating: 12A 125VAC/60HZ Temperature limit:-10~50°C

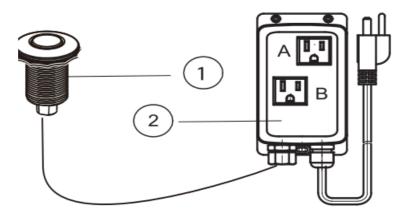

Part Name Part No.

- 1. The sink-top air switch button
 - CP
 - 55
 - ORB
 - MB
 - other
- 2. Air switch socket
 - ANW2440

Install Instruction

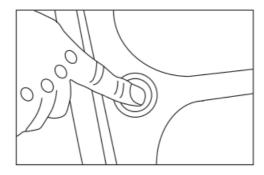


Easily mounts to sink or countertop

PARTS INCLUDED

- Power module with grounded outlet
- Push the button with a decorative button (As an option). Air tubing (6 ft.)


STEP 1. Install the push button set

- Loosen the plastic nut and metal washer then mount the button directly through a 1-3/8" diameter sinkhole (no plumber putty is required).
- Place the rubber washer between the push button and the countertop. The metal washer is optional and is used if the diameter of the sinkhole is larger than 1-3/8".
- Tighten the plastic lock nut completely to the counter to ensure a proper seal.
- **Notice:** for countertops thicker than 1-3/8", install the button with 100% silicone beneath the flange in place of the mounting nut.

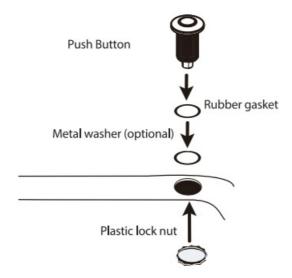


STEP 2. Mount Power Module

- Mount the power module on a cabinet wall within 3 feet of an electrical outlet and electrical appliance.
- Use two #8 wood screws (not furnished) to secure the power module in place.

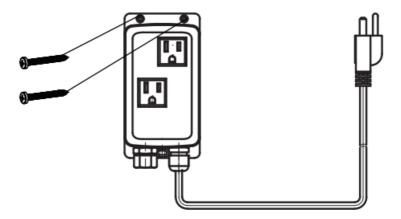

STEP 3. Attach air tube

• Attach the air tube between the push button and the power module. Tighten the nut of the button shank. Secure tightly.

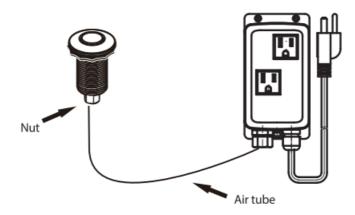


STEP 4. Connect the Power Module and Electrical appliance

- Plug the power module cord into a dedicated, grounded 120V AC outlet that is continuously energized.
- Plug the disposer and/or hot water dispenser cord into the power module.
- Press the push button to ensure that the sinktop air switch turns the electrical appliance disposer on and off.
- Be sure that the control system is operating properly before using the unit.
- Press and release the button to turn the electrical appliance on.
- Press and release again to turn the electrical appliance off.


CAUTION

• The electrical appliance may start when the power module is plugged in. Push the button once to stop the electrical appliance.

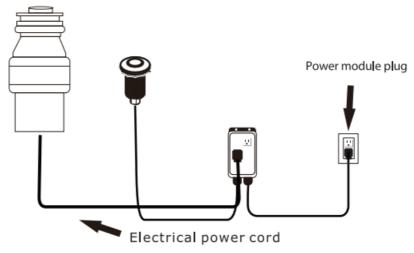

• You can find further information here www.anwoll.com

Documents / Resources

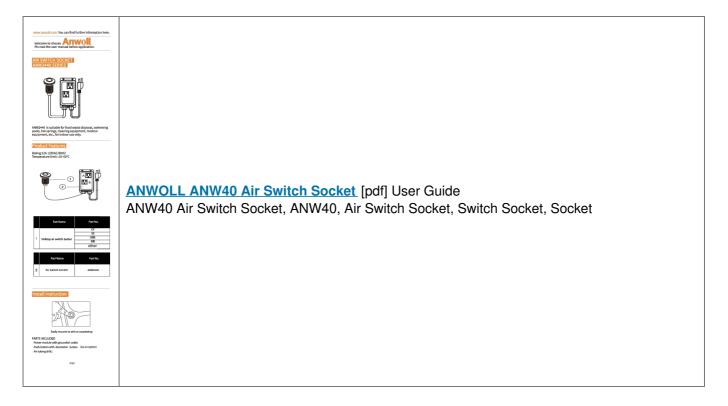

References

• User Manual

Manuals+, Privacy Policy