



## **Contents** [ [hide](#) ]

- [1 Ancash S1 Bluetooth Mini Printer](#)
- [2 INTRODUCTION](#)
- [3 SPECIFICATIONS](#)
- [4 WHAT'S IN THE BOX](#)
- [5 FEATURES](#)
- [6 SETUP GUIDE](#)
- [7 CARE & MAINTENANCE](#)
- [8 TROUBLESHOOTING](#)
- [9 PROS & CONS](#)
- [10 WARRANTY](#)
- [11 FREQUENTLY ASKED QUESTIONS](#)
- [12 References](#)

# Ancash

## **Ancash S1 Bluetooth Mini Printer**



## INTRODUCTION

Fun, convenience, and creativity are the goals of the Anycash S1 Bluetooth Mini Printer, a small, light, and cute portable printer. At **\$18.99**, this small thermal printer is compatible with inkless sticker printing and pairs easily with cellphones using Bluetooth. Users can print tickets, labels, QR codes, and customized stickers instantaneously with the three rolls of sticker labels that come with it. With a maximum speed of 15 ppm and high-resolution printing up to 300 dpi, the S1 is ideal for students, journaling lovers, do-it-yourself projects, and children's gifts. The gadget makes it simple to create and print anywhere by pairing with the Luck Jingle App. Because to its adorable style and small dimensions (1.5"D x 3"W x 3"H), it's perfect for usage at home, on the go, or in school. Anyone wishing to quickly put thoughts into sticker prints will find this small printer to be an entertaining, imaginative, and useful option.

## SPECIFICATIONS

<b>Model Name</b>	S1
<b>Brand</b>	Ancash
<b>Connectivity</b>	Bluetooth
<b>Printing Technology</b>	Thermal (Inkless)
<b>Printer Output</b>	Monochrome
<b>Max Print Speed</b>	15 ppm
<b>Max Resolution</b>	300 dpi
<b>Max Media Size</b>	2 inches
<b>Compatible Devices</b>	iOS, Android Smartphones
<b>Power Source</b>	Rechargeable Battery (USB-C Charging)
<b>Dimensions</b>	1.5" x 3" x 3"
<b>Weight</b>	Approximately 0.7 lbs
<b>App Required</b>	Luck Jingle App
<b>Included Paper</b>	3 Rolls of Sticker Paper



## WHAT'S IN THE BOX

- Anycash S1 Bluetooth Mini Printer
- 3 Rolls of Thermal Sticker Paper
- USB Charging Cable
- User Manual
- Quick Start Guide



## FEATURES

- **Portable Design:** Pocket-sized and lightweight, the Anycash S1 Mini Printer is perfect for travel, home, office, or on-the-go printing projects.
- **Wireless Bluetooth Printing:** Connects effortlessly to your iOS smartphone via Bluetooth, allowing wireless printing without messy cables.



- **Inkless Thermal Technology:** Uses advanced thermal printing, eliminating the need for ink while producing crisp and clear prints.
- **Sticker Paper Compatibility:** Supports 2-inch labels and stickers, making it ideal for labeling, journaling, or DIY crafts.
- **iOS Compatibility:** Works seamlessly with iPhones and iPads for convenient mobile printing.
- **Fast Printing Speed:** Prints up to 15 pages per minute, ensuring quick and efficient output.





- **High Resolution Output:** Offers sharp, high-quality prints at 300 dpi, delivering professional-looking results.
- **App-Controlled Printing:** Fully controlled through the Luck Jingle App, giving you easy access to customization options and print previews.
- **Starter Kit Included:** Comes with 3 rolls of sticker labels to get you started immediately.
- **Sheet Capacity:** Holds up to 50 input sheets, allowing multiple prints without frequent reloads.
- **Simplex Printing:** Prints on a single side, suitable for notes, labels, and stickers.



- **Versatile Printing:** Capable of printing QR codes, notes, custom designs, and labels for various tasks.
- **Compact and Lightweight:** Small footprint and light design make it convenient to carry in a bag or backpack.
- **Fun and Engaging Design:** Adorable appearance makes it perfect for kids, journaling, or creative DIY projects.
- **Great Gift Choice:** Ideal as a thoughtful present for birthdays, holidays, or crafting enthusiasts.

## SETUP GUIDE

- **Unbox the Printer:** Carefully remove the AnyCash S1 Mini Printer and accessories from the packaging.
- **Charge Fully:** Plug in and charge the printer completely before first use to ensure



optimal battery performance.

- **Download App:** Install the Luck Jingle App from the App Store to access all printing features.
- **Power On:** Turn on the printer using the power button.
- **Open App & Select Print:** Launch the app and choose the “Label Print” option for sticker projects.
- **Connect via App:** Pair the printer through the app’s Bluetooth settings (not the phone’s general Bluetooth menu).
- **Enter Authentication Code:** If prompted, input the Bluetooth code 0000 or 1234 to complete pairing.
- **Load Sticker Roll:** Insert the thermal sticker paper correctly into the printer.
- **Adjust Paper Settings:** Set the paper size to 2 inches within the app settings for accurate printing.
- **Input Content:** Add text, images, or QR codes to your design in the app.
- **Preview Print:** Check the layout and alignment using the print preview function.
- **Print:** Press the “Print” button in the app to begin printing your stickers.
- **Monitor Output:** Ensure the stickers feed correctly and adjust alignment if needed.
- **Remove Stickers Carefully:** Take out printed stickers gently to avoid tearing or smudging.
- **Store Extras:** Keep extra sticker rolls in a cool, dry location to preserve quality.

## CARE & MAINTENANCE

- **Protect from Moisture:** Keep the printer away from water, humidity, or damp areas.
- **Use Compatible Paper:** Only use thermal sticker paper designed for the S1 printer to prevent jams and ensure quality.
- **Clean Exterior:** Wipe the printer’s surface with a soft, dry cloth to remove dust and fingerprints.
- **Avoid Sunlight Exposure:** Do not leave the printer under direct sunlight for extended periods to prevent damage.
- **Battery Care:** Charge the battery fully before use to maintain performance and longevity.
- **Handle Gently:** Avoid dropping or applying heavy pressure to protect internal components.

- **Keep Free of Dust:** Store the printer in a clean environment to prevent dust accumulation.
- **Avoid Non-Thermal Paper:** Do not print on regular paper or ink-based materials as it can damage the printer.
- **Replace Sticker Rolls Timely:** Reload rolls before they run completely out to avoid printing errors.
- **Clean Printer Head:** Gently clean the printer head if printed output appears faded or unclear.
- **Avoid Extreme Heat:** Do not expose the printer to high temperatures to protect internal circuitry.
- **Update Firmware/App:** Keep the printer's firmware and app updated for smooth operation and new features.
- **Power Off When Idle:** Turn off the printer when not in use to conserve battery life.
- **Limit Continuous Printing:** Avoid printing for long sessions to prevent overheating.

## TROUBLESHOOTING

Issue	Possible Cause	Solution
Printer won't power on	Battery not charged	Charge printer fully
Bluetooth not connecting	Wrong connection method	Connect via Luck Jingle App
Blank prints	Sticker roll not loaded or incompatible	Load correct thermal paper
Paper jam	Incorrect paper insertion	Reinsert sticker roll correctly
Faded output	Printer head dirty	Clean printer head
Printer beeps continuously	Paper sensor blocked	Check and clear paper path
App crashes	Outdated version	Update Luck Jingle App

Issue	Possible Cause	Solution
Misaligned prints	Paper not inserted straight	Adjust paper alignment
Printer printing slowly	Low battery or too many sheets	Charge fully / reduce batch size
Cannot print QR code	App settings incorrect	Adjust QR code input in app
Multiple sheets feed	Roll loose or paper bent	Re-roll sticker paper
Prints cut off	Wrong paper size selected	Select 2-inch label size in app
Printer overheating	Continuous printing > 15 min	Pause and let cool
App fails to detect printer	Printer off or out of range	Turn on printer and move closer
Prints distorted images	Sticker roll incompatible	Use compatible thermal sticker paper

## PROS & CONS

### Pros:

- Ultra-portable and lightweight design
- Inkless thermal printing – no mess or ink required
- High-resolution printing (300 dpi)
- Fun and creative sticker printing
- Easy Bluetooth setup with dedicated app

### Cons:

- Only supports 2-inch stickers
- Monochrome printing only
- Continuous printing limited by battery

- Requires Luck Jingle App for functionality
- Maximum 15 ppm print speed

## **WARRANTY**

The Anycash S1 Bluetooth Mini Printer comes with a limited manufacturer warranty that covers defects in materials or workmanship under normal use. This warranty ensures users can request repair or replacement if the printer malfunctions due to manufacturing defects. Accidental damage, misuse, or modifications are not covered. Customers are advised to retain the purchase receipt and follow the warranty registration process, if available, for smooth service.

## **FREQUENTLY ASKED QUESTIONS**

What is the Anycash S1 Bluetooth Mini Printer?

The Anycash S1 Bluetooth Mini Printer is a compact, inkless thermal printer designed for printing stickers, labels, notes, and QR codes on the go. It is lightweight, portable, and ideal for home, school, or personal use.

What devices are compatible with the Anycash S1 Bluetooth Mini Printer?

The Anycash S1 works with iOS and Android smartphones via Bluetooth using the Luck Jingle App. It can also connect to tablets that support the app.

Does the Anycash S1 Bluetooth Mini Printer require ink?

The Anycash S1 uses thermal printing technology, eliminating the need for ink cartridges and making it mess-free and economical.

What is the maximum print speed of the Anycash S1 Bluetooth Mini Printer?

The Anycash S1 offers a maximum black-and-white print speed of 15 ppm, making

it efficient for quick sticker and label printing.

What is the maximum print resolution of the Anycash S1 Bluetooth Mini Printer?

The printer supports a maximum print resolution of 300 dpi, ensuring clear and high-quality prints for stickers and labels.

What size media can the Anycash S1 Bluetooth Mini Printer print on?

The Anycash S1 supports labels up to 2 inches wide and includes a maximum input sheet capacity of 50 sheets or rolls.

How do I connect the Anycash S1 Bluetooth Mini Printer to my phone?

Download the Luck Jingle App, open it, follow the on-screen instructions, and connect the printer through the app. If a Bluetooth authentication code is required, enter 0000 or 1234. Do not connect directly via the phone's Bluetooth settings.

## References

- [User Manual](#)

💎 Anycash, Anycash S1, B0D3LMFSHJ, Bluetooth Mini Printer, S1, user

📁 Anycash manual

---

## Leave a comment

Your email address will not be published. Required fields are marked \*

Comment \*



Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.