



Anytek Fingerprint Lock User Manual

[Home](#) » [Anytek](#) » Anytek Fingerprint Lock User Manual

 
Contents [[hide](#)]

- 1 Anytek Fingerprint Lock User Manual
 - 1.1 I. USB Interface:
 - 1.2 II. Indicator
 - 1.3 III. Description Of First Administrator' s Fingerprint Record
 - 1.4 IV. Number 2 to 10 Fingerprint Recording Instructions
 - 1.5 V. Description Of Delete Fingerprint
 - 1.6 VI. Specifications
 - 1.7 VII. Low voltage
- 2 Related Posts

Anytek Fingerprint Lock User Manual



指纹锁 FINGERPRINT LOCK

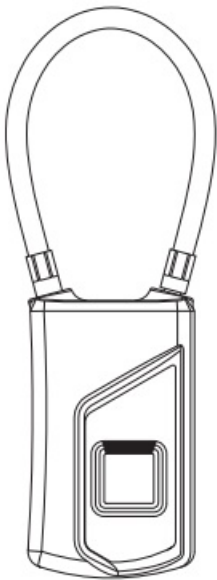

I. USB Interface:

The product is charged by USB. Please fully charge the product for the first time.



Components:

1. USB Port
2. Fingerprint Reader
3. LED Light
4. Lock Beam


II. Indicator

Use 3-color indicator. Different indicator represents different devices and status.


Please check the details as below chart:

Indicator status	Function
Low power	Red light flash
Charging	Red light always on
Full charged	Lights off
Green light flash	Fingerprint collection mode
Green light always on	Successful to collect fingerprint
Blue light always on	Administrator fingerprint authorization
Green light flash	Unlocked successfully
Red light always on	Delete fingerprint mode
Red light flash	Failed to collect fingerprint

 III. Description Of First Administrator' s Fingerprint Record

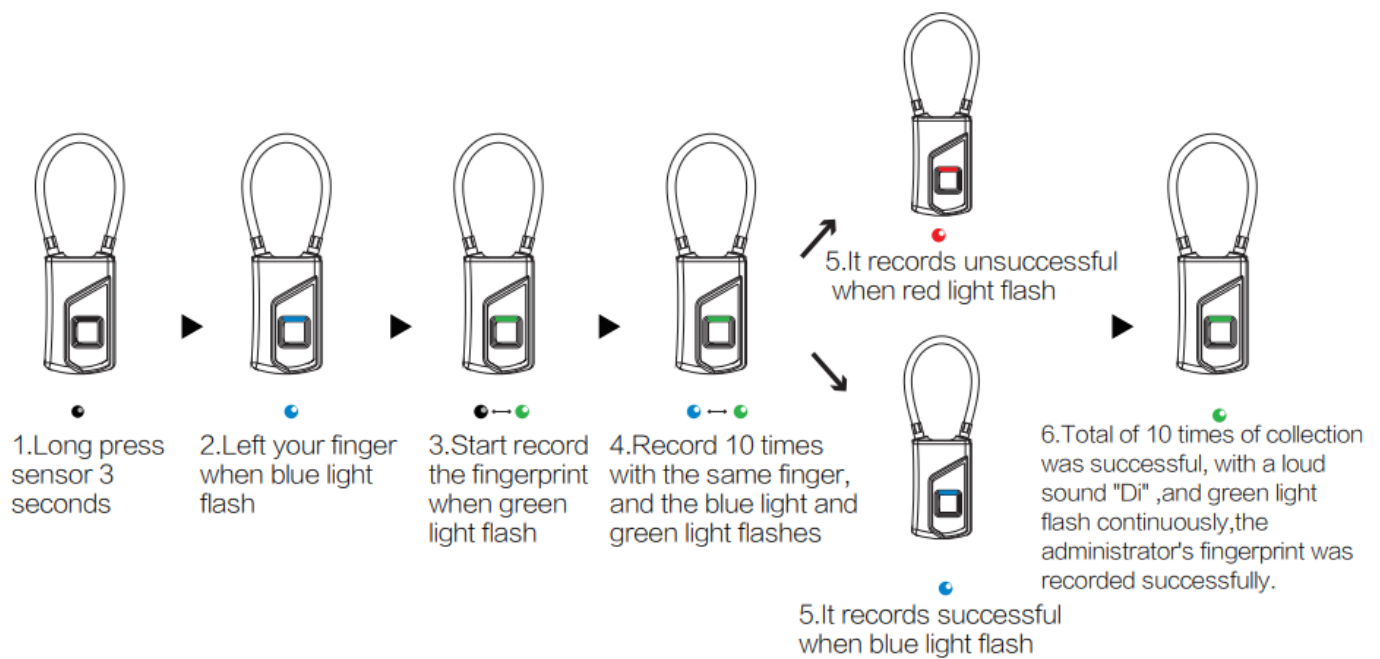

 
IV. Number 2 to 10 Fingerprint Recording Instructions

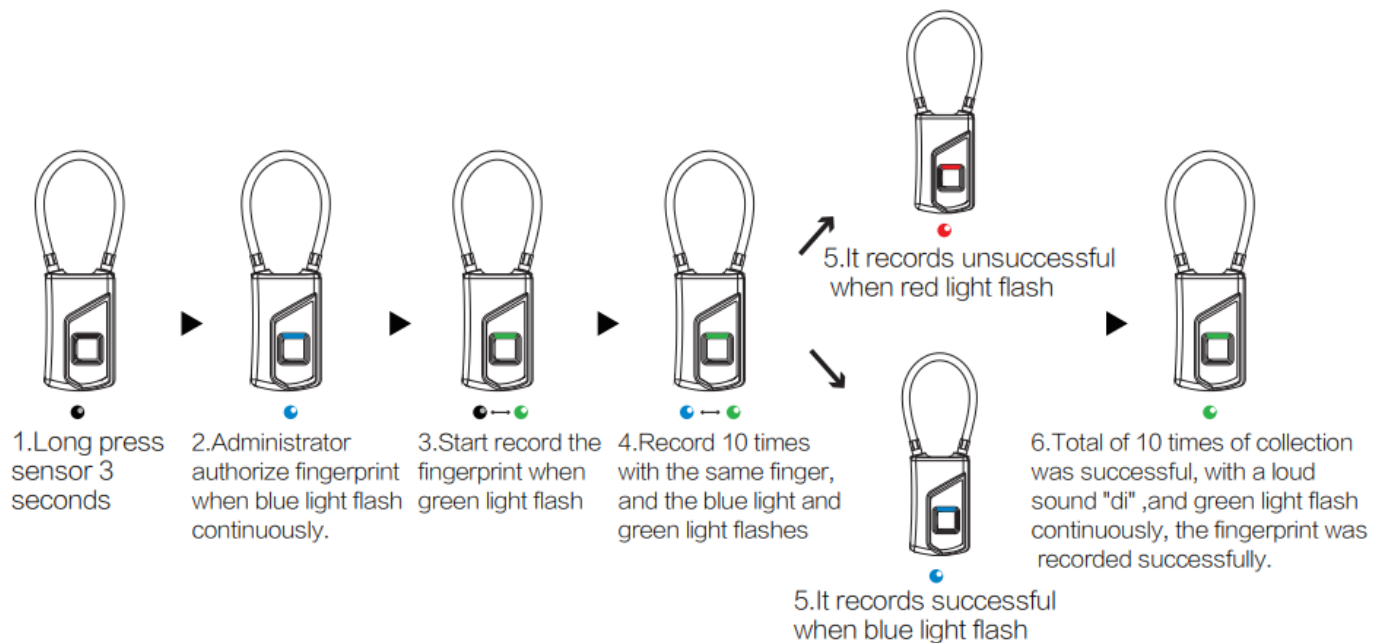

Remarks:

1. The first and second fingerprints are the administrator fingerprint by default.
2. Collecting the second to tenth fingerprints requires administrator fingerprint authorization.

 V. Description Of Delete Fingerprint

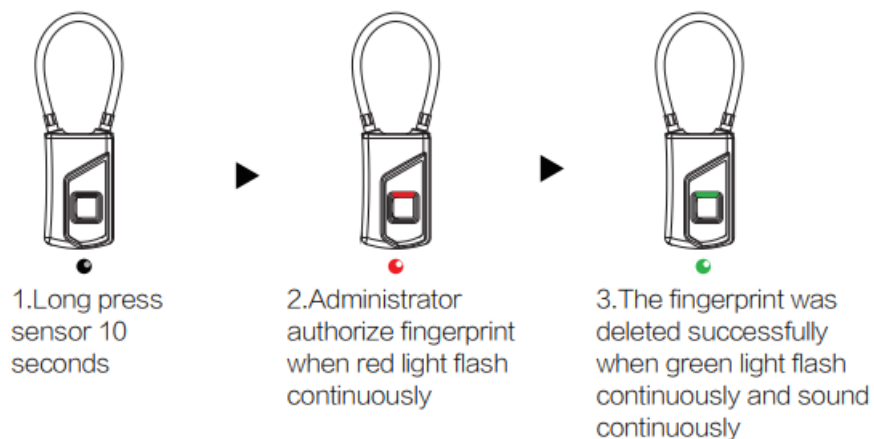

Remarks:

Only the administrator can delete the fingerprint and delete all the fingerprints at once.

VI. Specifications

Support 360 degree angel fingerprint recognize

Resolution: 508DPI

ESD: +/-12kV air, +/-8kV contact

FRR: <1%

FAR: <0.002%

Recognize time: <300mS

Battery: 3.7V 300mAh

Charger: 5V 1A

VII. Low voltage

When the voltage $\leq 3.5V$, the red indicator flash fast for 15s. If keep in the status of low batter, it will alarming per minute.

Anytek Fingerprint Lock User Manual – [Download \[optimized\]](#)

Anytek Fingerprint Lock User Manual – [Download](#)