



AOC AG276QZD OLED Monitor User Guide

[Home](#) » [AOC](#) » AOC AG276QZD OLED Monitor User Guide 

AOC AG276QZD OLED Monitor User Guide

 


Contents

- [1 With in Box](#)
- [2 Assembly Instruction](#)
- [3 General Specification](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)

With in Box


- Monitor

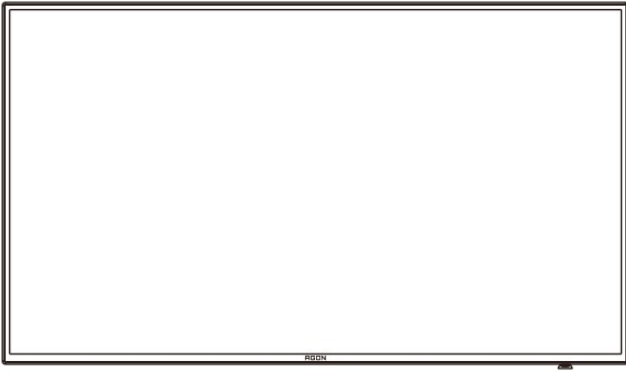


- Stand



 - Base

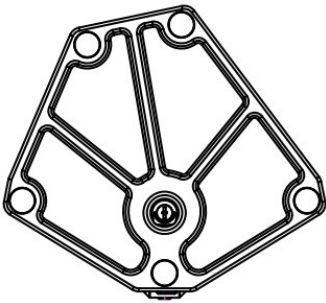

- Wall Mount Bracket

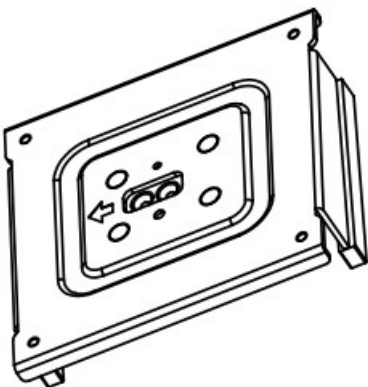 

- Quick Start



 
- Warranty Card



- Screwdriver



- Stand Screws

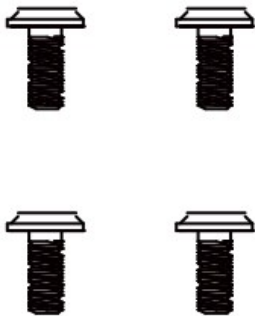

- Power Cable



- Adaptor



- HDMI Cable



- DP Cable

 


 
 
 
- USB Cable

 


***Different according to countries/regions**
Display design may differ from that illustrated

Assembly Instruction

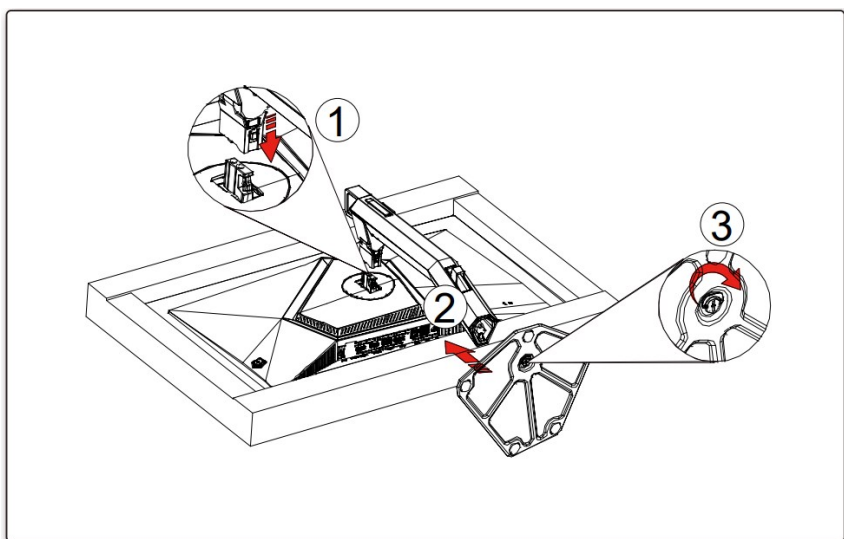

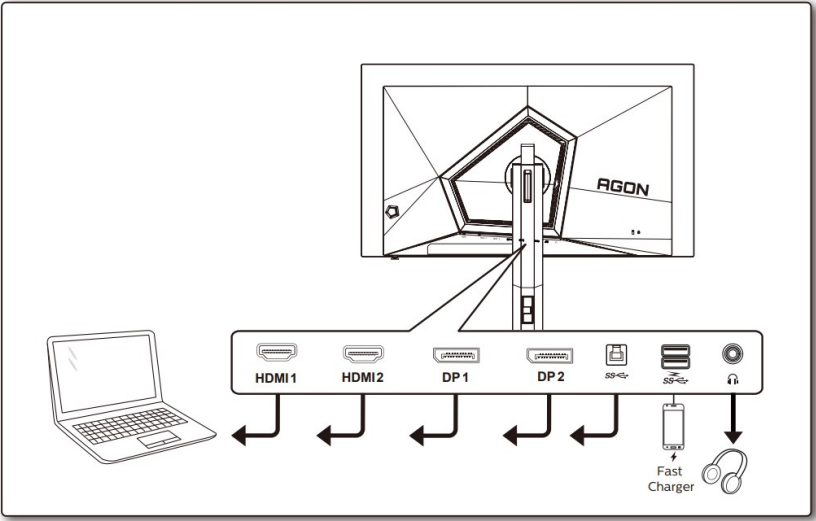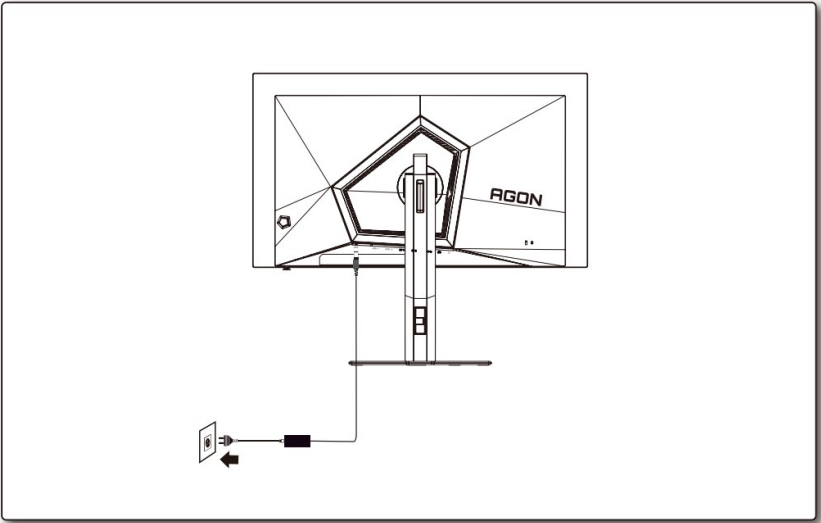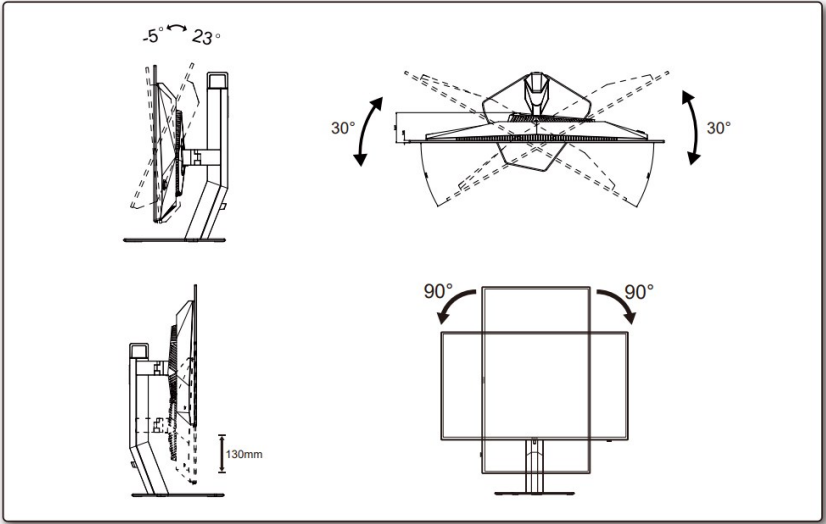

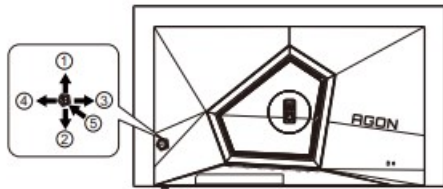

General Specification

Panel	Model Name	AG276QZD
	Driving System	TFT Color LCD
	Viewable Image Size	67.3cm diagonal(26.5" Wide Screen)
	Pixel Pitch	0.2292mm(H) x 0.2292mm(V)
Others	Horizontal Scan Range	30k-230kHz(HDMI)30k-255kHz(DP)
	Horizontal Scan Size(Maximum)	586.75mm
	Vertical Scan Range	48~144Hz (HDMI)48~240Hz (DP)
	Vertical Scan Size(Maximum)	330.05mm
	Max Resolution	2560×1440@144Hz(HDMI)2560×1440@240Hz(DP)

	Plug & Play	VESA DDC2B/CI	
	Power Source	20V  6.0A	
	Power Consumption	Typical (default brightness and contrast)	51W
		Max. (brightness = 100, contrast = 100)	≤ 129W
		Standby mode	≤ 0.5W
	Dimensions (with stand)	604.4 × (396.6 ~ 526.6) × 233.9 mm (W × H × D)	
	Net Weight	6.41 kg	
Physical Characteristics	Connector Type	HDMI x2 / DP x2 / USB x2 / USB Upstream / Earphone	
	Signal Cable Type	Detachable	
Environmental	Temperature	Operating	0°C ~ 40°C
		Non-Operating	-25°C ~ 55°C
	Humidity	Operating	10% ~ 85% (non-condensing)
		Non-Operating	5% ~ 93% (non-condensing)
	Altitude	Operating	0 ~ 5000m (0 ~ 16404ft)
		Non-Operating	0 ~ 12192m (0 ~ 40000ft)

Europe

<https://eu.aoc.com/en/support>



Россия

<https://eu.aoc.com/ru/support>



Australia

https://au.aoc.com/user_manual



Hong Kong S.A.R.

https://hk.aoc.com/user_manual



https://tw.aoc.com/user_manual



Indonesia

https://id.aoc.com/user_manual



https://jp.aoc.com/user_manual



https://kr.aoc.com/user_manual



Malaysia

https://my.aoc.com/user_manual



Myanmar

https://mm.aoc.com/user_manual



New Zealand

https://nz.aoc.com/user_manual



Philippines

https://ph.aoc.com/user_manual



Singapore

https://sg.aoc.com/user_manual



https://th.aoc.com/user_manual



Việt Nam

https://vn.aoc.com/user_manual



Middle East

https://me.aoc.com/user_manual



South Africa

https://za.aoc.com/user_manual



Brasil

<https://aoc.portaltpv.com.br/>



India

[https://www.aocindia.com/](https://www.aocindia.com/download_manuals.php)

download_manuals.php



US/Canada

[https://us.aoc.com/en-US/](https://us.aoc.com/en-US/downloads)

downloads



www.aoc.com

©2023 AOC.All Rights Reserve



Documents / Resources



[AOC AG276QZD OLED Monitor](#) [pdf] User Guide
AG276QZD OLED Monitor, AG276QZD, OLED Monitor, Monitor

