

Home » AOC





Contents

- 1 Safety
- 2 Setup
- 3 Adjusting
- **4 Troubleshoot**
- **5 Specification**
- 6 Documents /

Resources

6.1 References

Safety

National Conventions

The following subsections describe notational conventions used in this document.

Notes, Cautions, and Warnings

Throughout this guide, blocks of text may be accompanied by an icon and printed in bold type or in italic type. These blocks are notes, cautions, and warnings, and they are used as follows:



NOTE: A NOTE indicates important information that helps you make better use of your computer system.

CAUTION: A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

WARNING: A WARNING indicates the potential for bodily harm and tells you how to avoid the problem. Some warnings may appear in alternate formats and may be unaccompanied by an icon. In such cases, the specific presentation of the warning is mandated by regulatory authority.

Power

The monitor should be operated only from the type of power source indicated on the label. If you are not sure of the type of power supplied to your home, consult your dealer or local power company.

The monitor is equipped with a three-pronged grounded plug, a plug with a third (grounding) pin. This plug will fit only into a grounded power outlet as a safety feature. If your outlet does not accommodate the three-wire plug, have an electrician install the correct outlet, or use an adapter to ground the appliance safely. Do not defeat the safety purpose ofthe grounded plug.

Unplug the unit during a lightning storm or when it will not be used for long periods of time. This will protect the monitor from damage due to power surges.



Do not overload power strips and extension cords. Overloading can result in fire or electric shock.

To ensure satisfactory operation, use the monitor only with UL listed computers which have appropriate configured receptacles marked between 100-240V AC, Min. 5A.



The wall socket shall be installed near the equipment and shall be easily accessible.

Installation

Do not place the monitor on an unstable cart, stand, tripod, bracket, or table. If the monitor falls, it can injure a person and cause serious damage to this product. Use only a cart, stand, tripod, bracket, or table recommended by the manufacturer or sold with this product. Follow the manufacturer's instructions when

installing the product and use ounting accessories recommended by the manufacturer. A product and cart combination should be moved with care.

Never push any object into the slot on the monitor cabinet. It could damage circuit parts causing a fire or electric shock. Never spill liquids on the monitor.



Do not place the front of the product on the floor.


If you mount the monitor on a wall or shelf, use a mounting kit approved by the manufacturer and follow the kit instructions.

Leave some space around the monitor as shown below. Otherwise, air-circulation may be inadequate hence overheating may cause a fire or damage to the monitor.

To avoid potential damage, for example the panel peeling from the bezel, ensure that the monitor does not tilt downward by more than -5 degrees. If the -5 degree downward tilt angle maximum is exceeded, the monitor damage will not be covered under warranty.

See below the recommended ventilation areas around the monitor when the monitor is installed on the wall or on the stand:

Installed with stand

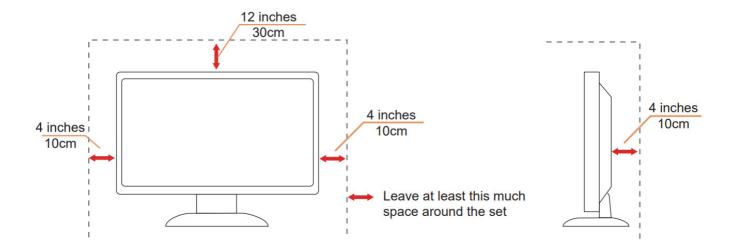

Cleaning




Clean the cabinet regularly with a water-dampened, soft cloth.


When cleaning use a soft cotton or microfiber cloth. The cloth should be damp and almost dry, do not allow liquid into the case.



Please disconnect the power cord before cleaning the product.

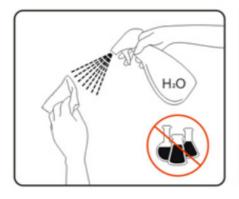



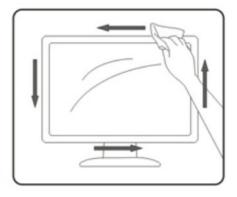

Other

If the product is emitting a strange smell, sound or smoke, disconnect the power plug IMMEDIATELY and contact aService Center.



Make sure that the ventilating openings are not blocked by a table or curtain.



Do not engage the LCD monitor in severe vibration or high impact conditions during operation.




Do not knock or drop the monitor during operation or transportation.

The power cords shall be safety approved. For Germany, it shall be H03VV-F, 3G, 0.75 mm2, or better. For other countries, the suitable types shall be used accordingly.

Excessive sound pressure from earphones and headphones can cause hearing loss. Adjustment of the equalizer tomaximum increases the earphones and headphones output voltage and therefore the sound pressure level.

Setup


Contents in Box

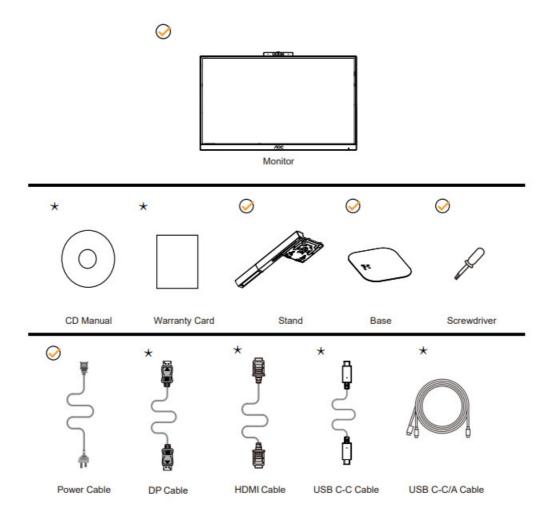


Not all signal cables will be provided for all countries and regions. Please check with the local dealer or AOC branch office for confirmation.

Setup Stand & Base

Please setup or remove the base following the steps as below.

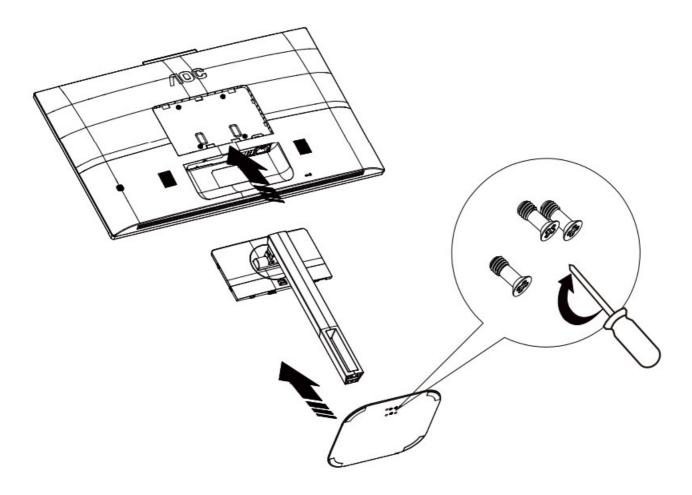

Remove:

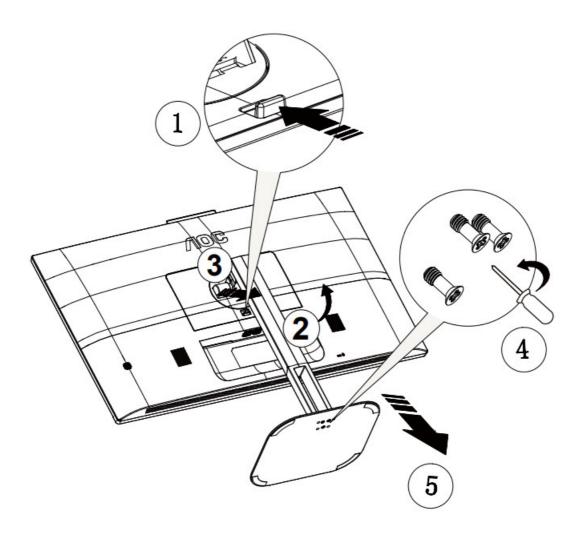


Adjusting Viewing Angle

For optimal viewing it is recommended to look at the full face of the monitor, then adjust the monitor's angle to your own preference.

Hold the stand so you will not topple the monitor when you change the monitor's angle.

You are able to adjust the monitor as below:

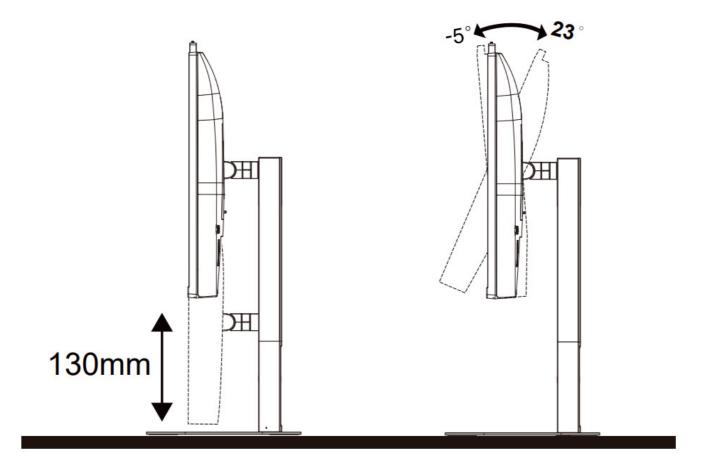


NOTE:

Do not touch the LCD screen when you change the angle. Touching the LCD screen may cause damage. **Warning**

- 1. To avoid potential screen damage, such as panel peeling, ensure that the monitor does not tilt downward by more than -5 degrees.
- 2. Do not press the screen while adjusting the angle of the monitor. Grasp only the bezel.

Connecting the Monitor

Cable Connections In Back of Monitor and Computer:

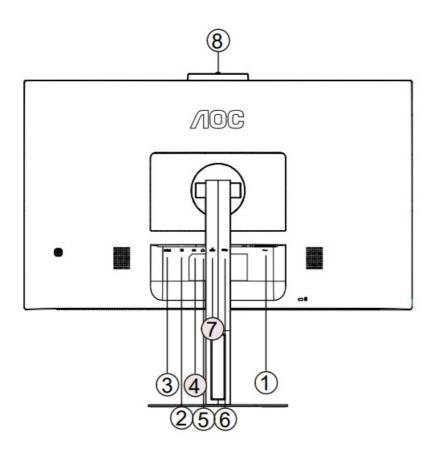


- 1. Power
- 2. DP
- 3. HDMI
- 4. USB-C
- 5. Earphone
- 6. USB3.2 Gen1
- 7. USB3.2 Gen1+charging
- 8. Camera

Connect to PC

- 1. Connect the power cord to the back of the display firmly.
- 2. Turn off your computer and unplug its power cable.
- 3. Connect the display signal cable to the video connector on the back of your computer.
- 4. Plug the power cord of your computer and your display into a nearby outlet.
- 5. Turn on your computer and display. If your monitor displays an image, installation is complete. If it does not display an image, please refer Troubleshooting. To protect equipment, always turn off the PC and LCD monitor before connecting.

Connect the USB C-C/A Cable

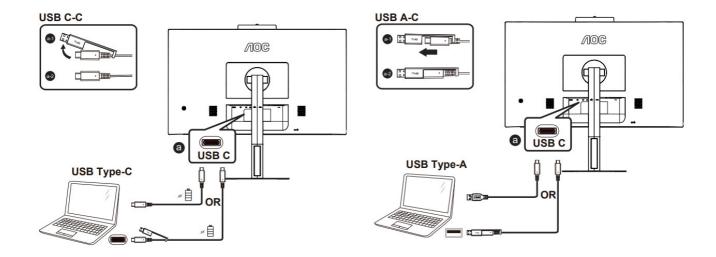

Hello webcam


The webcam is equipped with advanced sensors for Windows Hello facial recognition, which conveniently logs you into your Windows devices in less than 2 seconds, 3 times faster than a password. How to enable Windows Hello™ webcam?

Monitor with Windows Hello webcam can be enabled by simply connecting your USB cable from your PC to the "USB C" port of this monitor. Now, the webcam with Windows Hello is ready to work as long as the Windows Hello setting in Windows10 is complete. Refer to Windows official website for the settings: https://support.microsoft.com/help/4028017/ windows-learn-about-windows-hello-and-set-it-up.

Please note that Windows 10 system is required for setting up Windows Hello: facial recognition; with an edition lower than Windows 10 or Mac OS, the webcam can work without the function of facial recognition. With Windows 7 the driver is required to activate this webcam.

Please follow the steps for the setting:


Slide the camera shutter open or close to enable/disable the camera.

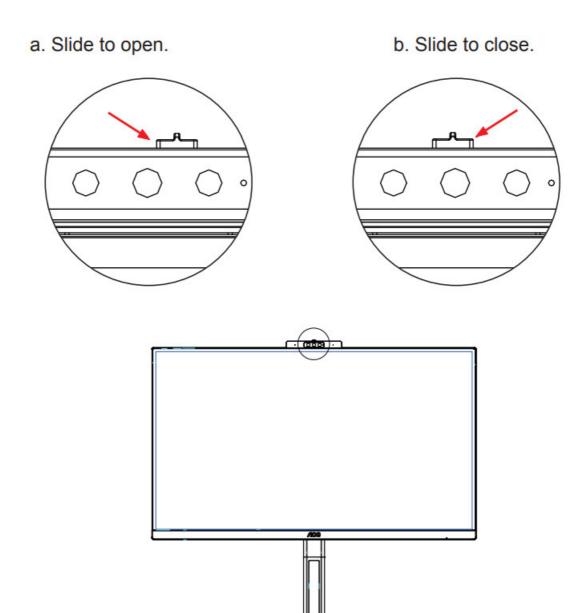

Noted: Shutter only blocks the lens, to close the mic you need to close the VC software.

Wall Mounting

Preparing to Install An Optional Wall Mounting Arm.

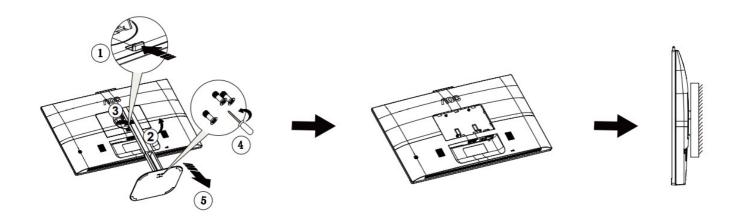


This monitor can be attached to a wall mounting arm you purchase separately. Disconnect power before this procedure.

Follow these steps:

- 1. Remove the base.
- 2. Follow the manufacturer's instructions to assemble the wall mounting arm.
- 3. Place the wall mounting arm onto the back of the monitor. Line up the holes of the arm with the holes in the back of the monitor.
- 4. Reconnect the cables. Refer to the user's manual that came with the optional wall mounting arm for instructions on attaching it to the wall.

Noted: VESA mounting screw holes are not available for all models, please check with the dealer or official department of AOC.

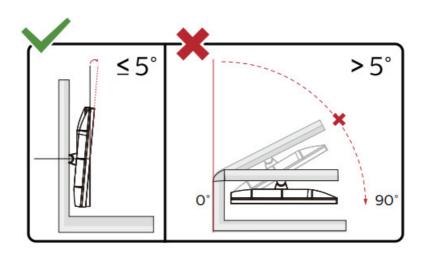

* Display design may differ from those illustrated.

Warning

- 1. To avoid potential screen damage, such as panel peeling, ensure that the monitor does not tilt downward by more than -5 degrees.
- 2. Do not press the screen while adjusting the angle of the monitor. Grasp only the bezel.

AMD FreeSync function (Available for selective models)

- 1. AMD FreeSync function is working with DP/HDMI/USB C
- 2. Compatible Graphics Card: Recommend list is as the below, also could be checked by visiting www.AMD.com

Graphics Cards

- Radeon™ RX Vega series
- Radeon™ RX 500 series
- Radeon™ RX 400 series
- Radeon™ R9/R7 300 series R9 370/X, R7 370/X, R7 265 except
- Radeon™ Pro Duo (2016)
- Radeon™ R9 Nano series
- Radeon™ R9 Fury series
- Radeon™ R9/R7 200 series (R9 270/X, R9 280/X except)

Processors

- AMD Ryzen™ 7 2700U
- AMD Ryzen™ 5 2500U
- AMD Ryzen™ 5 2400G
- AMD Ryzen™ 3 2300U
- AMD Ryzen™ 3 2200G
- AMD PRO A12-9800
- AMD PRO A12-9800E
- AMD PRO A10-9700
- AMD PRO A10-9700E
- AMD PRO A8-9600
- AMD PRO A6-9500
- AMD PRO A6-9500E
- AMD PRO A12-8870
- AMD PRO A12-8870E
- AMD PRO A10-8770
- AMD PRO A10-8770E
- AMD PRO A10-8750B
- AMD PRO A8-8650B
- AMD PRO A6-8570
- AMD PRO A6-8570E
- AMD PRO A4-8350B
- AMD A10-7890K
- AMD A10-7870K
- AMD A10-7850K
- AMD A10-7800
- AMD A10-7700K
- AMD A8-7670K
- AMD A8-7650K
- AMD A8-7600
- AMD A6-7400K

Adaptive-Sync function (Available for selective models)

- 1. Adaptive-Sync function is working with DP/HDMI/USB C
- 2. Compatible Graphics Card: Recommend list is as the below, also could be checked by visiting www.AMD.com

Graphics Cards

- Radeon™ RX Vega series
- Radeon™ RX 500 series
- Radeon™ RX 400 series
- Radeon™ R9/R7 300 series R9 370/X, R7 370/X, R7 265 except


- Radeon™ Pro Duo (2016)
- Radeon™ R9 Nano series
- Radeon™ R9 Fury series
- Radeon™ R9/R7 200 series (R9 270/X, R9 280/X except)

Processors

- AMD Ryzen™ 7 2700U
- AMD Ryzen™ 5 2500U
- AMD Ryzen[™] 5 2400G
- AMD Ryzen™ 3 2300U
- AMD Ryzen™ 3 2200G
- AMD PRO A12-9800
- AMD PRO A12-9800E
- AMD PRO A10-9700
- AMD PRO A10-9700E
- AMD PRO A8-9600
- AMD PRO A6-9500
- AMD PRO A6-9500E
- AMD PRO A12-8870
- AMD PRO A12-8870E
- AMD PRO A10-8770
- AMD PRO A10-8770E
- AMD PRO A10-8750B
- AMD PRO A8-8650B
- AMD PRO A6-8570
- AMD PRO A6-8570E
- AMD PRO A4-8350B
- AMD A10-7890K
- AMD A10-7870K
- AMD A10-7850K
- AMD A10-7800
- AMD A10-7700K
- AMD A8-7670K
- AMD A8-7650K
- AMD A8-7600
- AMD A6-7400K

Adjusting

Hotkeys

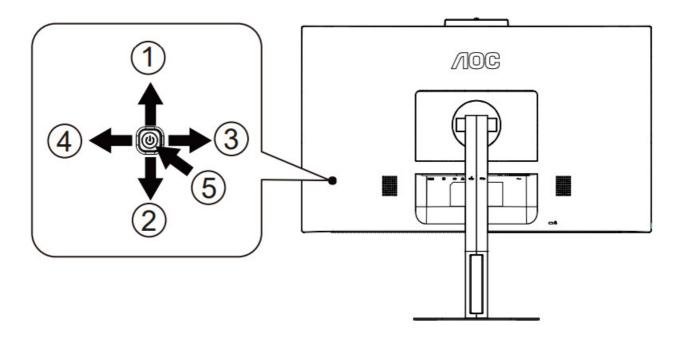

1	Source/Exit/Up
2	MIC/down
3	Clear Vision/Left
4	Volume/Right
5	Power/ Menu/Enter

Menu/Enter

When there is no OSD, Press to display the OSD or confirm the selection. Press about 2 second to turn off the monitor.

Power

Press the Power button to turn on the monitor.

Volume/Right

When there is no OSD, Press Volume button to active volume adjustment bar, Press Left or Right to adjust volume.

Source/Exit


When the OSD is closed, press Source/Exit button will be Source hot key function.

MIC/down


When there is no OSD, press this button to enter MIC adjustment. Then press Left or Right button to choose off or on.

Clear Vision

- 1. When there is no OSD, Press the "Left" button to activate Clear Vision.
- 2. Use the "Left" or "Right" buttons to select between weak, medium, strong, or off settings. Default setting is always "off".

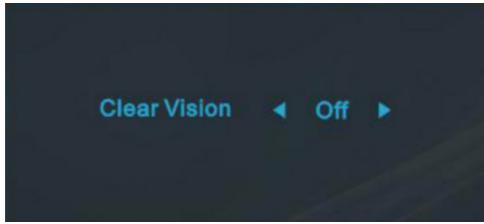

3. Press and hold "Left" button for 5 seconds to activate the Clear Vision Demo, and a message of "Clear Vision Demo: on" will be display on the screen for a duration of 5 seconds. Press and hold "Left" button for 5 seconds again, Clear Vision Demo will be off.

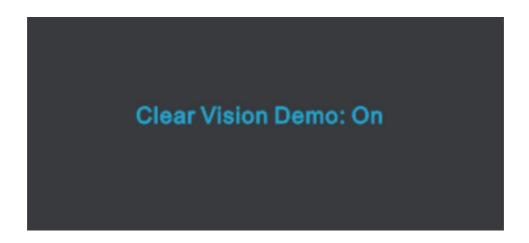

Clear Vision function provides the best image viewing experience by converting low resolution and blurry images into clear and vivid images.

	Off	
Class Vision	Weak	Adjust the Clear Vision
Clear Vision	Medium	Adjust the Clear Vision
	Strong	
Clear Vision Demo	On or Off	Disable or Enable Demo

OSD Setting

Basic and simple instruction on the control keys.



- 1. Press the MENU-button to activate the OSD window.
- 2. Press Left or Right to navigate through the functions. Once the desired function is highlighted, press the MENUbutton to activate it, press Left or Right to navigate through the sub-menu functions. Once the desired function is highlighted, press MENU-button to activate it.
- 3. Press Left or Right to change the settings of the selected function. Press Exit—button to exit. If you want to adjust any other function, repeat steps 2-3.
- 4. OSD Lock/Unlock Function: To lock or unlock the OSD, press and hold the Down-button for 10s while OSD function is not active.

Notes:

- 1. If the product has only one signal input, the item of "Input Select" is disable to adjust.
- 2. ECO modes (except Standard mode), Clear vision, DCR, DCB mode and Picture Boost, for these states that only one state can exist.

Luminance



	Contrast	0-100		Contrast from Digital-register.
	Brightness	0-100		Backlight Adjustment
		Standard	V	Standard Mode
		Text	T	Text Mode
		Internet	E	Internet Mode
	Eco mode	Game	وفق	Game Mode
O		Movie	9	Movie Mode
		Sports	R	Sports Mode
		Reading	R	Reading Mode
		Gamma1	I	Adjust to Gamma 1
	Gamma	Gamma2		Adjust to Gamma 2
		Gamma3		Adjust to Gamma 3
		Off		Disable dynamic contrast ratio
	DCR	On	DCR	Enable dynamic contrast ratio
	HDR	Off / DisplayH icture / HDR M Game		Disable or Enable HDR
	HDR Mode	Off / HDR Pict Movie / HDR (Disable or Enable HDR Mode

Note:

When HDR is detected, the HDR option is displayed for adjustment; when HDR is not detected, the HDR Mode option is displayed for adjustment.

Color Setup



1		I	
	Warm		Recall Warm Color Temperature from EEPROM.
	Normal		Recall Normal Color Temperature from EEPROM .
	Cool		Recall Cool Color Temperature from EEPROM.
Color Temp.	sRGB		Recall SRGB Color Temperature from EEPROM.
		Red	Red Gain from Digital-register
	User	Green	Green Gain Digital-register.
		Blue	Blue Gain from Digital-register
	Full Enhance	on or off	Disable or Enable Full Enhance Mode
	Nature Skin	on or off	Disable or Enable Nature Skin Mode
DCB Mode	Green Field	on or off	Disable or Enable Green Field Mode
DOD WOOC	Sky-blue	on or off	Disable or Enable Sky-blue Mode
	Auto Detect	on or off	Disable or Enable AutoDetect Mode
	OFF	on or off	Disable or Enable DCB Mode
DCB Demo		on or off	Disable or Enable Demo
Red		0-100	Red gain from Digital-register.
Green		0-100	Green gain from Digital-register.
Blue		0-100	Blue gain from Digital-register.
LowBlue Mod e	Reading / Office / Internet / Multi media / Off	on or off	Decrease blue light wave by controlling color tem perature.

Picture Boost




Bright Frame	on or off	Disable or Enable Bright Frame
 Frame Size	14-100	Adjust Frame Size
Brightness	0-100	Adjust Frame Brightness
Contrast	0-100	Adjust Frame Contrast
H. position	0-100	Adjust Frame horizontal Position
V. position	0-100	Adjust Frame vertical Position

Note: Adjust the brightness, contrast, and position of the Bright Frame for better viewing experience. **OSD Setup**



Language		Select the OSD language
Timeout	5-120	Adjust the OSD Timeout
DP Capability	1.1/1.2/1.4	Please be noted that only DP1.2/1.4 support Adaptive- Sync/AMD FreeSync function
H. Position	0-100	Adjust the horizontal position of OSD
V. Position	0-100	Adjust the vertical position of OSD
USB	on or off	For model need to turn on/off USB power during power saving
Transparence	0-100	Adjust the transparence of OSD
Break Reminder	on or off	Break reminder if the user continuously work for more t han 1hrs

Game Setting

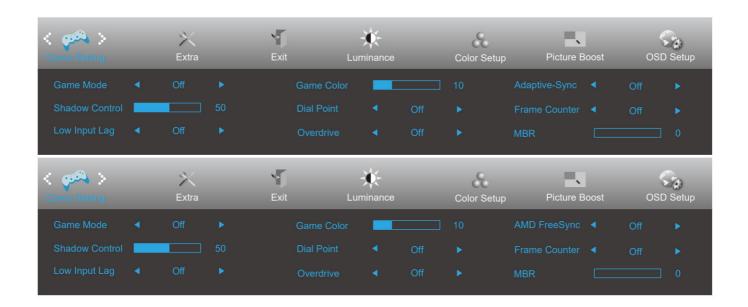

	T.	1		
		FPS	For playing FPS (First Person Shooters) games. Improves dark theme black level details.	
		RTS	For playing RTS (Real Time Strategy). Improves the i mage quality.	
	Game Mode	Racing	For playing Racing games, Provides fastest response t ime and high color saturation.	
		Gamer 1	User's preference settings saved as Gamer 1.	
		Gamer 2	User's preference settings saved as Gamer 2.	
		Gamer 3	User's preference settings saved as Gamer 3.	
		off	No optimization by Smart image game	
	Shadow Control	0-100	Shadow Control Default is 50, then end-user can adjust from 50 to 100 or 0 to increase contrast for clear picture. 1. If picture is too dark to be saw the detail clearly, adjusting from 50 to 100 for clear picture.	
			2. If picture is too white to be saw the detail clearly, adjusting from 50 to0 for clear picture	
(i i	Low Input Lag On/Off	On/Off	Turn off frame buffer to decrease input lag	
Asset		Weak		
	Overdrive	Medium	Adjust the response time.	
		Strong	Najust the response time.	
		Off		
	Game Color	0-20	Game Color will provide 0-20 level for adjusting saturat ion to get better picture.	
	MBR	0 ~ 20	Adjust the Motion Blur Reduction.	
	Dial Point	On/Off	The "Dial Point" function places an aiming indicator in the center of screen for helping gamers to play First Person Shooter (FPS) games with an accurate and precise aiming.	
	Adaptive-Sync/ A MD FreeSync (A vailable for select ive models)	On/Off	Adjust the Adaptive-Sync/AMD FreeSync.	
	Frame Counter	Off / Right-up / Right-Down / Left- Down / Left-Up	Display V frequency on the corner selected	



	Input Select		Select Input Signal Source
	Off timer	0-24hrs	Select DC off time
		Wide	
		4:3	
1	Image Ratio	1:1	Select image ratio for display.
		Movie1	
		Movie2	
	DDC/CI	yes or no	Turn ON/OFF DDC/CI Support
	Reset	yes or no	Reset the menu to default. (ENERGY STAR® a
	116361	ENERGY STAR® or no	vailable for selective models.)

Exit



			Exit		Exit the main OSD
--	--	--	------	--	-------------------

LED Indicator

Status	LED Color
Full Power Mode	White
Active-off Mode	Orange

Troubleshoot

Problem & Question	Possible Solutions
Troblem & &desiron	1 desible deficients
Power LED Is Not ON	Make sure the power button is ON and the Power Cord is properly connecte d to a grounded power outlet and to the monitor.
No images on the screen	Is the power cord connected properly? Check the power cord connection and power supply. Is the video cable connected correctly? (Connected using the VGA cable) Check the VGA cable connection. (Connected using the HDMI cable) Check the HDMI cable connection. (Connected using the DP cable) Check the DP cable connection. * VGA/HDMI/DP input is not available on every model. If the power is on, reboot the computer to see the initial screen (the login screen.) If the initial screen (the login screen) appears, boot the computer in the applicable mode (the safe mode for Windows 7/8/10) and then change the frequency of the video card. (Refer to the Setting the Optimal Resolution) If the initial screen (the login screen) does not appear, contact the Service Center or your dealer. Can you see "Input Not Supported" on the screen? You can see this message when the signal from the video card exceeds the maximum resolution and frequency that the monitor can handle properly. Adjust the maximum resolution and frequency that the monitor can handle properly. Make sure the AOC Monitor Drivers are installed.
Picture Is Fuzzy & Has Ghosti ng Shadowing Problem	Adjust the Contrast and Brightness Controls. Press hot-key (AUTO) to auto-adjust. Make sure you are not using an extension cable or switch box. We recommend plugging the monitor directly to the video card output connector on the back.
Picture Bounces, Flickers Or Wave Pattern Appears In The Picture	Move electrical devices that may cause electrical interference as far away fr om the monitor as possible. Use the maximum refresh rate your monitor is c apable of at the resolution you are using.
Monitor Is Stuck In Active Off- Mode"	The Computer Power Switch should be in the ON position. The Computer Video Card should be snugly fitted in its slot. Make sure the monitor's video cable is properly connected to the computer. In spect the monitor's video cable and make sure no pin is bent. Make sure your computer is operational by hitting the CAPS LOCK key on the keyboard while observing the CAPS LOCK LED. The LED should either turn ON or OFF after hitting the CAPS LOCK key.
Missing one of the primary col ors (RED, GREEN, or BLUE)	Inspect the monitor's video cable and make sure that no pin is damaged. Make sure the monitor's video cable is properly connected to the computer.
Screen image is not centered or sized properly	Adjust H-Position and V-Position or press hot-key (AUTO).
Picture has color defects (whi te does not look white)	Adjust RGB color or select desired color temperature.
Horizontal or vertical disturba nces on the screen	Use Windows 7/8/10 shut-down mode to adjust CLOCK and FOCUS. Press hot-key (AUTO) to auto-adjust.

Reau	Jlation	1 & S	ervice

Please refer to Regulation & Service Information which is in the CD manual or www.aoc.com (to find the model you purchase in your country and to fin d Regulation & Service Information in Support page.

Specification

General Specification

Panel	Model name	Q27V5CW/BK				
	Driving system	TFT Color LCD				
	Viewable Image Size	68.5 cm diagonal				
	Pixel pitch	0.2331mm(H) x 0.2331mm(V)				
	Display Color	16.7M Colors				
Others	Horizontal scan range	30k-140kHz (HDMI) 30k-114kHz (DP/USB C)				
	Horizontal scan Size(M aximum)	596.736mm				
	Vertical scan range	48-75Hz				
	Vertical Scan Size(Maxi mum)	335.664mm				
	Optimal preset resolutio	2560×1440@60Hz				
	Max resolution	2560×1440@75Hz				
	Plug & Play	VESA DDC2B/CI				
	Power Source	100-240V~, 50/60Hz, 1.5A				
		Typical(default brightness and contrast)	40W			
	Power Consumption	Max. (brightness = 100, contrast =100)	≤ 160W			
		Standby mode	≤ 0.5W			
PhysicalC	Connector Type	HDMI/DP/USB C/USB×2/Earphone				
haracterist ics	Signal Cable Type	Detachable				

Environm ental	Temperature	Operating	0°~ 40°
		Non-Operating	-25°~ 55°
	Humidity	Operating	10% ~ 85% (non-condensing)
		Non-Operating	5% ~ 93% (non-condensing)
	Altitude	Operating	0~ 5000 m (0~ 16404ft)
		Non-Operating	0~ 12192m (0~ 40000ft)




https://eprel.ec.europa.eu/qr/1209390

Preset Display Modes


STANDARD	RESOLUTION	HORIZONTAL FREQUE NCY(kHz)	VERTICAL FREQUENCY(Hz)		
	640×480@60Hz	31.469	59.94		
VGA	640×480@72Hz	37.861	72.809		
	640×480@75Hz	37.5	75		
	800×600@56Hz	35.156	56.25		
SVGA	800×600@60Hz	37.879	60.317		
SVGA	800×600@72Hz	48.077	72.188		
	800×600@75Hz	46.875	75		
	1024×768@60Hz	48.363	60.004		
XGA	1024×768@70Hz	56.476	70.069		
	1024×768@75Hz	60.023	75.029		
SXGA	1280×1024@60Hz	63.981	60.02		
SAGA	1280×1024@75Hz	79.976	75.025		
WXGA+	1440×900@60Hz	55.935	59.887		
WAGA+	1440×900@60Hz	55.469	59.901		
WSXGA	1680×1050@60Hz	65.29	59.954		
WSAGA	1680×1050@60Hz	64.674	59.883		
FHD	1920×1080@60Hz	67.5	60		
QHD	2560×1440@60Hz	88.787	59.951		
QHD	2560×1440@75Hz	66.636	74.968		
IBM MODES					
DOS	720×400@70Hz	31.469	70.087		
MAC MODES					
VGA	640×480@67Hz	35	66.667		
SVGA	832×624@75Hz	49.725	74.551		
XGA	1024×768@75Hz	60.241	74.927		

Pin Assignments

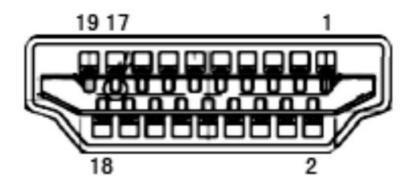

19-Pin Color Display Signal Cable

Pin N o.	Signal Name	Pin N o.	Signal Name	Pin N o.	Signal Name
1.	TMDS Data 2+	9.	TMDS Data 0-	17.	DDC/CEC Ground
2.	TMDS Data 2 Shield	10.	TMDS Clock +	18.	+5V Power
3.	TMDS Data 2-	11.	TMDS Clock Shield	19.	Hot Plug Detect
4.	TMDS Data 1+	12.	TMDS Clock-		
5.	TMDS Data 1Shield	13.	CEC		
6.	TMDS Data 1-	14.	Reserved (N.C. on device)		
7.	TMDS Data 0+	15.	SCL		
8.	TMDS Data 0 Shield	16.	SDA		

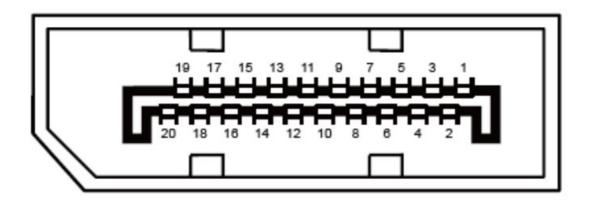

20-Pin Color Display Signal Cable

Pin No.	Signal Name	Pin No.	Signal Name
1	ML_Lane 3 (n)	11	GND
2	GND	12	ML_Lane 0 (p)
3	ML_Lane 3 (p)	13	CONFIG1
4	ML_Lane 2 (n)	14	CONFIG2
5	GND	15	AUX_CH(p)
6	ML_Lane 2 (p)	16	GND
7	ML_Lane 1 (n)	17	AUX_CH(n)
8	GND	18	Hot Plug Detect
9	ML_Lane 1 (p)	19	Return DP_PWR
10	ML_Lane 0 (n)	20	DP_PWR

Plug and Play

Plug & Play DDC2B Feature

This monitor is equipped with VESA DDC2B capabilities according to the VESA DDC STANDARD. It allows the monitor to inform the host system of its identity and, depending on the level of DDC used, communicate additional information about its display capabilities.

The DDC2B is a bi-directional data channel based on the I2C protocol. The host can request EDID information over the DDC2B channel.



Documents / Resources



AOC Q27V5CW-BK LCD Monitor [pdf] User Manual Q27V5CW-BK LCD Monitor, Q27V5CW-BK, LCD Monitor, Monitor

References

- AMD I together we advance Al
- 1 Homepage | AOC Monitors
- Learn about Windows Hello and set it up Microsoft Support

Manuals+,