

AODELAN ZC-3 Remote Controller User Manual

Contents

- [1 AODELAN ZC-3 Remote Controller](#)
- [2 Documents / Resources](#)

AODELAN ZC-3 Remote Controller

Remote Controller

ZC-3

User Manual

Thank you for purchasing an AODELAN product.

AODELAN ZC-3 contains a Remote Controller and a Receiver.

It was especially developed to wirelessly operate compatible Sony and Canon camcorders from a distance. By simply connecting the Receiver to the REMOTE or LANC terminal (2.5mm) on the camcorder and turning on the Remote Controller, you can easily operate many of the camcorder's functions wirelessly, such as controlling recording functions, adjusting the zoom, focus and iris. Wired control of these functions can also be achieved by connecting the Remote Controller directly to the camcorder with the supplied remote cable. Wired control and wireless remote control can be performed simultaneously to enable simultaneous operation of two camcorders.

Please read this user manual as well as the user manual provided with your camcorder which works with ZC-3 before use.

For your safety

Before using your product, please read the following safety precaution carefully to ensure correct and safe use.

- Do not disassemble or attempt to repair it.
- Do not use the product in the presence of flammable or explosive gas.
- The product is not dustproof, splashproof, nor waterproof. Make sure that no water, liquid, or dust can enter the product.
- Do not expose the product to hasty temperature changes in humid conditions as this could lead to condensation water in the unit.
- Do not expose the product to high temperature over 45 C (e.g. left in a car trunk).
- Do not use organic solvents such as alcohol, benzine or paint thinner to clean the product.
- Do not connect the product to camcorders or other devices that are not compatible
- Do not overly tighten the clamp. Doing so may cause

damage.

Getting Started

Installing batteries to the Remote Controller

1. Loosen the clamp knob and turn the clamp so that it does not block the battery compartment cover.
 2. Open the cover and install two AAA 1.5V batteries (available separately) as shown.
 3. Close the cover.
- Press the cover until it snaps shut.

Connecting to a camcorder (Supports both wired and wireless connections)

- Wired connection – by connecting the Remote Controller to the camcorder with the supplied remote cable.

1. Loosen the clamp knob on the Remote controller as far as required to insert the pan handle on the tripod.

2. Align the center of the pan handle with the V groove on the clamp, and rotate the clamp knob in the opposite direction to lock it firmly.

[Note] Depending on the pan handle attached, the Remote Controller may make contact with the grip of the pan handle when it is in use. Set the Remote Controller a little apart from the grip.

3. Be sure the camcorder is turned off; insert one end of the remote cable into the Remote Controller's REMOTE jack and the other end into the camcorder's REMOTE or LANC terminal.

[Note] Refer to the user manual of the camcorder for the location of the REMOTE or LANC terminal on the camcorder.

4. Turn on the camcorder and slide the switch on the side of the Remote Controller to "ON" position.

[Note] When a plug icon is displayed on the Remote Controller's screen, it indicates that a wired connection has been established and you can operate the camcorder through the remote control.

- Wireless connection – by connecting the Receiver to the camcorder.

1. Be sure the camcorder is turned off; insert the plug of Receiver into the camcorder's REMOTE or LANC terminal.
2. Turn on the camcorder and slide the switch on the side of the Remote Controller to "ON" position.

[Note] When a wireless icon is displayed on the Remote Controller's screen, it indicates that a wireless connection has been established and you can wirelessly control the camcorder through the Remote Controller.

Setting the shooting state of the camcorder

For details, refer to the camcorder's user manual.

- Depending on the camcorder used, you may need to activate the remote controller using the camcorder's menu.
- Canceling automatic adjustment of the camcorder's shooting state.

[Note] The switches used to turn on/off automatic adjustment of the shooting state on the camcorder varies depending on the


camcorder (for example, FULL AUTO switch, AUTO/MANUAL switch).

- If using an interchangeable lens type camcorder with the supplied lens, set the focus ring to electronic control. If using a lens other than the supplied lens, focusing may not be supported from this unit.
- If the camcorder is an interchangeable lens type, set the IRIS switch on the lens to auto adjustment (AUTO).

Names of Parts and Their Functions

Remote Controller

Documents / Resources

	<p>AODELAN ZC-3 Remote Controller [pdf] User Manual ZC-3 TX, ZC-3 RX, ZC-3 Remote Controller, Remote Controller, Controller</p>
---	---