



AOOGITF M666 MP3 Player User Manual

[Home](#) » [AOOGITF](#) » AOOGITF M666 MP3 Player User Manual 

Contents

- [1 AOOGITF M666 MP3 Player](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Parts and Controls](#)
- [5 Function Description](#)
- [6 Settings](#)
- [7 FREQUENTLY ASKED QUESTIONS](#)
- [8 Documents / Resources](#)

AOOGITF

AOOGITF M666 MP3 Player



Product Information

The product is a multi-functional device that offers various features and functions. It is available in multiple languages, including English, Deutsch, and Italiano.

Function Description:

- Provides a comprehensive user interface for easy navigation and operation
- Supports a wide range of functions and features
- Offers a high-quality display for clear visibility
- Equipped with advanced technology for efficient performance
- Includes a user-friendly control panel for convenient usage

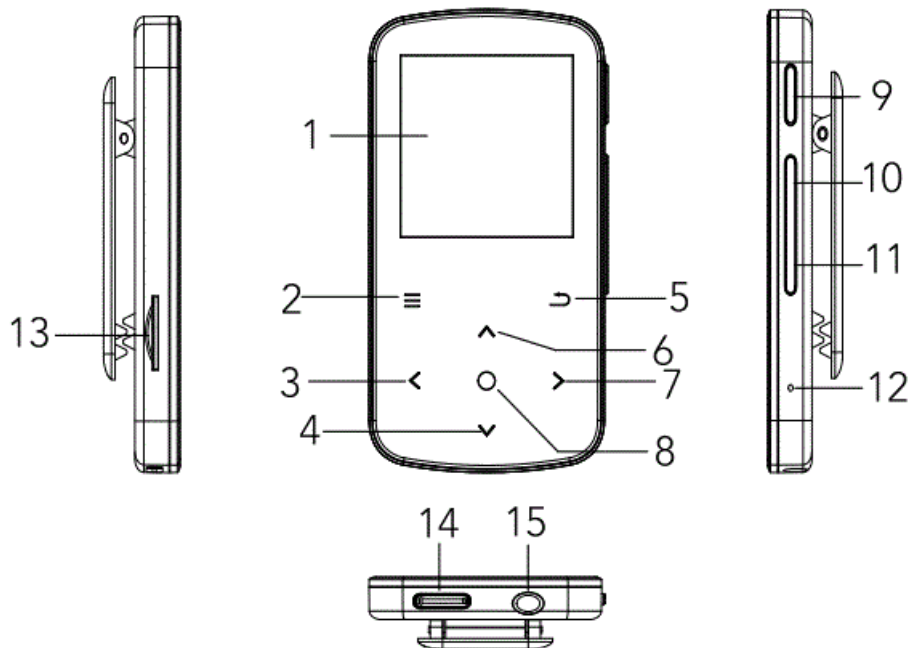 
Product Usage Instructions

To use the product effectively, please follow these instructions:

1. Choose the desired language by navigating to the Language option in the settings menu.
2. Select the preferred language from the available options, such as English, Deutsch, or Italiano.
3. Refer to the function description provided in the user manual to understand the capabilities of the product.
4. Ensure that the device is properly connected and powered on before using it.
5. Use the control panel or the provided remote control to navigate through the available functions.
6. For specific functions, refer to the corresponding section in the user manual for detailed instructions.
7. If you encounter any issues or require further assistance, please refer to the troubleshooting section in the user manual or contact our customer support.

We hope you enjoy using our product. For any additional information or queries, please refer to the user manual or contact our customer support.

Parts and Controls



1. Display screen
2. Menu
3. Previous song / fast rewind (Keep holding)
4. Page down key
5. Return key

6. Page up key
7. Next song / fast forward (Keep holding)
8. Play / Pause / Confirm button
9. On/off button (Holding for 3 seconds)
10. Volume plus key
11. Volume down key
12. Microphone
13. TF card slot
14. USB port
15. Headphone jack

Note: Please insert the TF card before use, otherwise the machine will not work normally!
Please choose a high-speed transfer TF card of CLASS10 and above to ensure the fluency of music appreciation.

Function Description

Charging and file transfer

1. Please use a standard 5V 1A power adapter or connect to a USB charging port of the computer for charging;
2. File data types such as music, e—books, etc. They can be transferred by the following methods
 - a: Through the memory card reader provided by us, use the computer to connect the card reader to transfer files to the TF card;
 - b: When the MP3 is turned on, it's connected to the computer through the data cable for data transmission. The transmission speed of this method is slow;

During the charging process, the charger and player will heat up to a certain extent, which is normal.

Update playlist

1. If the MP3 playlist is not automatically updated after a new music file is added, you can insert the TF card into the card reader and then connect with the computer to recover the TF card, and it will be updated automatically. (The previous music operation record will not be cleared by this action)
2. If new music files are added and the MP3 playlist is not automatically updated, please select “Update Playlist” in “Music” or “Settings”. (This process will clear the previous music operation records, such as “favorites”, “bookmarks”, etc.)
3. The update speed will slow down when the TF card file is large, please be patient.

AB repetition:

- long—press the ‘ key to set point A, and then press the ” > key to set point B when playing music/recording, the machine will automatically repeat between A and B. Press ” > ” again to cancel AB repeat.

Main interface

- The main interface includes Music, Ebook, Folder, Recorder, Settings, Bluetooth, FM, and Pedometer, press ”

O" to enter.

Music All songs:

- Display 5000 songs
- Last played: Support breakpoint play, continue playing from the breakpoint of the last play

Bluetooth




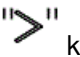
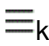


- **Bluetooth connection method:**

First press the "O" key to enter the "Bluetooth" display and switch to "On", then select "Search Device" to search for Bluetooth audio sources (such as Bluetooth headsets, and Bluetooth speakers), press the O" key to connect to the target device and the device name will display "Connected" to indicate that the device is connected successfully.


Notice:

- Bluetooth mode only supports music playing;
- Bluetooth mode will speed up battery consumption.

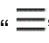
Folder

- In the folder, press the ""/"
- key to scroll through the file list, press the ""/"
- key to turn pages;
- Press the key to enter the delete operation, Press the ""/"
- key to select "Yes/No" to delete the current file, and press the 'O" key to confirm.

Ebook

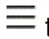
Autoplay: Press the "O" button on the e-book play interface, the e—book can be played automatically. press the button to make the following settings.

Bookmark

1. Bookmark opinion: Press the "O " key to enter the bookmark list, then press the 'O" key to bookmark the current page.
2. Press the "" key to choose whether to delete the selected bookmark

Note: Only support 'TXT' files

Pedometer

1. Press the "O" to start or stop
2. Press the  to view historical records and delete records; Set the height, weight, and step length

FM

- Press the key on the radio interface to pop up the radio sub—menu, and press 'Auto Search FM' first.
- Insert the earphone, press the '"/>' key to adjust the frequency;
- Press '"/>' key to adjust the radio station;

Preset stations:

- There are 30 built-in radio stations, click the "O" button to save the currently playing radio station;
- Press the "O" key to enter the "preset radio station" list, and press the ≡ key to choose whether to delete the radio station.
- Auto-Search FM: The machine will automatically filter out the radio stations with signals in the set frequency band, and then store them in the preset radio stations for easy switching.

Notice:

1. The radio function is only active on the 'radio' interface, turn it off when you quit
2. When listening to the radio, please insert a wired headset as an FM antenna;
3. Bluetooth doesn't support radio.

Recorder

- Press the "O" key to select "Start Voice Recording" to record, press the "↶" key to exit, and select 'Yes/No' to save the recording and return.
- Voice control recording (VAD): Press the "O" key to "turn on/off" the voice control mode.

Notice:

- This machine does not support background playback of recording files.

Settings

Select settings on the application side, and press "O" to enter the operation interface (including "Language, Date& time, Brightness, Backlight Timer, Idle Shutdown, Timed shutdown, Information, Storage status, Factory Settings, Update Playlist").

FREQUENTLY ASKED QUESTIONS

- Q: The player cannot be turned on?
A: Please check whether the battery is exhausted. You can connect it to a computer or a charger and try to turn it on again.
- Q: No sound can be heard in the headset?
A: Please check if the volume is set to zero. Please check if the earphone is correctly inserted into the earphone jack.
- Q: Severe noise?

A: Please check whether the plug of the earphone is clean. Dirt can cause noise. Please check whether the music file is damaged, you can try to play other music files to confirm. If the file is damaged, it may cause severe noise or skipping of sound.

- Q: FM signal reception is weak?

A: Please adjust the direction and position of the player, and extend the headphone cable. Please check if there is interference from electronic equipment nearby


- Q: Do you support displaying lyrics?

A: Yes, but you need to download the file in “LRC” format and check the song time corresponding to the lyrics. The song name and lyrics must be the same.

- Q: Why are there garbled characters in lyrics or e—books?

A: The encoding format may be wrong. Please select “UTF-8” encoding format when saving lyrics or e-books

Documents / Resources

	<p>AOOGITF M666 MP3 Player [pdf] User Manual LM-D-MP3-A001, C159HOVT6HL, M666, M666 MP3 Player, MP3 Player, Player</p>
---	--