




# APEX WAVES NI PXI-8183 PXI Embedded Controller Installation Guide

[Home](#) » [APEX WAVES](#) » APEX WAVES NI PXI-8183 PXI Embedded Controller Installation Guide 

## Contents

- [1 APEX WAVES NI PXI-8183 PXI Embedded Controller](#)
- [2 INSTALLATION GUIDE](#)
- [3 How to Remove the Controller from the PXI Chassis](#)
- [4 What If the NI PXI-8183 Does Not Boot](#)
- [5 Documents / Resources](#)
  - [5.1 References](#)
- [6 Related Posts](#)



## APEX WAVES NI PXI-8183 PXI Embedded Controller



## INSTALLATION GUIDE

### NI PXI-8183

This document contains information about installing your NI PXI-8183 controller in a PXI chassis.

For complete configuration and troubleshooting information (including information about BIOS setup, adding RAM, and so on), refer to the NI PXI-8183 User Manual. The manual is in PDF format on the documentation CD included with your controller, and the National Instruments Web site, [ni.com](http://ni.com).

## Installing the NI PXI-8183


This section contains general installation instructions for the NI PXI-8183. Consult your PXI chassis user manual for specific instructions and

### warnings

1. Plug in your chassis before installing the NI PXI-8183. The power cord grounds the chassis and protects it from electrical damage while you install the module. (Make sure the power switch is turned off.)

**Caution** To protect both yourself and the chassis from electrical hazards, leave the chassis powered off until you finish installing the NI PXI-8183 module.


2. Remove any filler panels blocking access to the system controller slot (Slot 1) in the chassis.
3. Touch the metal part of the case to discharge any static electricity that might be on your clothes or body.
4. Remove the protective plastic covers from the four bracket-retaining screws as shown in Figure 1.

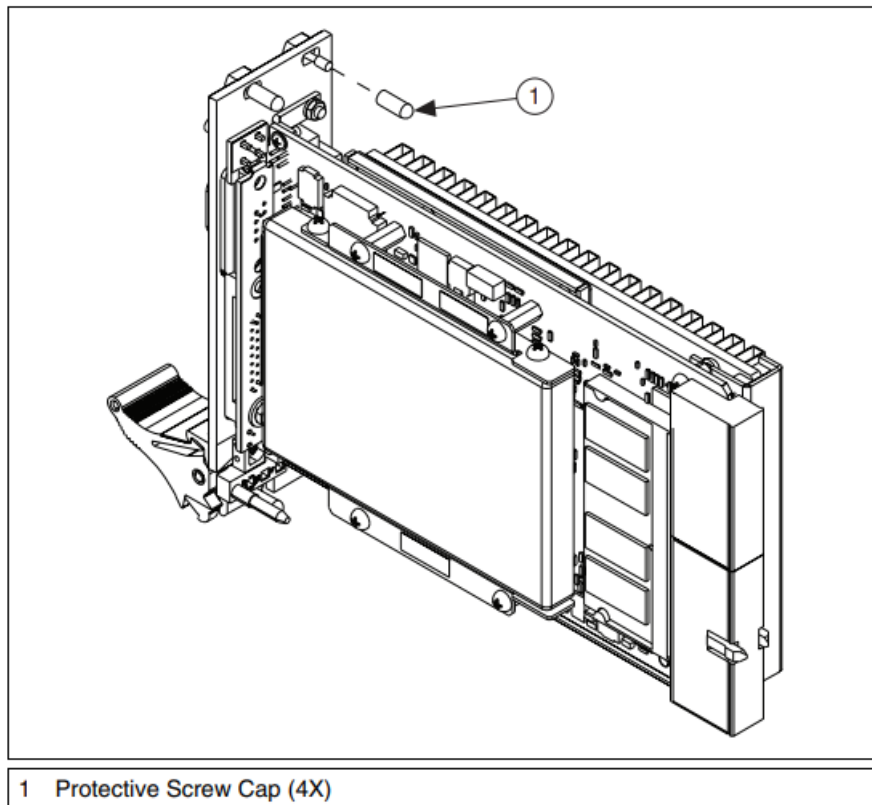

5. Make sure the injector/ejector handle is in its downward position.  
Align the NI PXI-8183 with the card guides on the top and bottom of the system controller slot  
**Caution** Do not raise the injector/ejector handle as you insert the NI PXI-8183. The module will not insert properly unless the handle is in its downward position so that it does not interfere with the injector rail on the chassis.
6. Hold the handle as you slowly slide the module into the chassis until the handle catches on the injector/ejector rail.
7. Raise the injector/ejector handle until the module firmly seats into the backplane receptacle connectors. The front panel of the NI PXI-8183 should be even with the front panel of the chassis.
8. Tighten the four bracket-retaining screws on the top and bottom of the front panel to secure the NI PXI-8183 to

the chassis.

9. Check the installation.
10. Connect the keyboard and mouse to the appropriate connectors. If you are using a PS/2 keyboard and a PS/2 mouse, use the Y-splitter adapter included with your controller to connect both to the PS/2 connector
11. Connect the VGA monitor video cable to the VGA connector.
12. Connect devices to ports as required by your system configuration.
13. Power on the chassis.
14. Verify that the controller boots. If the controller does not boot, refer to the What If the NI PXI-8183 Does Not Boot? section

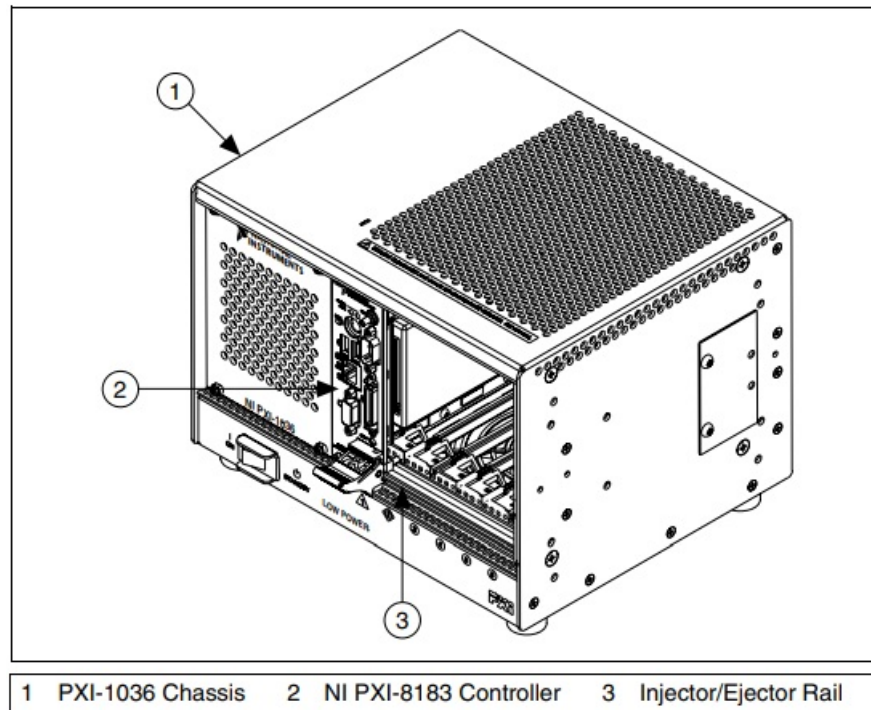

**Figure 2. NI PXI-8183 Controller Installed in a PXI Chassis**

Figure 2 shows an NI PXI-8183 installed in the system controller slot of a National Instruments PXI-1036 chassis. You can place PXI devices in any other slot.

## How to Remove the Controller from the PXI Chassis

The NI PXI-8183 controller is designed for easy handling. To remove the unit from the PXI chassis:

1. Power off the chassis.
2. Remove the bracket-retaining screws in the front panel.
3. Press the injector/ejector handle down.
4. Slide the unit out of the chassis.

## What If the NI PXI-8183 Does Not Boot

Several problems can cause a controller not to boot. Here are some things to look for and possible solutions.

### Things to Notice:

- Which LEDs come on? The Power OK LED should stay lit. The Drive LED should blink during boot as the disk

is accessed.

- What appears on the display? Does it hang at some particular point (BIOS, Operating System, and so on)? If nothing appears on the screen, try a different monitor. Does your monitor work with a different PC? If it hangs, note the last screen output that you saw for reference when consulting National Instruments technical support.
- What has changed about the system? Did you recently move the system? Was there electrical storm activity? Did you recently add a new module, memory chip, or piece of software?

## Things to Try

- Make sure the chassis is plugged in to a working power source.
- Check any fuses or circuit breakers in the chassis or other power supply (possibly a UPS).
- Make sure the controller module is firmly seated in the chassis.
- Remove all other modules from the chassis.
- Remove any nonessential cables or devices.
- Try the controller in a different chassis or a similar controller in this same chassis.
- Recover the hard drive on the controller. (Refer to the Hard Drive Recovery section in the NI PXI-8183 User Manual.)
- Clear the CMOS. (Refer to the System CMOS section in the NI PXI-8183 User Manual.)

For more troubleshooting information, refer to the NI PXI-8183 User

Manual. The manual is in PDF format on the documentation CD included with your controller, and the National Instruments Web site, [ni.com](http://ni.com).

## COMPREHENSIVE SERVICES

We offer competitive repair and calibration services, as well as easily accessible documentation and free downloadable resources.

## SELL YOUR SURPLUS

- We buy new, used, decommissioned, and surplus parts from every NI series.
- We work out the best solution to suit your individual needs.
  - Sell For Cash
  - Get Credit
  - Receive a Trade-In Deal

## OBSOLETE NI HARDWARE IN STOCK & READY TO SHIP

We stock New, New Surplus, Refurbished, and Reconditioned NI Hardware.

Request a Quote CLICK HERE ( [https://www.apexwaves.com/modular-systems/national-instruments/pxi-controllers/PXI-8183?aw\\_referrer=pdf](https://www.apexwaves.com/modular-systems/national-instruments/pxi-controllers/PXI-8183?aw_referrer=pdf) ) PXI-8183

National Instruments, NI, ni.com, and LabVIEW are trademarks of National Instruments Corporation. Refer to the Terms of Use section on [ni.com/legal](http://ni.com/legal) for more information about National Instruments trademarks. Other product and company names mentioned herein are trademarks or trade names of their respective companies. For patents covering National Instruments products, refer to the appropriate location: Help»Patents in your software, the patents.txt file on your CD, or [ni.com/patents](http://ni.com/patents).

© 2008 National Instruments Corporation. All rights reserved.

Bridging the gap between the manufacturer and your legacy test system.

## CONTACT

- **TeLL:** 1-800-915-6216
- **WEB:** [www.apexwaves.com](http://www.apexwaves.com)
- **E-MAIL:** [sales@apexwaves.com](mailto:sales@apexwaves.com)

All trademarks, brands, and brand names are the property of their respective owners.

## Documents / Resources



**[APEX WAVES NI PXI-8183 PXI Embedded Controller](#)** [pdf] Installation Guide  
NI PXI-8183 PXI Embedded Controller, NI PXI-8183, PXI Embedded Controller, Embedded Controller, Controller

## References

-  [Engineer Ambitiously - NI](#)
-  [Legal Information - NI](#)
-  [National Instruments Patents - NI](#)
-  [PXI-8183 National Instruments PXI Controller | Apex Waves](#)

Manuals+.