



## APH 1-03990-01 Push Button Padlock Instructions

[Home](#) » [APH](#) » APH 1-03990-01 Push Button Padlock Instructions 

### Contents

- [1 APH 1-03990-01 Push Button Padlock](#)
- [2 Instructions](#)
- [3 Documents / Resources](#)
  - [3.1 References](#)
- [4 Related Posts](#)



### APH 1-03990-01 Push Button Padlock



This sheet explains how to use your new push button padlock. Two five-number combination cards are enclosed. Remove them and keep them in a safe place, perhaps in a filing cabinet or fireproof safe. The card is for large print and braille readers. The card has a clipped orientation corner. Holding the card so the clipped corner is on the upper right, you can read the lock's combination. The numbers read downward, matching the numbers on the


lock. Numbers 1-5 are on the left side and numbers 6-0 on the right side. A small square is printed near each number. If your combination uses a number, the square to the right of numbers 1-5 is punched out and the square to the left of numbers 6-0 is punched out. There should be a total of five squares punched out for your lock's combination.

## Instructions

Remove the lock from the manufacturer's package.

**IMPORTANT:** Remove the tag attached to the “u” shaped shackle of the lock. It has your combination printed on it. You can keep it with your detached combination card or throw it away. To begin, be sure all buttons are flush on the backside of the lock, meaning all buttons are raised on the front. From the front, push down any number that is in your combination. Numbers donot have to be pushed in any preset sequence. Push the lever on the bottom of the lock to the right side to release the latch. Pull the shackle open. Place the shackle on the item you wish to lock and push the shackle closed. To lock, push all buttons flush with the backside again.

## Documents / Resources



**Push Button Padlock**  
1-03990-01

Thank you for purchasing an APH product.

This sheet explains how to use your new push button padlock. Read the number combination cards are enclosed. Remove them and tape them to a safe dial, postbox or filing cabinet or to your safe.

This padlock is for large green and brass readers. The card has a silver coloration corner. Marking the card as the silver corner and the right side. The card has a silver coloration corner. Marking the card as the silver corner and the right side. The card has a silver coloration corner. Marking the card as the silver corner and the right side.

1-03990-01, Push Button Padlock, 1-03990-01 Push Button Padlock

**APH 1-03990-01 Push Button Padlock** [pdf] Instructions

1-03990-01, Push Button Padlock, 1-03990-01 Push Button Padlock

**Instructions**

Remove the lock from the manufacturer's package. (PUSH) 1-01. Remove the top sheet and the "V" shaped marks of the lock. It has four

## References

- [!\[\]\(c6a8736a601a632e2c96605cf66055ed\_img.jpg\) APH Home | American Printing House](#)