



# apogee INSTRUMENTS MQ-210 Underwater Quantum Meter Owner's Manual

[Home](#) » [apogee INSTRUMENTS](#) » apogee INSTRUMENTS MQ-210 Underwater Quantum Meter Owner's Manual



## Contents

- 1 apogee INSTRUMENTS MQ-210 Underwater Quantum Meter
- 2 CERTIFICATE OF COMPLIANCE
- 3 INTRODUCTION
- 4 SENSOR MODELS
- 5 SPECIFICATIONS
- 6 Calibration Traceability
- 7 Spectral Response
- 8 Temperature Response
- 9 Cosine Response Mean
- 10 DEPLOYMENT AND INSTALLATION
- 11 BATTERY INSTALLATION AND REPLACEMENT
- 12 OPERATION AND MEASUREMENT
- 13 Spectral Errors and Yield Photon Flux Measurements
- 14 APOGEE AMS SOFTWARE
- 15 MAINTENANCE AND RECALIBRATION
- 16 TROUBLESHOOTING AND CUSTOMER SUPPORT
- 17 RETURN AND WARRANTY POLICY
- 18 Documents / Resources
  - 18.1 References
- 19 Related Posts



## apogee INSTRUMENTS MQ-210 Underwater Quantum Meter




### CERTIFICATE OF COMPLIANCE

#### EU Declaration of Conformity

This declaration of conformity is issued under the sole responsibility of the manufacturer: Apogee Instruments, Inc. 721 W 1800 N Logan, Utah 84321 USA for the following product(s)

- **Models:** MQ-210
- **Type:** Quantum Meter

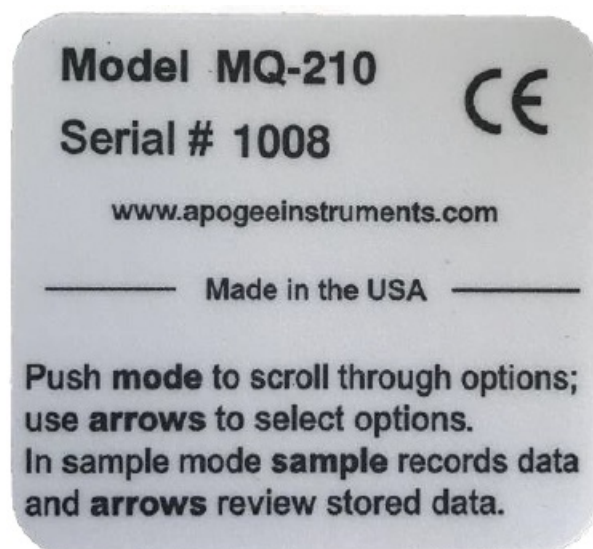

The object of the declaration described above is in conformity with the relevant Union harmonization legislation:

- 2014/30/EU Electromagnetic Compatibility (EMC) Directive

- 2011/65/EU Restriction of Hazardous Substances (RoHS 2) Directive
- 2015/863/EU Amending Annex II to Directive 2011/65/EU (RoHS 3)

#### **Standards referenced during compliance assessment:**

- EN 61326-1:2013 Electrical equipment for measurement, control, and laboratory use – EMC requirements
- EN 50581:2012 Technical documentation for the assessment of electrical and electronic products with respect to the restriction of hazardous substances

Please be advised that based on the information available to us from our raw material suppliers, the products manufactured by us do not contain, as intentional additives, any of the restricted materials including lead (see note below), mercury, cadmium, hexavalent chromium, polybrominated biphenyls (PBB), polybrominated biphenyls (PBDE), bis (2-Ethylhexyl) phthalate (DEHP), butyl benzyl phthalate (BBP), dibutyl phthalate (DBP), and diisobutyl phthalate (DIBP). However, please note that articles containing greater than 0.1 % lead concentration are RoHS 3 compliant using exemption 6c. Further note that Apogee Instruments does not specifically run any analysis on our raw materials or end products for the presence of these substances, but we rely on the information provided to us by our material suppliers.

#### **Signed for and on behalf of:**



- Apogee Instruments, February 2022
- Bruce Bugbee President
- Apogee Instruments, Inc.

## **INTRODUCTION**

Radiation that drives photosynthesis is called photosynthetically active radiation (PAR) and is typically defined as total radiation across a range of 400 to 700 nm. PAR is often expressed as photosynthetic photon flux density (PPFD): photon flux in units of micromoles per square meter per second ( $\mu\text{mol m}^{-2} \text{s}^{-1}$ , equal to microEinsteins per square meter per second) summed from 400 to 700 nm (total number of photons from 400 to 700 nm). While Einsteins and micromoles are equal (one Einstein = one mole of photons), the Einstein is not an SI unit, so expressing PPFD as  $\mu\text{mol m}^{-2} \text{s}^{-1}$  is preferred. The acronym PPF is also widely used and refers to the photosynthetic photon flux. The acronyms PPF and PPFD refer to the same parameter. The two terms have co-evolved because there is not a universal definition of the term “flux”. Some physicists define flux as per unit area per unit time. Others define flux only as per unit time. We have used PPFD in this manual because we feel that it is better to be more complete and possibly redundant. Sensors that measure PPFD are often called quantum sensors due to the quantized nature of radiation. A quantum refers to the minimum quantity of radiation, one photon, involved in physical interactions (e.g., absorption by photosynthetic pigments). In other words, one photon is a single quantum of radiation.

Quantum sensors are increasingly used to measure PPFD underwater, which is important for biological, chemical, and physical processes in natural waters and in aquariums. When a quantum sensor that was calibrated in the air is used to make underwater measurements, the sensor reads low. This phenomenon is called the immersion effect and happens because the refractive index of water (1.33) is greater than air (1.00). The higher refractive index of water causes more light to be backscattered (or reflected) out of the sensor in water than in air (Smith, 1969; Tyler and Smith, 1970). As more light is reflected, less light is transmitted through the diffuser to the detector, which causes the sensor to read low. Without correcting for this effect, underwater measurements are only relative, which makes it difficult to compare light in different environments. The immersion effect correction factor for Apogee original quantum sensors (model MQ-200 and SQ-200 series) is 1.08. The MQ-210 quantum meter is designed for underwater measurements and already applies the immersion effect correction factor to the

meter's readings through firmware. The meter consists of a waterproof quantum sensor attached via waterproof cable to a handheld meter.

**Note: The handheld meter is not waterproof, only the sensor and cable are waterproof.**

MQ meters consist of a handheld meter and a dedicated quantum sensor that is connected by cable to an anodized aluminum housing. Sensors consist of a cast acrylic diffuser (filter), and photodiode, and are potted solid with no internal air space. MQ series quantum meters provide a real-time PPFD reading on the LCD display, that determines the radiation incident on a planar surface (does not have to be horizontal), where the radiation emanates from all angles of a hemisphere. MQ series quantum meters include manual and automatic data logging features for making spot-check measurements or calculating daily light integral (DLI).

## **SENSOR MODELS**

- Apogee MQ series quantum meters covered in this manual are self-contained and come complete with a handheld meter and sensor.
- A sensor's model number and serial number are located on a label on the backside of the handheld meter.


## **SPECIFICATIONS**

	<b>MQ-210</b>
Calibration Uncertainty	± 5 % (see calibration Traceability below)
Measurement Repeatability	Less than 1 %
Long-term Drift (Non-stability)	Less than 2 % per year
Non-linearity	Less than 1 % (up to 3000 $\mu\text{mol m}^{-2} \text{s}^{-1}$ )
Response Time	Less than 1 ms
Field of View	180°
Spectral Range	410 to 655 nm (wavelengths where response is greater than 50 % of maximum; see Spectral Response below)
Directional (Cosine) Response	± 5 % at 75° zenith angle (see Cosine Response below)
Temperature Response	0.06 ± 0.06 % per C (see Temperature Response below)
Operating Environment	0 to 50 C; less than 90 % non-condensing relative humidity up to 30 C; less than 70 % non-condensing relative humidity from 30 to 50 C; separate sensors can be submerged in water up to depths of 30 m
Meter Dimensions	126 mm length; 70 mm width; 24 mm height
Sensor Dimensions	24 mm diameter; 33 mm height
Mass	180 g
Cable	2 m of two conductors, shielded, twisted pair wire; TPR jacket (high water resistance, high UV stability, flexibility in cold conditions)

## Calibration Traceability

Apogee MQ series quantum meters are calibrated through side-by-side comparison to the mean of four transfer standard quantum sensors under high output T5 cool white fluorescent lamps. The reference quantum sensors are recalibrated with a 200 W quartz halogen lamp traceable to the National Institute of Standards and Technology (NIST).


## Spectral Response

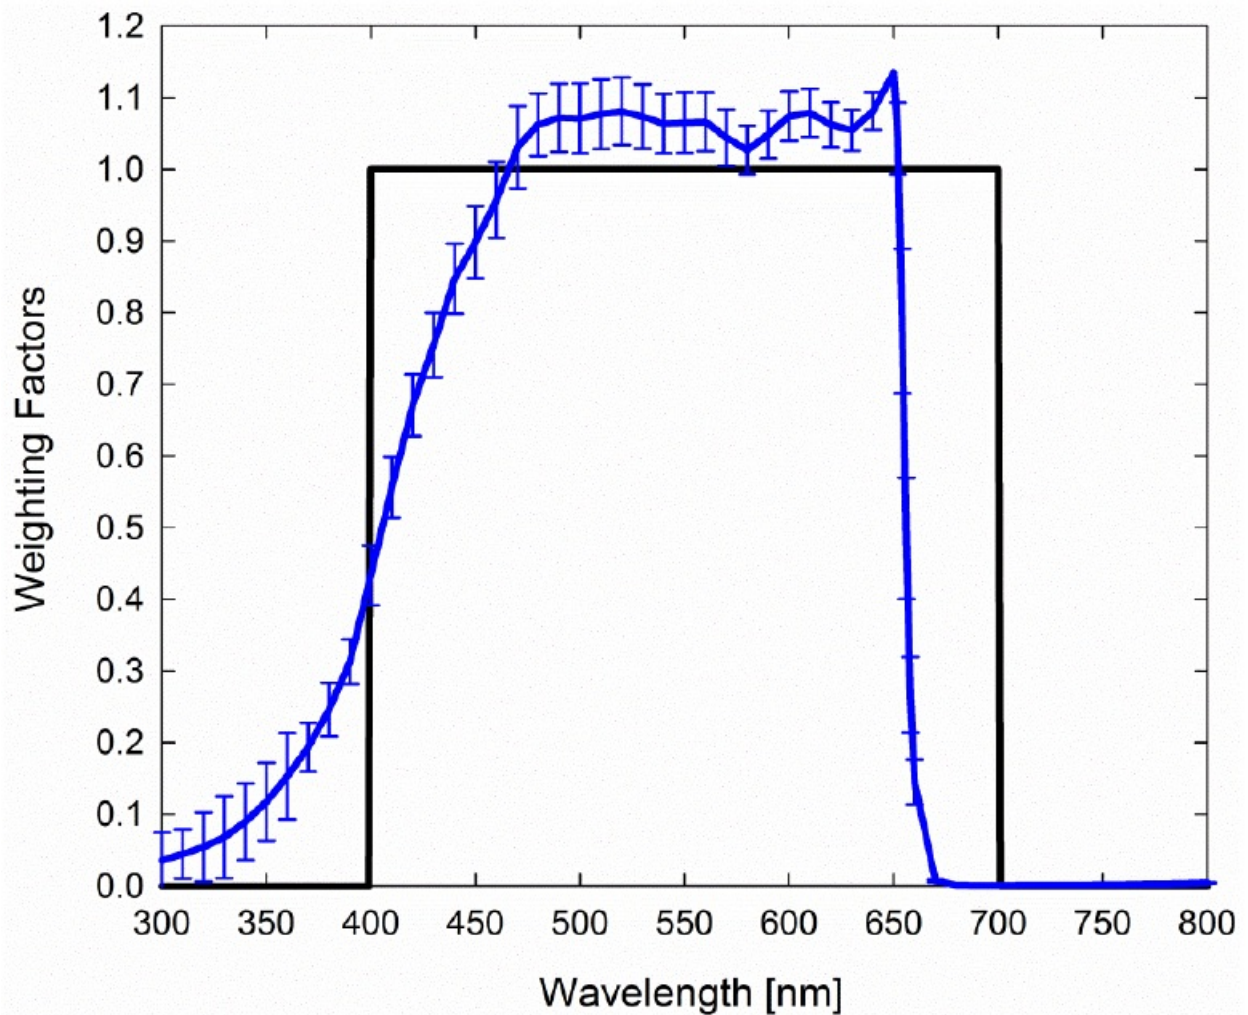

Mean spectral response of six SQ series quantum sensors (error bars represent two standard deviations above and below mean) compared to PPFD weighting function. Spectral response measurements were made at 10 nm increments across a wavelength range of 300 to 800 nm in a monochromator with an attached electric light source. Measured spectral data from each quantum sensor were normalized by the measured spectral response of the monochromator/electric light combination, which was measured with a spectroradiometer.


### Temperature Response



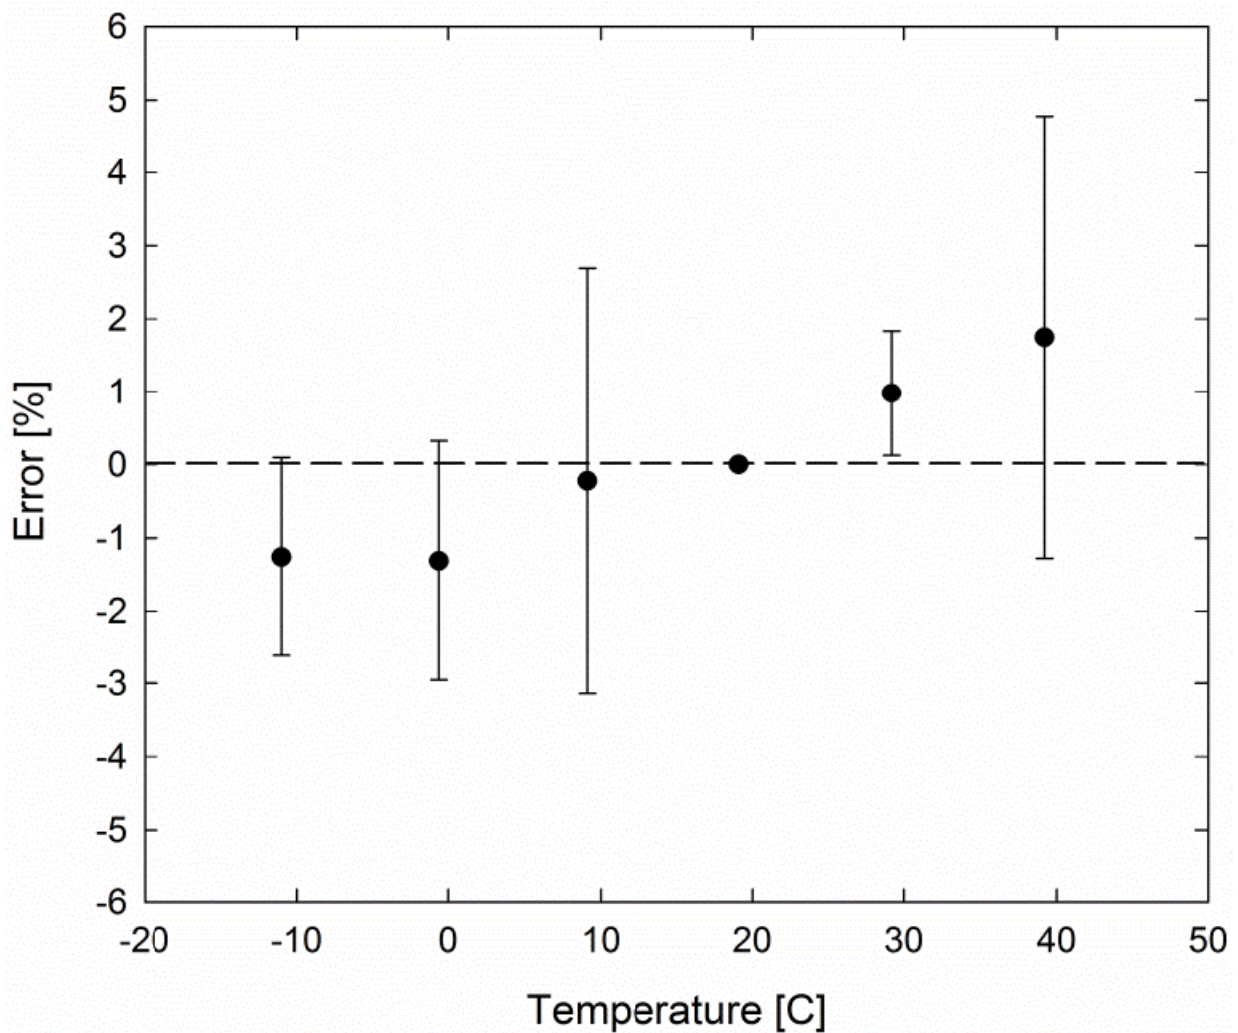


Mean temperature response of eight SQ series quantum sensors (errors bars represent two standard deviations above and below mean). Temperature response measurements were made at 10 C intervals across a temperature range of approximately -10 to 40 C in a temperature-controlled chamber under a fixed, broad-spectrum, electric lamp. At each temperature set point, a spectroradiometer was used to measure light intensity from the lamp and all quantum sensors were compared to the spectroradiometer. The spectroradiometer was mounted external to the temperature control chamber and remained at room temperature during the experiment

### **Cosine Response Mean**

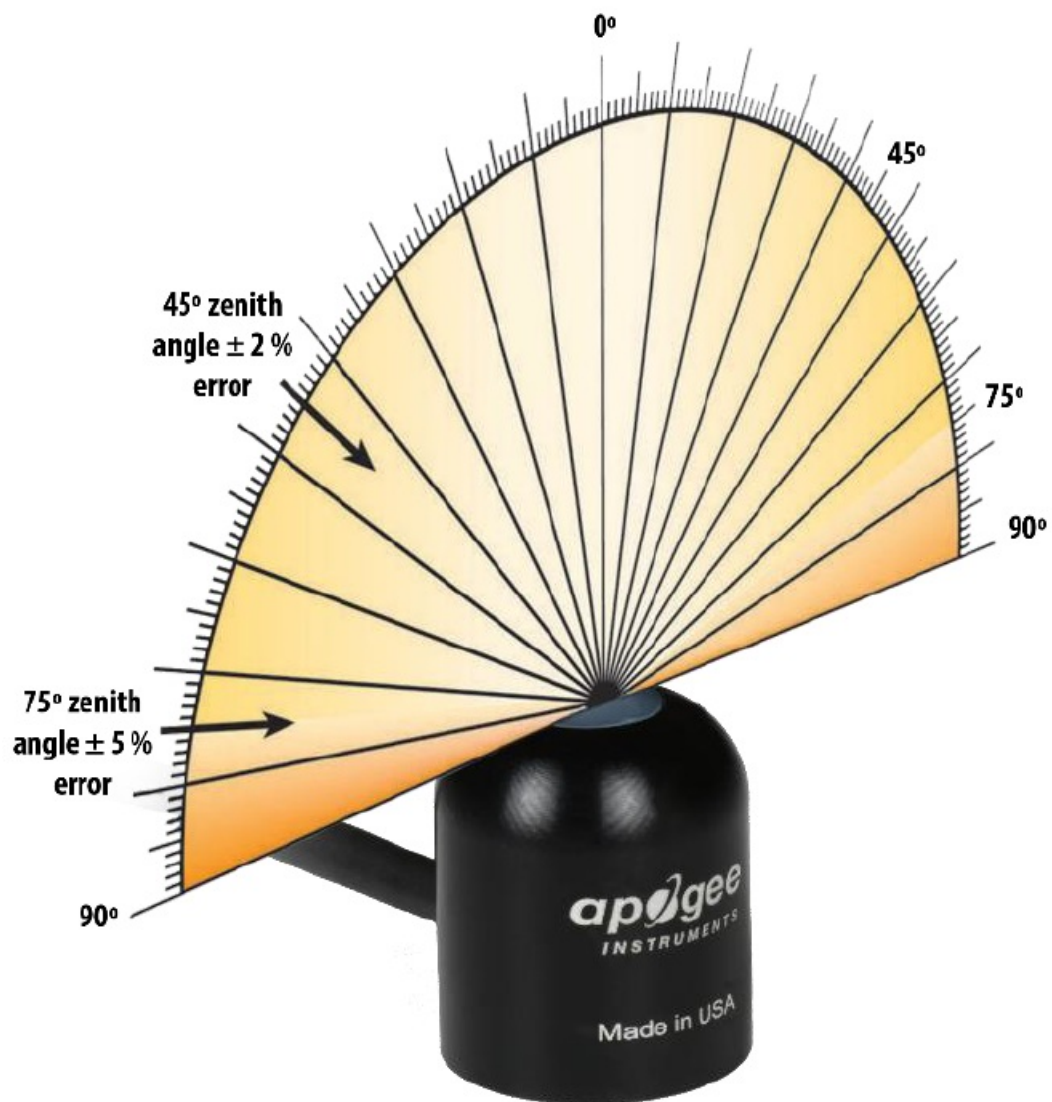

Directional, or cosine, the response is defined as the measurement error at a specific angle of radiation incidence. Error for Apogee SQ series quantum sensors is approximately  $\pm 2\%$  and  $\pm 5\%$  at solar zenith angles of 45° and 75°, respectively.



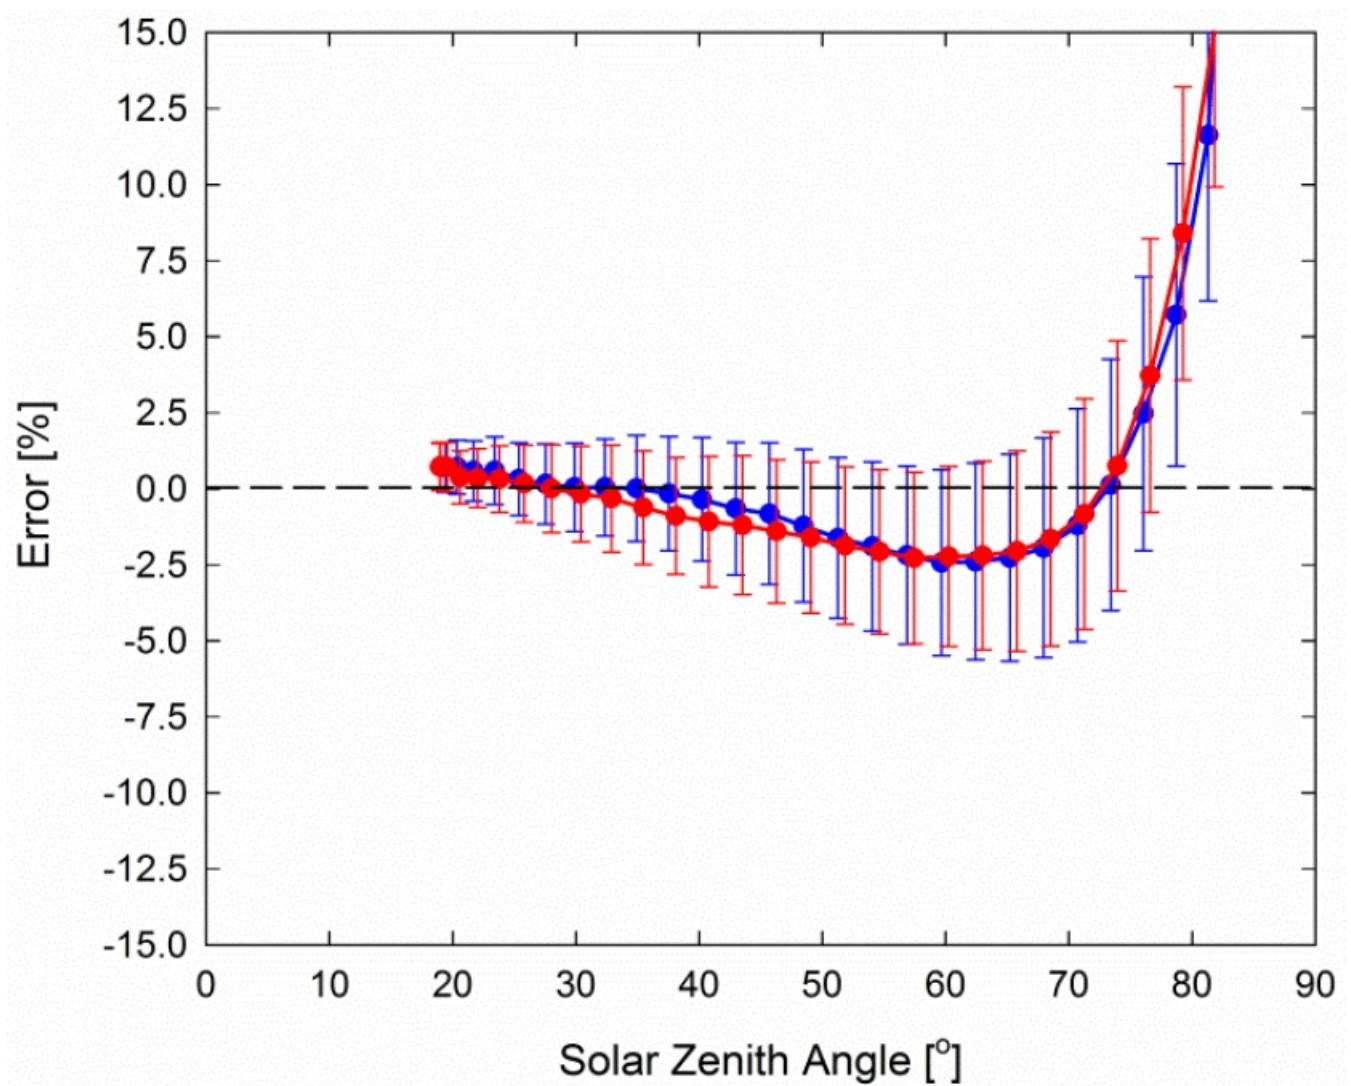

Mean cosine response of twenty-three SQ series quantum sensors (error bars represent two standard deviations above and below mean). Cosine response measurements were made by a direct side-by-side comparison to the mean of four reference thermopile pyranometers, with solar zenith angle-dependent factors applied to convert total shortwave radiation to PPFD. Blue points represent the AM response and red points represent the PM response.

## DEPLOYMENT AND INSTALLATION

Apogee MQ series quantum meters are designed for spot-check measurements and calculation of daily light integral (DLI; the total number of photons incident on a planar surface over the course of a day) through the built-in logging feature. To accurately measure the PPFD incident on a horizontal surface, the sensor must be level. The AL-100 accessory leveling plate is recommended for use with the MQ-210 to ensure the sensor is level when attached to a cross-arm. The bubble level in the plate makes leveling simple and accurate.



**MQ-210 sensor attached to an AL-100 leveling plate.**

The AM-310 Sensor Wand accessory incorporates a mounting fixture at the end of an extendable telescopic wand (up to 33 inches/84 cm). The wand is not suited for wet environments; however, it is excellent for greenhouses and growth chambers. Its ability to retract to a smaller size also makes it ideal for travel use.



AM-310 Extendable Sensor  
Wand

The AM-320 Saltwater Submersible Sensor Wand accessory incorporates a mounting fixture at the end of a 40-inch segmented fiberglass wand and is well-suited for saltwater use. The wand allows the user to place the sensor in hard-to-reach areas such as aquariums.




AM-320 Saltwater Submersible  
Sensor Wand

**NOTE:** The handheld meter portion of the instrument is not waterproof. Do not get the meter wet or leave the meter in high humidity environments for prolonged periods of time. Doing so can lead to corrosion that could void the warranty.

## BATTERY INSTALLATION AND REPLACEMENT

Use a Phillips head screwdriver to remove the screw from the battery cover. Remove the battery cover by slightly lifting and sliding the outer edge of the cover away from the meter. To power the meter, slide the included battery (CR2320) into the battery holder, after removing the battery door from the meter's back panel.

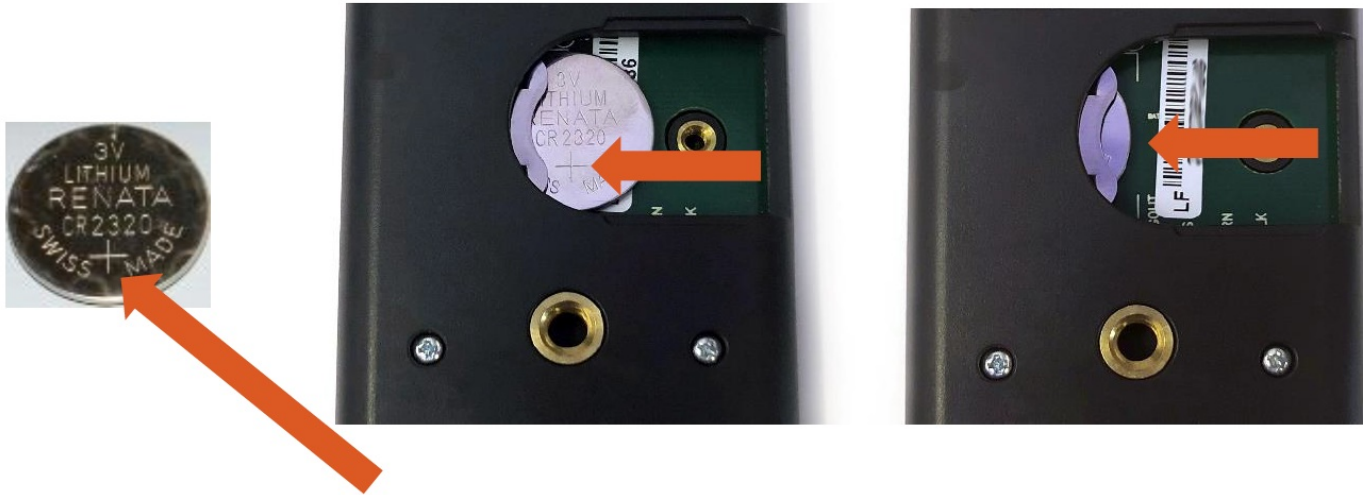


The positive side (designated by a “+” sign) should be facing out from the meter circuit board.

**NOTE:** The battery cradle can be damaged by using an incorrectly sized battery. If the battery cradle is damaged, the circuit board will need to be replaced and the warranty will be void. To avoid this costly problem, use only a CR2320 battery.

### Battery Removal



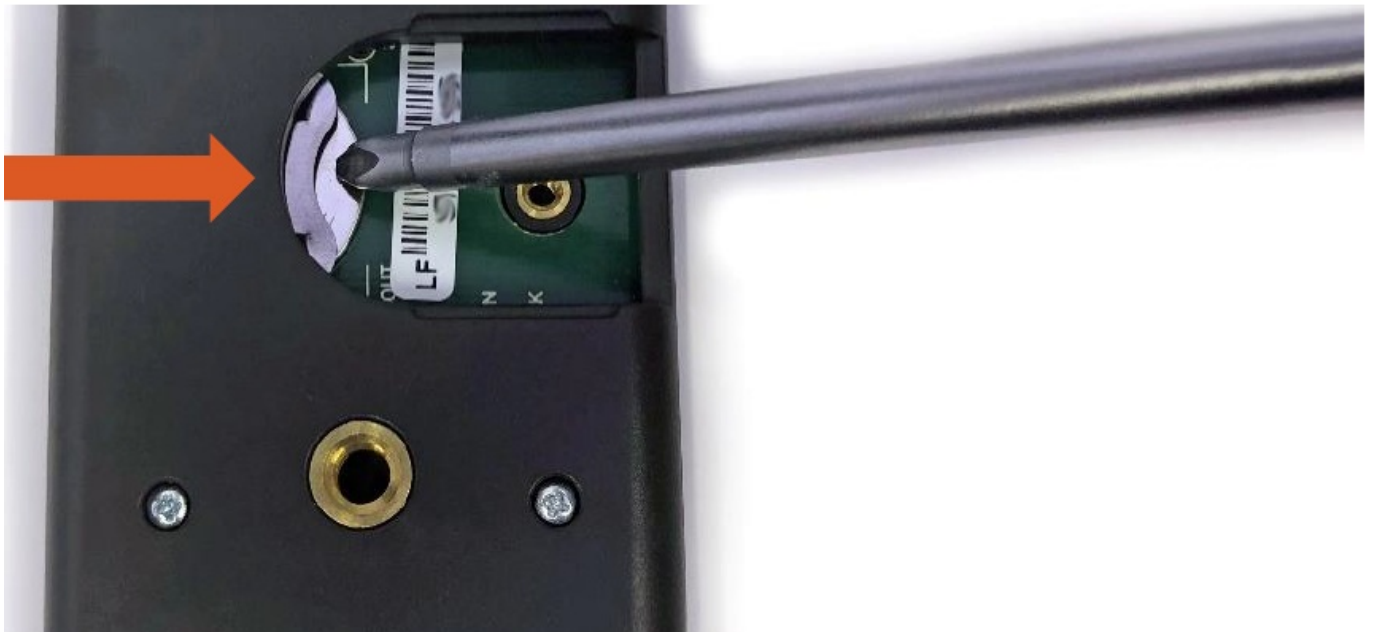


Press down on the battery with a screwdriver or similar object. Slide battery out




If the battery is difficult to move, turn the meter on its side so that the opening for the battery is facing downward and tap the meter downward against an open palm to dislodge the battery enough so that it can be removed with your thumb to slide the battery out of the battery holder.

## OPERATION AND MEASUREMENT

MQ series quantum meters are designed with a user-friendly interface allowing quick and easy measurements.

-  • Press the power button to activate the LCD display. After two minutes of non-activity, the meter will revert to sleep mode and the display will shut off to conserve battery life.
-  • Press the mode button to access the main menu, where manual or automatic logging is selected, and where the meter can be reset.
-  • Press the sample button to log a reading while taking manual measurements.
-  • Press the up button to make selections in the main menu. This button is also used to view and scroll through the logged measurements on the LCD display.
-  • Press the down button to make selections in the main menu. This button is also used to view and scroll through the logged measurements on the LCD display.

The LCD display consists of the total number of logged measurements in the upper right-hand corner, the real-time PPFD value in the center, and the selected menu options along the bottom

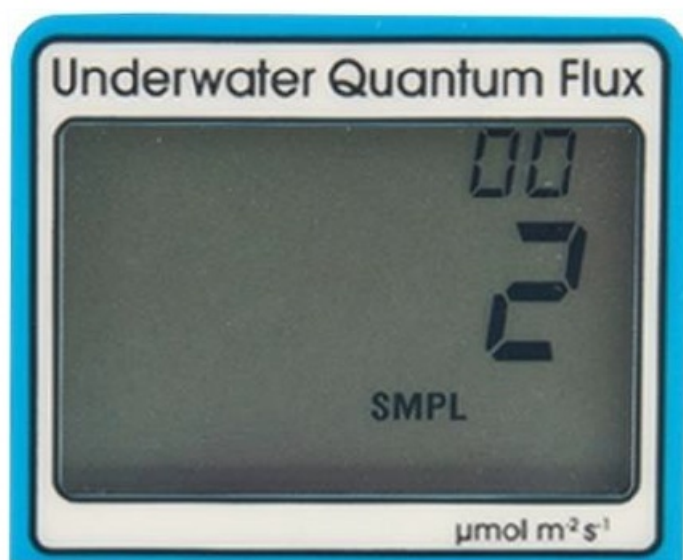

**Calibration:** To choose between sunlight and electric light calibration, push the mode button once and use the up/down buttons to make the appropriate selection (SUN or ELEC). Once the desired mode is blinking, press the mode button three more times to exit the menu.

**Logging:** To choose between manual or automatic logging, push the mode button twice and use the up/down buttons to make the appropriate selection (SMPL or LOG). Once the desired mode is blinking, press the mode button two more times to exit the menu. When in SMPL mode press the sample button to record up to 99 manual measurements (a counter in the upper right-hand corner of the LCD display indicates the total number of saved measurements). When in LOG mode the meter will power on/off to make a measurement every 30 seconds. Every 30 minutes the meter will average the sixty 30-second measurements and record the averaged value to memory. The meter can store up to 99 averages and will start to overwrite the oldest measurement once there are 99 measurements. For every 48 averaged measurements (making a 24-hour period), the meter will also store an integrated daily total in moles per meter squared per day (mol m<sup>-2</sup> d<sup>-1</sup>).

**Reset:** To reset the meter, in either SMPL or LOG mode, push the mode button three times (RUN should be blinking), then while pressing the down button, press the mode button once. This will erase all the saved measurements in memory, but only for the selected mode. That is, performing a reset when in SMPL mode will only erase the manual measurements, and performing a reset when in LOG mode will only erase the automatic measurements.

**Review/Download Data:** Each of the logged measurements in either SMPL or LOG mode can be reviewed on




the LCD display by pressing the up/down buttons. To exit and return to the real-time readings, press the sample button. Note that the integrated daily total values are not accessible through the LCD and can only be viewed by downloading to a computer.

Downloading the stored measurements will require the AC-100 communication cable and software (sold separately). The meter outputs data using the UART protocol and requires the AC-100 to convert from UART to USB, so standard USB cables will not work. Set-up instructions and software can be downloaded from the Apogee website <http://www.apogeeinstruments.com/ac-100-communication-cable/>

(SMPL) 99 Sample Measurements	(LOG) 99 Log Measurements	(LOG) 99 Daily Total Measurements
Viewable on meter LCD & downloadable		Downloadable Only

## Spectral Errors and Yield Photon Flux Measurements

The MQ-210 Apogee quantum meters are calibrated to measure PPFD for electric light. The sensor's calibration source is T5 cool white fluorescent lamps and will read approximately 12 % low in sunlight. In addition to PPFD measurements, Apogee MQ series quantum meters can also be used to measure yield photon flux density (YPFD): photon flux weighted according to the plant photosynthetic action spectrum (McCree, 1972) and summed. YPFD is also expressed in units of  $\mu\text{mol m}^{-2} \text{s}^{-1}$ , and is similar to PPFD, but is typically more closely correlated to photosynthesis than PPFD. PPFD is usually measured and reported because the PPFD spectral weighting function (equal weight given to all photons between 400 and 700 nm; no weight given to photons outside this range) is easier to define and measure, and as a result, PPFD is widely accepted. The conversion factor to calculate YPFD from the PPFD measurements displayed on the LCD is 0.89 for electric light measurements. The weighting functions for PPFD and YPFD are shown in the graph below, along with the spectral response of Apogee quantum sensors. The closer the spectral response matches the defined PPFD or YPFD spectral weighting functions, the smaller spectral errors will be. The table below provides spectral error estimates for PPFD and YPFD measurements from light sources different than the calibration source. The method of Federer and Tanner (1966) was used to determine spectral errors based on the PPFD and YPFD spectral weighting functions, measured sensor spectral response, and radiation source spectral outputs (measured with a spectroradiometer). This method calculates spectral error and does not consider calibration, cosine, and temperature errors. Federer, C. A., and C. B. Tanner, 1966. Sensors for measuring light available for photosynthesis. *Ecology* 47:654-657. McCree, K. J., 1972. The action spectrum, absorptance, and quantum yield of photosynthesis in crop plants. *Agricultural Meteorology* 9:191-216.

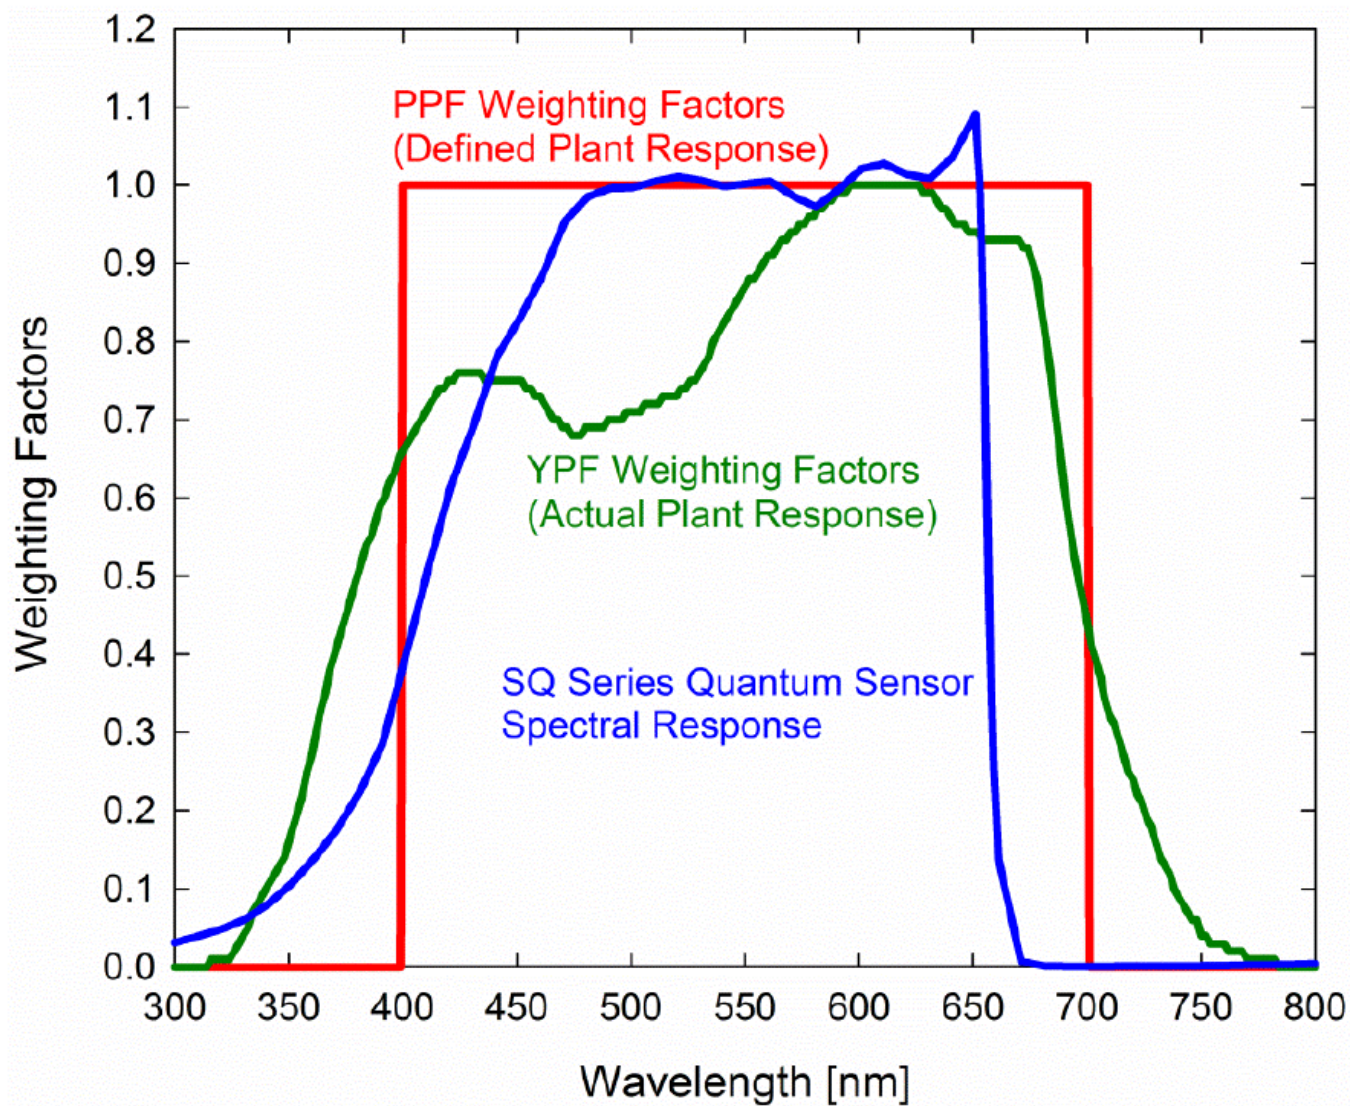

Radiation weighting factors for PPFD (defined plant response to radiation), YPFD (measured plant response to radiation), and Apogee quantum sensors (sensor sensitivity to different wavelengths of radiation).

#### Spectral Errors for PPFD and YPFD Measurements with Apogee MQ Series Quantum Meters



<b>Radiation Source (Error Calculated Relative to Sun, Clear Sky)</b>	<b>PPFD Error [%]</b>	<b>YPFD Error [%]</b>
Sun (Clear Sky)	0.0	0.0
Sun (Cloudy Sky)	1.4	1.6
Reflected from Grass Canopy	5.7	-6.3
Reflected from Deciduous Canopy	4.9	-7.0
Reflected from Conifer Canopy	5.5	-6.8
Transmitted below Grass Canopy	6.4	-4.5
Transmitted below Deciduous Canopy	6.8	-5.4
Transmitted below Conifer Canopy	5.3	2.6
<b>Radiation Source (Error Calculated Relative to Cool White Fluorescent, T5)</b>		
Cool White Fluorescent (T5)	0.0	0.0
Cool White Fluorescent (T8)	-0.3	-1.2
Cool White Fluorescent (T12)	-1.4	-2.0
Compact Fluorescent	-0.5	-5.3
Metal Halide	-3.7	-3.7
Ceramic Metal Halide	-6.0	-6.4
High-Pressure Sodium	0.8	-7.2
Blue LED (448 nm peak, 20 nm full-width half-maximum)	-12.7	8.0
Green LED (524 nm peak, 30 nm full-width half-maximum)	8.0	26.2
Red LED (635 nm peak, 20 nm full-width half-maximum)	4.8	-6.2
Red, Blue LED Mixture (85 % Red, 15 % Blue)	2.4	-4.4
Red, Green, Blue LED Mixture (72 % Red, 16 % Green, 12 % Blue)	3.4	0.2
Cool White Fluorescent LED	-4.6	-0.6
Neutral White Fluorescent LED	-6.7	-5.2
Warm White Fluorescent LED	-10.9	-13.0

Quantum sensors can be a very practical means of measuring PPFD and YPFD from multiple radiation sources, but spectral errors must be considered. The spectral errors in the table above can be used as correction factors for individual radiation sources

### **Underwater Measurements and Immersion Effect**

When a quantum sensor that was calibrated in air is used to make underwater measurements, the sensor reads low. This phenomenon is called the immersion effect and happens because the refractive index of water (1.33) is

greater than air (1.00). The higher refractive index of water causes more light to be backscattered (or reflected) out of the sensor in water than in air (Smith,1969; Tyler and Smith,1970). As more light is reflected, less light is transmitted through the diffuser to the detector, which causes the sensor to read low. Without correcting for this effect, underwater measurements are only relative, which makes it difficult to compare light in different environments. The MQ-210 sensor has an immersion effect correction factor of 1.08. The immersion effect correction factor is already accounted for in the MQ-210 meter firmware so there is no need to apply the correction factor to your measurements. If you wish to use your meter to make measurements in air, simply divide the measured number by the immersion effect (1.08). When making underwater measurements, only the sensor and cable can go in the water. The handheld meter is not waterproof and must not get wet. If the meter might get wet from splashing, we recommend placing it in a plastic bag or another container to help protect it from accidentally getting wet.

**NOTE:** The handheld meter portion of the instrument is not waterproof. Do not get the meter wet or leave the meter in high humidity environments for prolonged periods of time. Doing so can lead to corrosion that could void the warranty.


Further information on underwater measurements and the immersion effect can be found at:

<http://www.apogeeinstruments.com/underwater-par-measurements/>

## APOGEE AMS SOFTWARE

- Downloading data to a computer requires the AC-100 communication cable and the free ApogeeAMS software. The meter outputs data using the UART protocol and requires the AC-100 to convert from UART to USB, so standard USB cables will not work.
- The most recent version of ApogeeAMS software can be downloaded at <http://www.apogeeinstruments.com/downloads/>.


When the ApogeeAMS software is first opened, it will show a blank screen until communication with the meter is established. If you click “Open Port” it will say “connection failed.”

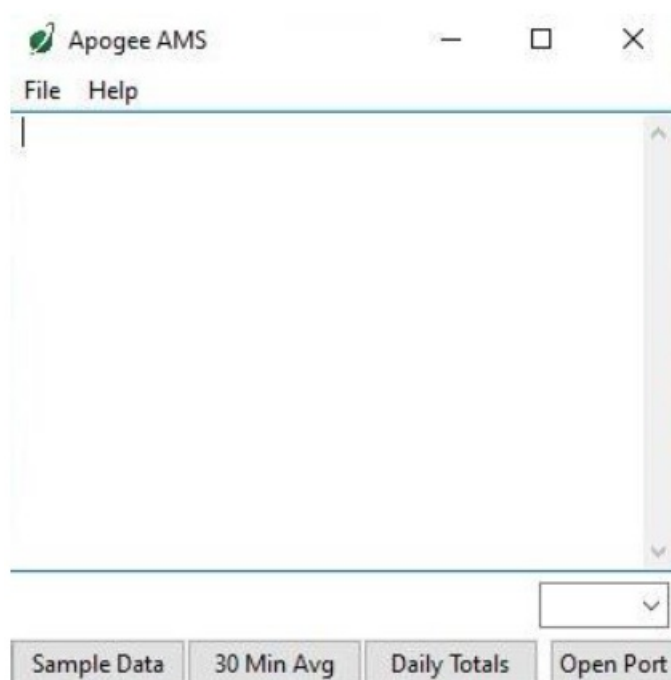


- To establish communication, make sure the meter is plugged into your computer using the AC-100 communication cable. To connect click the dropdown menu button and “COM#” options will appear. For more details on how to figure out which COM is the right one, watch our video.




- When you have connected to the correct COM#, the software will say “Connected”. Click “Sample Data” to view saved sample readings

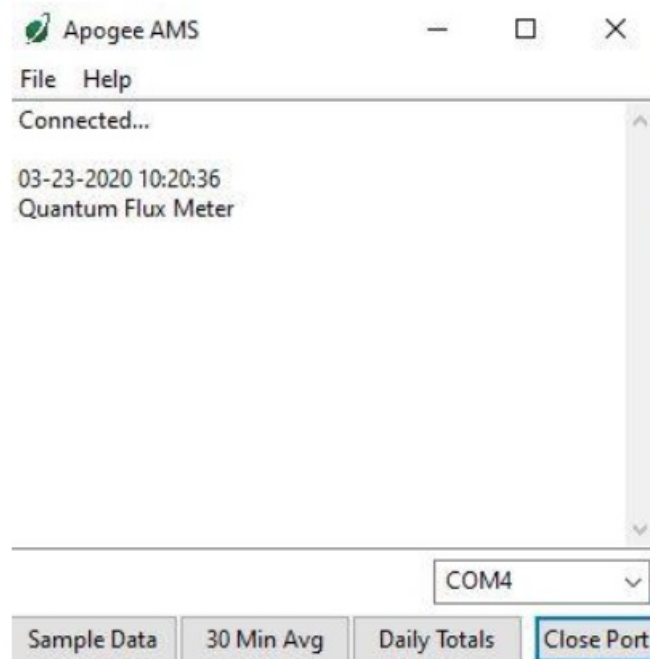


- “Daily Totals” shows all the saved Daily Light Integral (DLI) totals per day

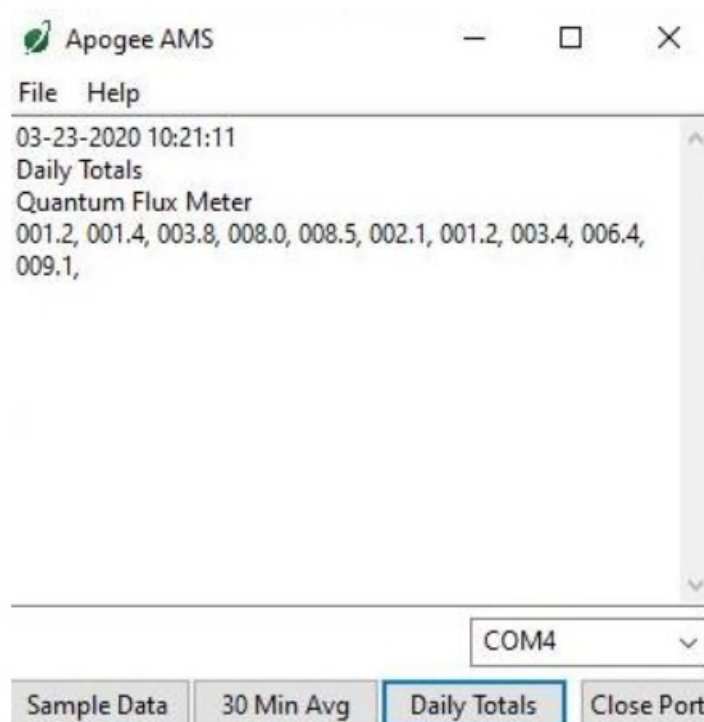

- Click “30 Min Avg” to see the meter’s 99, 30-minute averages.

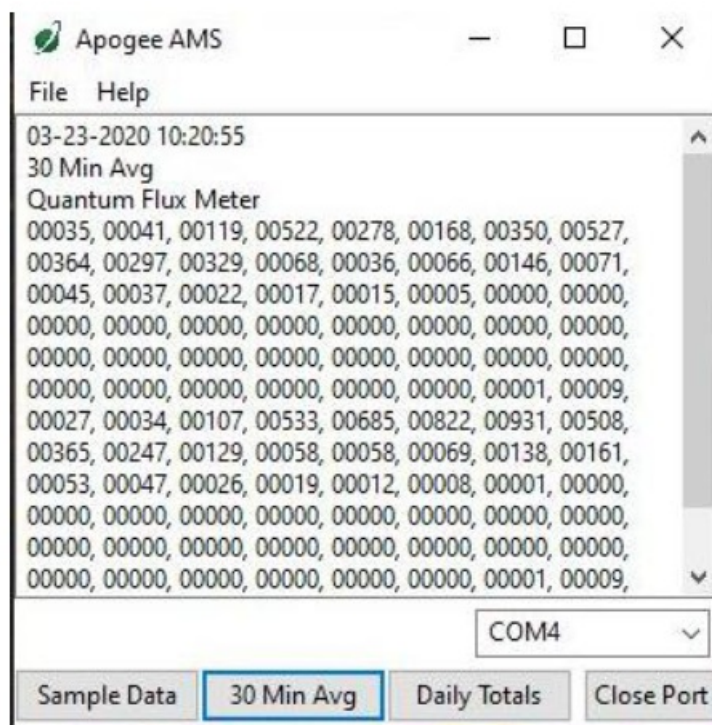

- To analyze the data, click on “File” and “Save As” to save the data as a .csv file. Or you can highlight the numbers, copy them, and paste them into a blank Excel spreadsheet. Data will need to be comma delimited.

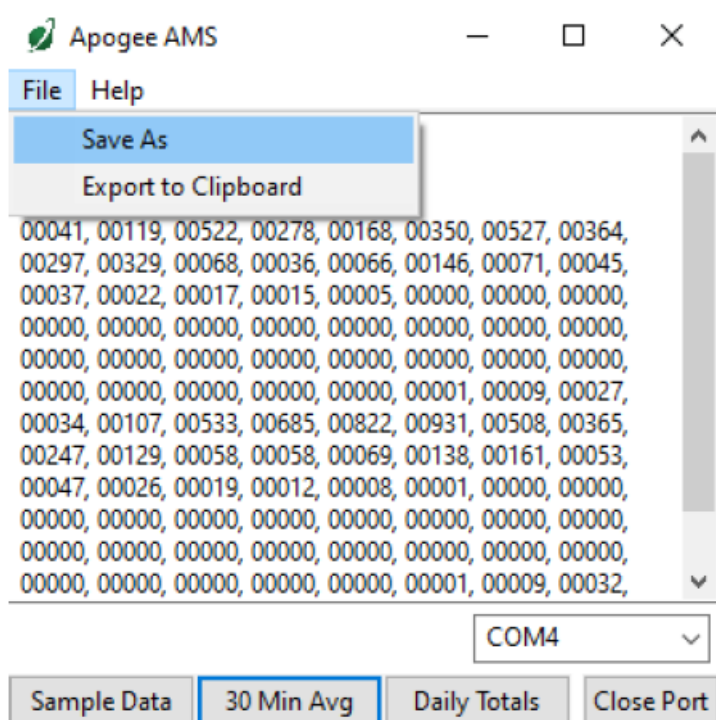


## MAINTENANCE AND RECALIBRATION

Moisture or debris on the diffuser is a common cause of low readings. The sensor has a domed diffuser and housing for improved self-cleaning from rainfall, but materials can accumulate on the diffuser (e.g., dust during periods of low rainfall, salt deposits from the evaporation of sea spray, or sprinkler irrigation water) and partially block the optical path. Dust or organic deposits are best removed using water or window cleaner and a soft cloth or cotton swab. Salt deposits should be dissolved with vinegar and removed with a soft cloth or cotton swab.

Never use an abrasive material or cleaner on the diffuser. Although Apogee sensors are very stable, nominal accuracy drift is normal for all research-grade sensors. To ensure maximum accuracy, we generally recommend sensors are sent in for recalibration every two years, although you can often wait longer according to your particular tolerances. To determine if your sensor needs recalibration, the Clear Sky Calculator ([www.clearskycalculator.com](http://www.clearskycalculator.com)) website and/or smartphone app can be used to indicate the total shortwave radiation incident on a horizontal surface at any time of day at any location in the world. It is most accurate when used near solar noon in the spring and summer months, where accuracy over multiple clear and unpolluted days is estimated to be  $\pm 4\%$  in all climates and locations around the world. For best accuracy, the sky must be completely clear, as reflected radiation from clouds causes incoming radiation to increase above the value predicted by the clear sky calculator. Measured values of total shortwave radiation can exceed values predicted by the Clear Sky Calculator due to reflection from thin, high clouds and edges of clouds, which enhances incoming shortwave radiation. The influence of high clouds typically shows up as spikes above clear sky values, not a constant offset greater than clear sky values. To determine recalibration needs, input site conditions into the calculator and compare total shortwave radiation measurements to calculated values for a clear sky. If sensor shortwave radiation measurements over multiple days near solar noon are consistently different than calculated values (by more than 6 %), the sensor should be cleaned and re-leveled. If measurements are still different after a second test, email [calibration@apogeeinstruments.com](mailto:calibration@apogeeinstruments.com) to discuss test results and the possible return of sensor(s).

Homepage of the Clear Sky Calculator. Two calculators are available: one for quantum sensors (PPFD) and one for pyranometers (total shortwave radiation).

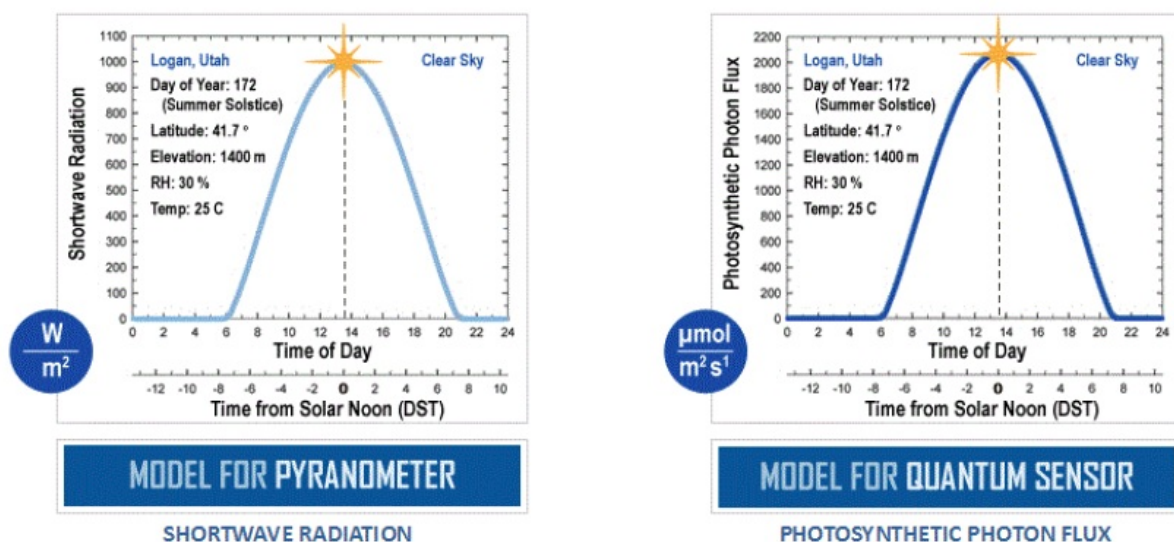

Clear Sky Calculator for quantum sensors. Site data are input in blue cells in the middle of the page and an estimate of PPFD is returned on the right-hand side of the page.



Input Parameters for  
Estimating Photosynthetic  
Photon Flux (PPF):

Output from Model:

- For best accuracy, comparison should be made on clear, non-polluted, summer days within one hour of solar noon.
- Enter input parameters in the blue cells at right. Definitions are shown below.
- Sensor must be level and perfectly clean. Enter your measured solar radiation in the blue "Measured PPF" cell at far right.
- Difference between the model and your sensor is shown in the yellow "DIFFERENCE FROM MODEL" cell at right.
- Run the model on replicate days. Contact Apogee for recalibration if the measured value is more than 5 % different than the estimated value. You will be contacted within two business days.

For a discussion on model accuracy and sensitivity of input parameters, [CLICK HERE](#).

Latitude =  °  
 Longitude =  °  
 Longitude<sub>tz</sub> =  °  
 Elevation =  m  
 Day of Year =   
 Time of Day =   
 (6 min = 0.1 hr)  
 Daylight Savings = +  hr  
 Air Temperature =  C  
 Relative Humidity =  %

RECALCULATE MODEL

Model Estimated PPF =   $\mu\text{mol m}^{-2} \text{s}^{-1}$   
 Measured PPF =   $\mu\text{mol m}^{-2} \text{s}^{-1}$   
 DIFFERENCE FROM MODEL =  %

CONTACT APOGEE FOR RECALIBRATION

Name:   
 E-mail:   
 Phone:   
 Serial #:   
 Comments:

Please include all requested information.

SEND INFO TO APOGEE

## TROUBLESHOOTING AND CUSTOMER SUPPORT

### Verify Functionality

Pressing the power button should activate the LCD and provide a real-time PPFD reading. Direct the sensor head toward a light source and verify the PPFD reading responds. Increase and decrease the distance from the sensor to the light source to verify that the reading changes proportionally (decreasing PPFD with increasing distance and increasing PPFD with decreasing distance). Blocking all radiation from the sensor should force the PPFD reading to zero.

### Battery Life

When the meter is maintained properly the coin cell battery (CR2320) should last for many months, even after continuous use. The low battery indicator will appear in the upper left-hand corner of the LCD display when the battery voltage drops below 2.8 V DC. The meter will still function correctly for some time, but once the battery is drained the pushbuttons will no longer respond and any logged measurements will be lost. Pressing the power button to turn off the meter will actually put it in sleep mode, where there is still a slight amount of current draw. This is necessary to maintain the logged measurements in memory. Therefore, it is recommended to remove the battery when storing the meter for many months at a time, in order to preserve battery life.

### Low-Battery Error after Battery Replacement

A master reset will usually correct this error, please see the master reset section for details and cautions. If a master reset does not remove the low battery indicator, please double-check that the voltage of your new battery is above 2.8 V, this is the threshold for the indicator to turn on.

### Master Reset

If a meter ever becomes non-responsive or experiences anomalies, such as a low battery indicator even after replacing the old battery, a master reset can be performed that may correct the problem. **Note** that a master reset will erase all logged measurements from memory.

- Step 1: press the power button so that the LCD display is activated.
- Step 2: Slide the battery out of the holder, which will cause the LCD display to fade out.
- Step 3: After a few seconds, slide the battery back into the holder.

The LCD display will flash all segments and then show a revision number (e.g. "R1.0"). This indicates the master reset was performed and the display should return to normal



## Error Codes and Fixes

Error codes will appear in place of the real-time reading on the LCD display and will continue to flash until the problem is corrected. Contact Apogee if the following fixes do not rectify the problem.

- Err 1: battery voltage out of range. Fix: replace the CR2320 battery and perform a master reset.
- Err 2: sensor voltage out of range. Fix: perform a master reset.
- Err 3: not calibrated. Fix: perform a master reset.
- Err 4: CPU voltage below minimum. Fix: replace CR2320 battery and perform a master reset.

## Modifying Cable Length

Although it is possible to splice additional cable to the separate sensor of the appropriate MQ model, note that the cable wires are soldered directly into the circuit board of the meter. Care should be taken to remove the back panel of the meter in order to access the board and splice on the additional cable, otherwise, two splices would need to be made between the meter and sensor head. See the Apogee webpage for further details on how to extend sensor cable length: (<http://www.apogeeinstruments.com/how-to-make-a-weatherproof-cable-splice/>).

## Unit Conversion Charts

Apogee MQ series quantum sensors are calibrated to measure PPFD in units of  $\mu\text{mol m}^{-2} \text{s}^{-1}$ . Units other than photon flux density (e.g., energy flux density, illuminance) may be required for certain applications. It is possible to convert the PPFD value from a quantum sensor to other units, but it requires a spectral output of the radiation source of interest. Conversion factors for common radiation sources can be found on the Unit Conversions page in the Support Center on the Apogee website (<http://www.apogeeinstruments.com/unit-conversions/>). A spreadsheet to convert PPFD to energy flux density or illuminance is also provided on the Unit Conversions page in the Support Center on the Apogee website (<http://www.apogeeinstruments.com/content/PPFD-to-Illuminance-Calculator.xls>).

## RETURN AND WARRANTY POLICY

### RETURN POLICY

Apogee Instruments will accept returns within 30 days of purchase as long as the product is in new condition (to be determined by Apogee). Returns are subject to a 10 % restocking fee.

### WARRANTY POLICY

**What is Covered** All products manufactured by Apogee Instruments are warranted to be free from defects in materials and craftsmanship for a period of four (4) years from the date of shipment from our factory. To be considered for warranty coverage an item must be evaluated by Apogee. Products not manufactured by Apogee (spectroradiometers, chlorophyll content meters, EE08-SS probes) are covered for a period of one (1) year. **What has not been Covered** The customer is responsible for all costs associated with the removal, reinstallation, and shipping of suspected warranty items to our factory.

**The warranty does not cover equipment that has been damaged due to the following conditions:**

1. Improper installation, use, or abuse.
2. Operation of the instrument outside of its specified operating range.
3. Natural occurrences such as lightning, fire, etc.
4. Unauthorized modification.
5. Improper or unauthorized repair.

Please note that nominal accuracy drift is normal over time. Routine recalibration of sensors/meters is considered

part of proper maintenance and is not covered under warranty. Who has Covered This warranty covers the original purchaser of the product or other party who may own it during the warranty period.

#### **What Apogee Will Do At no charge Apogee will:**

1. Either repair or replace (at our discretion) the item under warranty.
2. Ship the item back to the customer by the carrier of our choice.

#### **Different or expedited shipping methods will be at the customer's expense**

1. How To Return An Item 1. Please do not send any products back to Apogee Instruments until you have received a Return Merchandise Authorization (RMA) number from our technical support department by submitting an online RMA form at [www.apogeeinstruments.com/tech-support-recalibration-repairs/](http://www.apogeeinstruments.com/tech-support-recalibration-repairs/). We will use your RMA number for tracking the service item. Call (435) 245-8012 or email [techsupport@apogeeinstruments.com](mailto:techsupport@apogeeinstruments.com) with questions.
2. For warranty evaluations, send all RMA sensors and meters back in the following condition: Clean the sensor's exterior and cord. Do not modify the sensors or wires, including splicing, cutting wire leads, etc. If a connector has been attached to the cable end, please include the mating connector – otherwise, the sensor connector will be removed in order to complete the repair/recalibration. **Note:** When sending back sensors for routine calibration that have Apogee's standard stainless-steel connectors, you only need to send the sensor with the 30 cm section of cable and one-half of the connector. We have mating connectors at our factory that can be used for calibrating the sensor.
3. Please write the RMA number on the outside of the shipping container.
4. Return the item with freight pre-paid and fully insured to our factory address shown below. We are not responsible for any costs associated with the transportation of products across international borders. Apogee Instruments, Inc. 721 West 1800 North Logan, UT 84321, USA
5. Upon receipt, Apogee Instruments will determine the cause of failure. If the product is found to be defective in terms of operation to the published specifications due to a failure of product materials or craftsmanship, Apogee Instruments will repair or replace the items free of charge. If it is determined that your product is not covered under warranty, you will be informed and given an estimated repair/replacement cost.

#### **PRODUCTS BEYOND THE WARRANTY PERIOD**


For issues with sensors beyond the warranty period, please contact Apogee at [techsupport@apogeeinstruments.com](mailto:techsupport@apogeeinstruments.com) to discuss repair or replacement options.

#### **OTHER TERMS**

The available remedy of defects under this warranty is for the repair or replacement of the original product, and Apogee Instruments is not responsible for any direct, indirect, incidental, or consequential damages, including but not limited to loss of income, loss of revenue, loss of profit, loss of data, loss of wages, loss of time, loss of sales, accrual of debts or expenses, injury to personal property, or injury to any person or any other type of damage or loss. This limited warranty and any disputes arising out of or in connection with this limited warranty ("Disputes") shall be governed by the laws of the State of Utah, USA, excluding conflicts of law principles and excluding the Convention for the International Sale of Goods. The courts located in the State of Utah, USA, shall have exclusive jurisdiction over any Disputes. This limited warranty gives you specific legal rights, and you may also have other rights, which vary from state to state and jurisdiction to jurisdiction, and which shall not be affected by this limited warranty. This warranty extends only to you and cannot be transferred or assigned. If any provision of this limited warranty is unlawful, void, or unenforceable, that provision shall be deemed severable and shall not affect any remaining provisions. In case of any inconsistency between the English and other versions of this

limited warranty, the English version shall prevail. This warranty cannot be changed, assumed, or amended by any other person or agreement

## Documents / Resources

	<a href="#">apogee INSTRUMENTS MQ-210 Underwater Quantum Meter</a> [pdf] Owner's Manual MQ-210, Underwater Quantum Meter, MQ-210 Underwater Quantum Meter
---	--

## References

- [📄 Apogee Instruments | Official Site](#)
- [📄 AC-100: Communication Cable - Apogee Instruments, Inc.](#)
- [📄 apogeeinstruments.com/content/PPFD-to-Illuminance-Calculator.xls](#)
- [📄 Software Downloads - Datalogger Programs | Apogee Instruments](#)
- [📄 How to Make a Weatherproof Cable Splice](#)
- [📄 Recalibration and Repair | Apogee Instruments](#)
- [📄 Underwater PAR Measurements | Apogee Instruments](#)
- [📄 Unit Conversions | Apogee Instruments](#)
- [🕒 Clear Sky Calculator | Apogee Instruments Inc.](#)
- [🕒 Clear Sky Calculator | Apogee Instruments Inc.](#)
- [📄 AC-100: Communication Cable - Apogee Instruments, Inc.](#)

Manuals+.