



APOLLO AP-700 Alphanumeric Pager User Manual

[Home](#) » [APOLLO](#) » APOLLO AP-700 Alphanumeric Pager User Manual

Contents [[hide](#)]

- [1 APOLLO AP-700 Alphanumeric Pager](#)
- [2 Alphanumeric Pager AP-700 User Manual](#)
- [3 Icon](#)
- [4 Operation](#)
- [5 Operation](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)

APOLLO

 
APOLLO AP-700 Alphanumeric Pager



Alphanumeric Pager AP-700 User Manual

- Do not operate this device in a hazardous atmosphere.
- Do not replace or change accessories in a hazardous atmosphere. Contact sparking may occur while installing or removing accessories and cause an explosion or fire.
- Turn a device off before removing or installing a battery or accessory.
- Do not disassemble this device in any way that exposed the internal electrical circuits of the unit.
- Make sure to read this manual before using the machine. Please keep it in hand for future reference.

Overview & Basic Operation

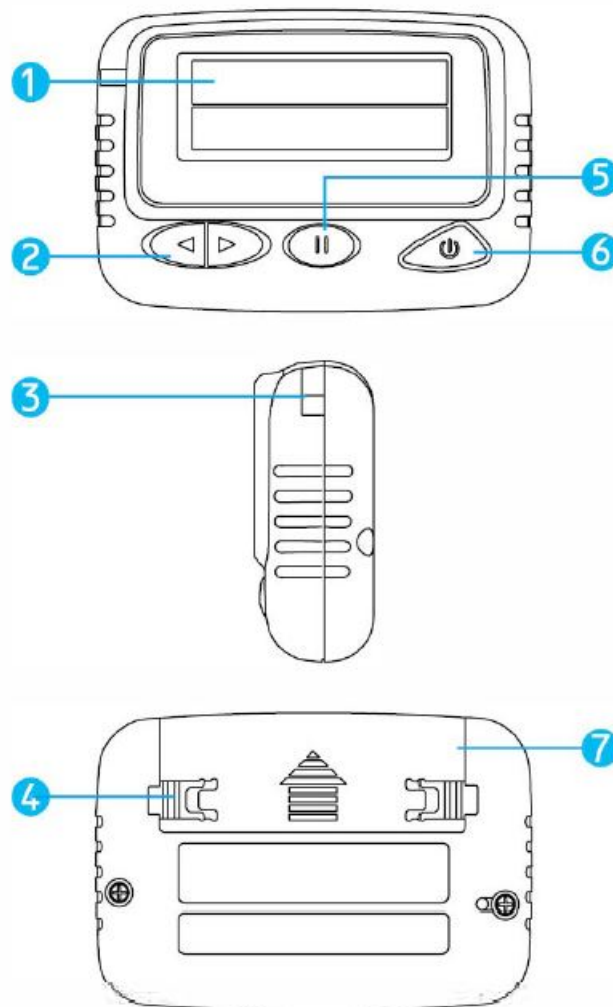

1. LCD
2. Navigation Button
 1. Preview message
3. Pager chain
4. Battery door lock
5. Function Button
 1. show function menu
 2. Select or save function setting
6. Read Button
 1. Power on button
 2. Read message
 3. Turn on backlit (hold button for a second)

7. Battery door

Icon

Pager Status Symbols



 
- POWER ON INDICATOR
- MUSIC ALERT
- BEEP ALERT
- AUTO SLEEP INDICATOR
- ALARM INDICATOR
- AUTO SCROLL INDICATOR
- BATTERY CAPACITY
- OUT OF RANGE INDICATOR
- ERROR MESSAGE
- DUPLICATE MESSAGE
- MAIL DROP MESSAGE
- MEMO MESSAGE INDICATOR

Message Status Symbols



- MESSAGE IN MEMORY
- MESSAGE SELECTING
- MESSAGE LOCK IN MEMORY MESSAGE LOCK SELECTING
- PERSONAL MESSAGE
- FULL MESSAGE
- PERSONAL MESSAGE SELECTING w FULL MESSAGE SELECTING
- MAILDROP IN MEMORY
- MAILDROP SELECTING
- DUPLICATE MESSAGE.


Function Menu Symbols



- UP OR ESCAPE
- SET ALERT
- PAGER OFF
- SET AUTO SLEEP
- SET ALARM
- SET TIME
- SET SCROLL
- ZOOM IN/ ZOOM OUT MESSAGE LOCK MESSAGE UNLOCK MESSAGE DELETE DELETE ALL
- MOVE TO MEMO MAIL DROP ALERT

Operation

 
Battery Gauge

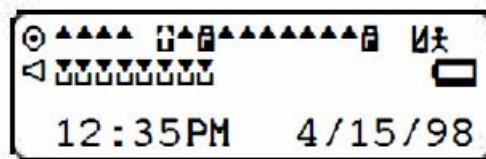

The battery indicator is located on the status screen and keeps you informed of battery energy level. The three

indicators range from –  (full),  (1/2),  (low). Whenever the low battery shows on display, Please replace the new battery in to make sure the pager is in receivable condition.

 Turning Your Pager Off

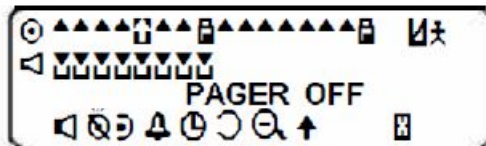

1. Press , then , press  or  to " PAGER OFF " mode. Press  till " PAGER OFF ? " appears on the screen. Press , to turn the pager off . After turning your pager off , the screen is empty.
2. Press , to turn the pager power on.

Operation

Read Message



1. A flashing, ▲ symbol indicates you have a message has not been read.(The symbol ▼ of mail drop shows on screen by flashing).

2. Press ◀ or ▶ to preview the message.

3. Press ⏻, to display your message., Press ⏻ again, to view

If you have set "Auto Scroll", your pager will scroll through your message screen by screen automatically

Set Alert



1. Press ||, then, press ◀ OR ▶ once to display "SET ALERT" Mode.

2. Press ||, to enable "SET ALERT".

3. Press ||, to move the cursor to the desired alarm mode. (Alert 🔊 ./ Musical 🎵 / Vibration 🔊 / Sleep are optional)

4. Press ▶, OR to move to the cursor to the desired tone or music.

5. Press ⏻ Dsetting the alert is completed.

Locking Message



1. Press ◀ or ▶, to move the cursor to the desired flashing symbol ⬆—

2. Press , press  or  to select the desired message to lock. Press , to lock the message.
3. The symbol is displayed, indicating the status of the message in memory.

Set Scroll



 
1. Press , then, press  ,OR  to SET_SCROLL Mode .
2. Press , to enable scroll automatically.
3. Press CID, to select the scroll speed.

1.  slow, (2)  normal,
- (3)  rapid, (4) X-off

4. Press  to activate the function.


5. When the Auto scroll is set, the;  symbol is displayed on screen.

Delete Message

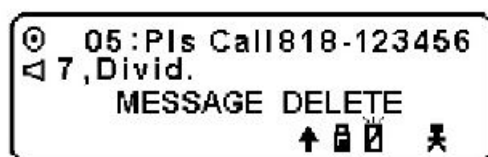

1. Press  ,OR  to move the cursor to select the message you desire. Press  to read the message.
2. Press , press  ,OR  to display "MESSAGE DELETE" Mode.
3. When "MESSAGE DELETE ?" is displayed on the screen, press (J) to delete the message.

 Zoom In/ Out

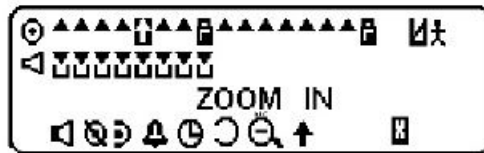


1. Press , then press , to "ZOOM IN". (symble ) , Then, press  to confirm ..
2. The letters on screen enlarge and become two lines to read.
3. Or press  to  move the cursor again to " ZOOM OUT " (symble ) , and press  to complete.
4. The letters on screen change to four lines to read.

Delete All Message




1. Press , press , to  " DELETE ALL" Mode .
2. When " DELETE ALL? " is displayed , Press  , all unlocked and read messages are deleted.

 Set Mail Drop Alert

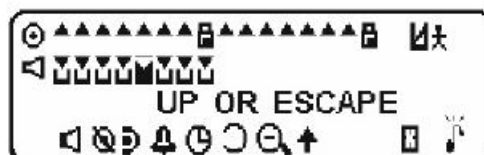


1. To move the cursor to the Mail Drop.
2. Press CID, to display the function menu.
3. Press (}J, to move the cursor to set mail drop alert (' J').
4. Press CID, to activate the function .Or press @D, to exit the function .

 Move Message To Memo

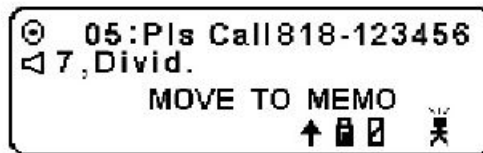


1. Press W or (}J, to move the cursor to the desired storing message.
2. Press @D to read the message.
3. Press CID, and press (}J once, to move to" MOVE TO MEMO" Press CID, to move the flashing icon message automatically into your memo mail .

 Error Message

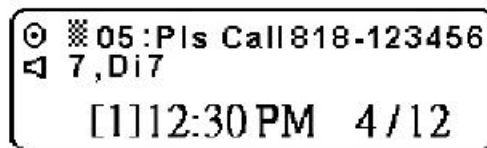


If it is received the error message. The f symbol is shown in the top left-hand corner of the display , indicates the message status as a Error message.

 Reading Full Message

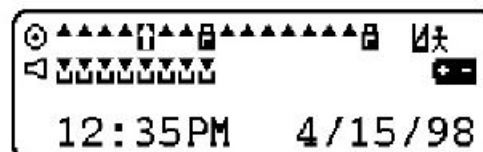

1. Press W or (}J, to move the flashing icon to the kl symbol. Press @D, to read message.
2. When the kl symbol is shown in the top left-hand corner of the display , indicates the message status as a full message.

 Documents / Resources

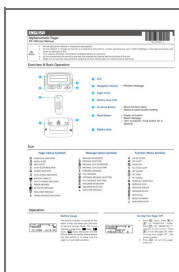

[APOLLO AP-700 Alphanumeric Pager \[pdf\] User Manual](#)
 AP-700, Alphanumeric Pager, AP-700 Alphanumeric Pager