



Applied Motion Products TSM23P Integrated Step Servo Motor User Guide

[Home](#) » [Applied Motion Products](#) » Applied Motion Products TSM23P Integrated Step Servo Motor User Guide



Contents

- [1 Applied Motion Products TSM23P Integrated Step Servo Motor](#)
- [2 Requirements](#)
- [3 Connect the Power Supply](#)
- [4 I/O](#)
- [5 Safety Instructions](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)



Applied Motion Products TSM23P Integrated Step Servo Motor



Requirements

You will need these items to set-up TSM23P

- a 12 – 70 volt DC power supply
- a small flat blade screwdriver for tightening the connectors (included)
- **a PC running Microsoft Windows XP, Vista, or Windows: 7/8/10/11**
- **Software:** Step-Servo Quick Tuner
- a programming cable

Connect the Power Supply


- Connect the power supply “+” terminal to the drive “+” terminal & the power supply “-” terminal to the drive “-” terminal using 16 to 20-gauge wire.
- Be careful not to reverse the wires. Reversing the connection may open the internal fuse and void the warranty.
- If a regulated power supply is being used, there may be a problem with regeneration that can be solved with the use of an Applied Motion Products RC880 Regeneration Clamp. Please see the Applied Motion Products website or the TSM23P Hardware Manual for more information.

Configure the Drive

- Load the Step-Servo Quick Tuner software
- Connect the drive to PC using the programming cable
- Open the software: Step-Servo Quick Tuner
- Apply power to the drive
- The software will recognize the drive & display the model & firmware version
- Follow the steps on the Step-Servo Quick Tuner to set up

I/O

- 4 optically isolated digital inputs, 5 to 24 Volts
- 3 optically isolated digital outputs
- A/B/Z Encoder output
- Please see Applied Motion Products website or the TSM23P Hardware Manual for more information

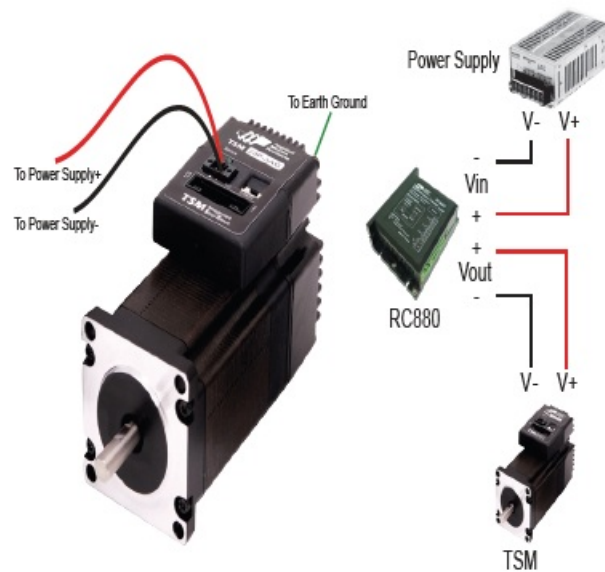


Safety Instructions

- DO NOT apply power until all connections to the drive have been made.
- Only qualified personnel should assemble, install, operate, or maintain this equipment.
- Read all available documentation before assembly and operation.
- It is vital to ensure that all system components are connected to earth ground.
- This product contains electrostatically sensitive components that can be damaged by

18645 Madrone Pkwy. Morgan Hill, CA 95037, USA 800-525-1609 applied-motion.com

Documents / Resources

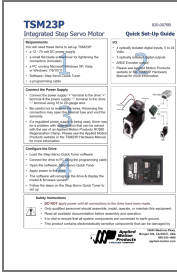

[Applied Motion Products TSM23P Integrated Step Servo Motor](#) [pdf] User Guide
TSM23P Integrated Step Servo Motor, TSM23P, Integrated Step Servo Motor, TSM23P Step S
ervo Motor, Step Servo Motor, Step Motor, Servo Motor, Motor, 920-0076B

References

-  [Applied Motion](#)

Manuals+,