



Apps FtyCamPro App User Guide

[Home](#) » [APPs](#) » Apps FtyCamPro App User Guide 

Contents

- [1 Apps FtyCamPro App](#)
- [2 Product Usage Instructions](#)
- [3 App Installation](#)
- [4 Camera Settings](#)
- [5 Basic Settings and Indicator Status:](#)
- [6 FAQ](#)
- [7 FCC Warning](#)
- [8 Documents / Resources](#)

Apps

Apps FtyCamPro App



Product Information

The device in question is a product that operates within the guidelines set forth by the Federal Communications Commission (FCC) in the United States. It is designed to comply with part 15 of the FCC Rules, which ensures that the device does not cause harmful interference and accepts any interference received. The device has also been tested to comply with FCC radiation exposure limits for an uncontrolled environment.

Product Usage Instructions

When using this device, please follow the below instructions:

- Do not make any changes or modifications to the device that have not been explicitly approved by the manufacturer. Unauthorized modifications may void your authority to operate the equipment.
- Ensure that the minimum distance of 20cm is maintained between the radiator of the device and your body during installation and operation. This distance helps to comply with FCC radiation exposure limits and ensures safe usage.

App Installation

1. Download and install use App Store and GooglePlay for IOS end Android versions respectively-To to facilitate installation, please see the CR code below to install Fly CamPro. If your device is unable to connect to GooglePlay, you can scan the APK QR code below.

Note. You are advised to use or third-party QR code scanner to download the App. The App can not be downloaded by using the scanner of WeChat,



FlyCamPro	
IOS APP Store	>
Google Play	>
Android APK	>

 
2. Click “+” to add a networked camcorder (the name is similar to XXX-nnnnnn-YYYYY).and the device will automatically



3. After switching to the WiFi connection page, select the corresponding WiFi hotspot and connect. After the is successful. return to the APP. and the device is added success faulty. (If the APP does not automatically add a debit*, Click Search to add the searched device)



4. Please fill in the can order name and P2P password(default password: admin). ClickA Yes-.The cæncorder is successfully added. You are advised to modify the P2P password after the camcorder settings are finished.

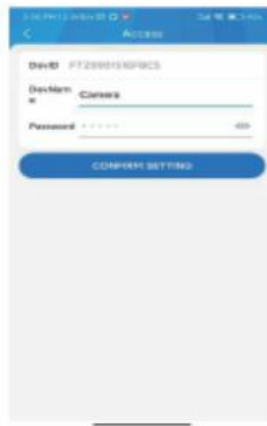

5. After the camcorder is successfully connected, click the newly added camcorder for real-time videos. The device can be controlled on the video interface.



6. Icons and buttons on the video page

	Shoot snapshots and record videos
	Vertical and horizontal rotation of images

7. Other page functions

	View the screenshots in the camcorder
	View the videos in your mobile device
	View the alarm log of the camcorder

Camera Settings

 
1. Click the gear button to the advanced page




2. Configure the WIFI connection to the Camcorder. Select the WIFI setting to (Ssplay available WiFi hotspots. Select your Wi-Fi password. and press the button-Note:If the camcorder is in WIFI status after being saved. It will disconnect the current connection for a new WIFI network. which will make the camcorder offline for about a minute in the App.



3. SD card recording settings: Set SD card mode and recording.

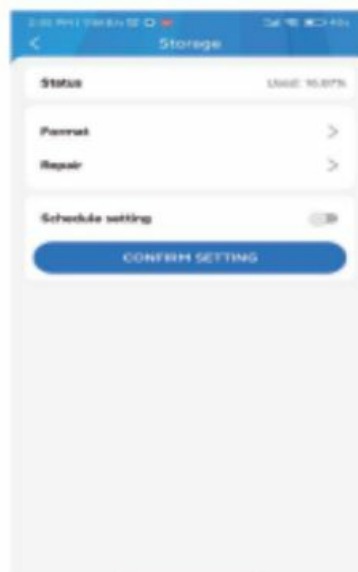

 4. .Alarmconfiguration: Enableordisable motiondetectionaJarrn and set the interval for alarms.

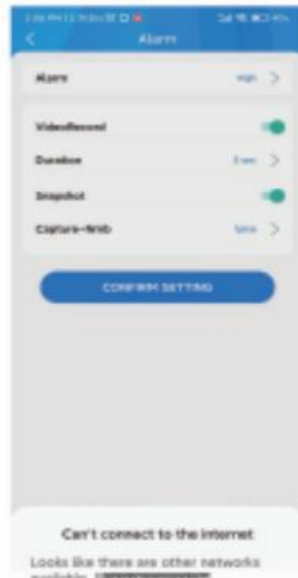

Basic Settings and Indicator Status:

A new camcorder is installed in a location. *ase reset camcorder settings. (After the is started, press and hold the camcorder reset button for more than 5 seconds), the device returns to the AP mode, the WIFI indicator is on. Then open phone settings, phone to be AP hotspot (free WIFI network will be camera* UID), and wait by the phone to WIFI network before opening the App-

Indicator Status:

1. In AP mode booting, the device is on and indicator is the USE power indicator, and it goes out after faulty
2. When configuring WIFI routing, the indicator is normally on, flicker rapidly, After a successful configuration, the blue indicator is normally on (Please confirm whether the WIFI password is the blue indicator keeps
3. The green indicator is a charging indicator, it will automatically go the camcorder fully charged.

Note: Please inspect the following items if the App keeps failing:

- **A.** Before Configuring the WIFI network, the Camcorder indicator does not flicker it is not started;
- **B.** The phone to connect to the camcorder AP. it is required to connect the phone AP hot spot of camera:
- **C.** An ordinary router is compatible, the public router fails to because it is for authentication:
- **D.** Avoid any mistake of the network name and password and UID:
- **E.** Chinese Wifi name password and special symbols are not compatible currently:
- **F.** 5G Wifi signals are not compatible

FAQ

Q: Why does APP fail to the camcorder match network?

A: Please ensure the device is correctly connected and inspect whether the APP operation is restricted.

Q: Why does the camcorder keep asking me for user name and password or why does it prompt an incorrect user name?

A. The default password is admin. If you forget your username and password. please reset it to the factory settings to get the default user name and password.

3Q: How can reset the camcorder to factory settings

A. Press the set button for about 5 seconds until the camcorder is restarted

Q: Why is the image vague

A. Remove the protective film for the lens.If it's still vague you can rotate the lens and focus to get clean images.

FCC Warning

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

 
Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance 20cm between the radiator and your body.

Documents / Resources

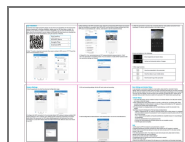

[Apps FtyCamPro App](#) [pdf] User Guide
FtyCamPro App, FtyCamPro, App