



aptitude Metrix Reader User Guide


[Home](#) » [aptitude](#) » aptitude Metrix Reader User Guide 

Contents


- [1 aptitude Metrix Reader](#)
- [2 Power Up](#)
- [3 Collect Sample](#)
- [4 Reader Statuses](#)
- [5 Troubleshooting](#)
- [6 Legend of Symbols](#)
- [7 Warnings and Precautions](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)
- [9 Related Posts](#)



aptitude Metrix Reader

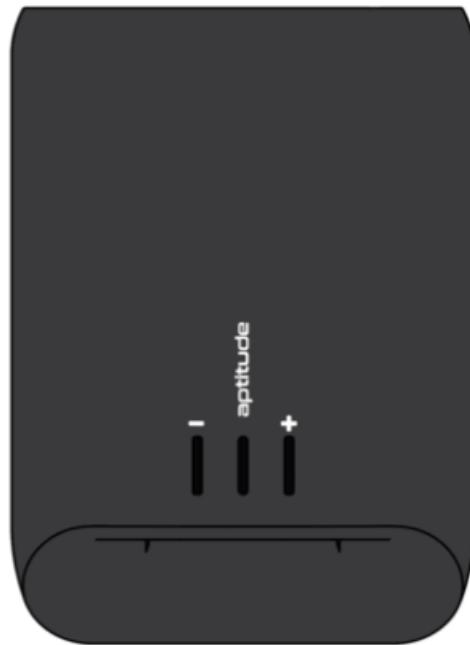

Power Up

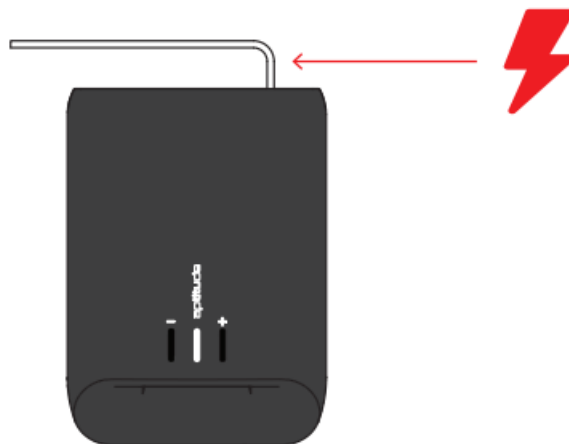

Connect reader to power supply. The center light will turn solid (not flashing) when ready.

Collect Sample

Open the Metrix COVID-19 Test kit (available separately) if you have not done so already. The Metrix COVID-19 Test kit will guide you through how to collect and run your sample.

Reader Statuses

Starting Up



The reader is starting up. Wait until the center light is solid white before inserting a sensor.

Ready



 
The reader is ready to start a test.

Test Running



The reader is running a test. DO NOT remove the sensor or unplug the reader.

Indicates flashing light



Positive Result



The test is complete and SARS-CoV-2 was detected in the sample.

Negative Result



The test is complete and SARS-CoV-2 was NOT detected in the sample.

Invalid Result



The test is complete and the result is invalid. Repeat with a new Metrix COVID-19 Test kit.

Troubleshooting

Test Error



Remove sensor and firmly press down on collector. Firmly reinsert sensor into reader. If error persists, discard sensor and use a new test kit.

Canceled Test



The test did not complete. Discard the sensor and run the test with a new test kit.

Hardware Failure



There is an error with the reader. Disconnect and reconnect the power.

Indicates flashing light



No Power



Check all electrical connections. The reader is not receiving power.

If troubleshooting fails to resolve any problem persist please contact support. If your Metrix Reader needs to be disposed of, please place in electronic waste.

For support, please contact us at:

1.888.934.2253

support@aptitudemetrix.com

Or visit: AptitudeMetrix.com.



Scan QR code for interactive instructions and video demonstration.

Legend of Symbols



For vitro diagnostic use



Keep dry



Date of manufacture



Manufacturer of device



Please consult the instruction manual



Dispose of in electronic waste



Do not use if packaging is damaged



Temperature limitations of the product



Direct current (DC) voltage



Manufacturer's catalog number



Certification that the electromagnetic interference from the device is under limits approved by the Federal Communications Commission.

Warnings and Precautions

- Do not use components that are visibly damaged.
- The Metrix Reader can be cleaned by wiping the exterior with disinfectant. Do not spray disinfectant into or onto the reader.
- If a power failure occurs or if the Metrix Reader is unplugged while the Sensor is inserted, the test result is invalidated. The test should be redone with a new test kit.
- Use only the provided power cable and power adapter.
- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The Metrix COVID-19 Test kit and Metrix Reader are for FDA Emergency Use Authorization (EUA) only. This home test kit is only authorized for the duration of the declaration that circumstances exist justifying the authorization of emergency use of IVDs for detection and/or diagnosis of COVID-19 under Section 564(b)(1) of the Federal Food, Drug, and Cosmetic Act, 21 U.S.C. § 360bbb-3(b)(1), unless the authorization is terminated or revoked sooner.

Aptitude, Metrix, and the Aptitude logo are trademarks of Aptitude Medical Systems, Inc. All Rights Reserved.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

FCC Warning:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Documents / Resources

<small> Aptitude Reader MTX01 is a copyrighted material from Pearson Education. No part of this publication may be reproduced without prior written permission from Pearson Education. Copyright © 2010 Pearson Education, Inc. All rights reserved. Printed in India by Pearson Education Limited, New Delhi. ISBN: 978-81-315-1515-5 THIS PAGE IS NOT TO BE PRINTED </small>	<p>aptitude Metrix Reader [pdf] User Guide</p> <p>MTX01, 2A6H5-MTX01, 2A6H5MTX01, Metrix Reader, Metrix, Reader</p>
---	---

References

- **Metrix COVID-19 Test**