

Apulsetech A411 Desktop Reader User Manual

Home » Apulsetech » Apulsetech A411 Desktop Reader User Manual






Contents

- 1 Device pictures and switches, LED **Description**
- 2 Driver installation notification mode
- 3 Documents / Resources
- **4 Related Posts**

Device pictures and switches, LED Description

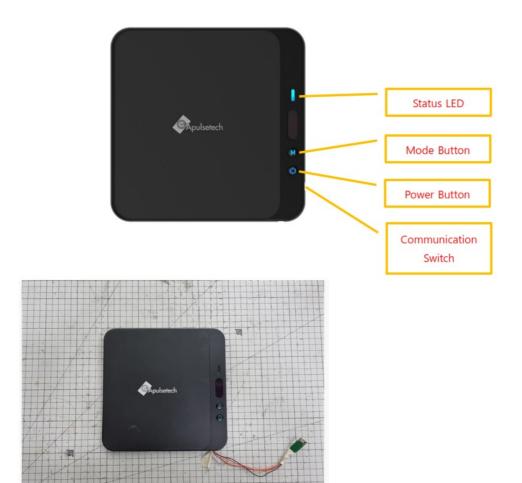

- HID MOD

- 1. Status light LED: RED
- 2. On/Off Switch And LED: Green
- 3. MOD Changeover Switch: H(HID)

- Serial MOD

- 1. StatuslightLED : Green(Flickering)
- 2. On/Off Switch AndLED: Green
- 3. MOD Changeover: S(Serial)

Driver installation notification mode

- 1. Status light LED: RED(Flickering)
- 2. On/Off Switch And LED: Green
- 3. MOD Changeover: H(HID)
- 4. PC notifies when the mode switch is S

1. Order of using HID MOD

- **1-1.** Set the mode select switch to H (HID).
- **1-2.** Install driver on PC (ex) AT9S_driver_xXX)
- **1-3.** After connecting the USB cable to the PC, press the On / Off switch to turn on the power.

1-4. Open the document file (Txt, Docx, Xlsx, etc.) to display the tag information. 1-5. Start tag reading.

2. Order for using Serial mode

- **2-1.** Set the mode select switch to S (Serial)
- **2-2.** After connecting the USB cable to the PC, press the On / Off switch to turn on the power.
- 2-3. When the PC catches the port, it opens and controls related programs and tools.

This product is mounted out of reach of Users.

FCC Information to User

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. this device may not cause harmful interference, and
- 2. this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

IMPORTANT NOTE:

FCC RF Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.



Documents / Resources

a411(DeskTop Reader) User Manual



Apulsetech A411 Desktop Reader [pdf] User Manual A411, 2AWMDA411, Desktop Reader, A411 Desktop Reader

Manuals+.