

**apuro**

Apuro CT938-A  
Milkshake Maker



# Apuro CT938-A Milkshake Maker Instruction Manual

[Home](#) » [apuro](#) » Apuro CT938-A Milkshake Maker Instruction Manual 

## Contents

- [1 Apuro CT938-A Milkshake Maker](#)
- [2 Safety Instructions](#)
- [3 Introduction](#)
- [4 Product Description](#)
- [5 Pack Contents](#)
- [6 Operation](#)
- [7 Cleaning, Care & Maintenance](#)
- [8 Troubleshooting](#)
- [9 Technical Specifications](#)
- [10 DECLARATION OF CONFORMITY](#)
- [11 FAQ](#)
- [12 Documents / Resources](#)
  - [12.1 References](#)
- [13 Related Posts](#)

**apuro**

**Apuro CT938-A Milkshake Maker**



## Safety Instructions

- Position on a flat, stable surface.
- A service agent/qualified technician should carry out installation and any repairs if required. Do not remove any components on this product.
- Consult Local and National Standards to comply with the following:
  - Health and Safety at Work Legislation
  - Fire Precautions
  - Wiring Regulations
  - Building Regulations
- DO NOT use jet/pressure washers to clean the appliance.
- DO NOT immerse the appliance in water.
- This appliance is only suitable for mixing beverages. Do not use this appliance for anything other than its intended use.
- Always switch off and disconnect the power supply to the appliance when not in use.
- Not suitable for outdoor use.
- Keep all packaging away from children. Dispose of the packaging in accordance to the regulations of local authorities.
- If the power cord is damaged, it must be replaced by an Apuro agent or a recommended qualified technician in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.

Keep hands and utensils out of the mixing cup while motor is running to prevent severe personal injury and / or damage to the appliance.

- Never try to remove agitators while cup is sitting on the microswitch plate.
- Do not operate with loose or damaged agitators.
- Do not place cup on to microswitch plate with On/Off switch in the On position (I or II position).
- Please note milk may double in volume after mixing so fill the cup accordingly.
- When using the Tritan jug please use the Tritan agitators supplied. (Note: The Tritan jug and agitators are sold separately.)
- Do not leave appliance unattended while in use.
- Apuro recommends that this appliance should be periodically tested (at least annually) by a Competent Person. Testing should include, but not be limited to: Visual Inspection, Polarity Test, Earth Continuity, Insulation Continuity and Functional Testing.

## **Introduction**

Please take a few moments to carefully read through this manual. Correct maintenance and operation of this machine will provide the best possible performance from your Apuro product.

## **Product Description**

- CT938-A – Apuro Single Milkshake Mixer
- CY423-A – Apuro Double Milkshake Mixer

## **Pack Contents**

**The following is included:**

- Apuro Milkshake Mixer
- Mixing cup
- Instruction manual

Apuro prides itself on quality and service, ensuring that at the time of packaging the contents are supplied fully functional and free of damage.

Should you find any damage as a result of transit, please contact your Apuro dealer immediately.

## **Operation**



#### **On/Off switch:**

Up position for Low speed (I); Down position for high speed (II); Middle position for turning off (0).

#### **Mixing**

##### **Before use, ensure to**

- Clean all removable parts thoroughly.  
Turn off On/Off switch (0 position).

The milkshake mixer is designed to work with a 70% milk or liquid, to a maximum 30% soft ice cream mix. It is not suitable for blending hard ingredients such as frozen ice cream, fruit or ice.

1. Plug in appliance.
  2. Place liquid ingredients into the mixing cup first, followed by any soft ice cream.
  3. Locate cup on to the microswitch plate.
  4. Turn on appliance by setting the On/Off switch to desired speed setting.
- Do not run the appliance excessively for more than 3 minutes at a time to avoid overheating activation. In case of overheating, the appliance will stop work automatically. Let it cool down sufficiently before restart.
  - With the safety microswitch, the appliance will turn off automatically once the mixing cup is released from the microswitch plate.
  - Before removing cup, ensure to turn off appliance using On/Off switch and let the motor come to a complete stop.

#### **Cleaning, Care & Maintenance**

- Always disconnect from power supply before cleaning.

- Always allow to cool before cleaning.
- Let the motor come to a complete stop before removing the cup.
- The cup is NOT dishwasher proof!
- Use warm, soapy water and a damp cloth to clean the cup.
- The agitators can be removed for thorough cleaning. Or, with the agitators in place, you can run the appliance with clean water in the cup for seconds.
- Dry thoroughly after cleaning.

Warning: Do not allow any water to spill into the body of the appliance when cleaning.

## Troubleshooting

A qualified technician should carry out repairs if required.

Fault	Probable Cause	Solution
The unit is not working	The unit is not switched on	Check the unit is plugged in correctly and switched on
	Plug or lead is damaged	Replace plug or lead
	Mains power supply fault	Check mains power supply
	Cup not located properly	Relocate cup

## Technical Specifications

Note: Due to our continuous improvement process, the product specifications are subject to change without notice.

Model	Voltage	Power	Current	Cup Capacity	Dimensions h x w x d mm	Weight
<b>CT938-A</b>	220-240V 50-60Hz	80W	0.34A	750ml	510 x 170 x 170	3.45kg
<b>CY423-A</b>	220-240V 50-60Hz	80W+80W	0.34A	2 x 750ml	510 x 360 x 170	7.0kg

## Electrical Wiring

The plug is to be connected to a suitable mains socket. This appliance is wired as follows:

- Live wire (coloured brown) to terminal marked L
- Neutral wire (coloured blue) to terminal marked N
- Earth wire (coloured green/yellow) to terminal marked E

This appliance must be earthed.



If in doubt consult a qualified electrician.

Electrical isolation points must be kept clear of any obstructions. In the event of any emergency disconnection being required they must be readily accessible.

## **Compliance**

- The product must not be disposed of as household waste. To help prevent possible harm to human health and/or the environment, the product must be disposed of in an approved and environmentally safe recycling process. For further information on how to dispose of this product correctly, contact the product supplier, or the local authority responsible for waste disposal in your area.
- Apuro parts have undergone strict product testing in order to comply with regulatory
- standards and specifications set by international, independent, and federal authorities.
- Apuro products have been approved to carry the following symbol:
- All rights reserved. No part of these instructions may be produced or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of Apuro.
- Every effort is made to ensure all details are correct at the time of going to press, however, Apuro reserve the right to change specifications without notice.



## **DECLARATION OF CONFORMITY**

Equipment Type		Model
Single Milkshake Mixer Double Milkshake Mixer		CT938-A CY423-A
Application of Territory Legislation &	<b>Electrical Safety</b>	
	ISO 12100: 2010	
	IEC 60204-1: 2016 +A1: 2021	
	I.S.EN 1672-2: 2020	
Conseil Anwen dbare EU-		
	<b>Electro-Magnetic Compatibility</b>	
Direttive	EN IEC 55014-1:2021	
	EN IEC 55014-2:2021	
consejo	EN IEC 61000-3-2: 2019 +A1: 2021	
	EN 61000-3-3: 2013 +A1: 2019 +A2: 2021	
Manufacturer Name		Apuro

I, the undersigned, hereby declare that the equipment specified above conforms to the above Territory Legislation, Directive(s) and Standard(s).


<b>16<sup>th</sup> Dec 2024</b>	
<b>Ashley Hooper</b>	<b>Brendan Denmeade</b>
<b>Group Head of Product Quality &amp; Compliance</b>	<b>Commercial Manager/ Responsible Supplier</b>
<b>Fourth Way,</b>	<b>15 Badgally Road,</b>
<b>Avonmouth,</b>	<b>Campbelltown</b>
<b>Bristol,</b>	<b>NSW 2560</b>
<b>BS11 8TB</b>	
<b>United Kingdom</b>	

## FAQ

- **Q: What should I do if the unit is not working?**

**A:** Check if the unit is switched on, plugged in correctly, and the cup is located properly. If needed, consult a qualified technician for repairs.

**Documents / Resources**

	<p><a href="#">Apuro CT938-A Milkshake Maker</a> [pdf] Instruction Manual</p> <p>CT938-A, CY423-A, CT938-A Milkshake Maker, CT938-A, Milkshake Maker, Maker</p>
---	---

**References**

- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.