




AQUA CONTROL C4110 Programmer Digital Full Vision User Manual

[Home](#) » [AQUA CONTROL](#) » AQUA CONTROL C4110 Programmer Digital Full Vision User Manual 

Contents

- 1 AQUA CONTROL C4110 Programmer Digital Full Vision
- 2 Once in your hands
- 3 Setting and programming
- 4 FOLLOW THESE STEPS
- 5 Special Functions
- 6 PRECAUTIONS
- 7 TROUBLESHOOTING
- 8 Documents / Resources
 - 8.1 References



AQUA CONTROL C4110 Programmer Digital Full Vision



JUMP OVER THE MANUAL AND HAVE A DIRECT LOOK AT SETTINGS

Once in your hands

Check that all components are included



Setting and programming

Put 2 alkaline batteries on the battery compartment

PARPADEA AL REGAR
 PISCAR QUANDO IRRIGANDO
 BLINK DURING IRRIGATION
 CLIGNOTE PENDANT L'ARROSAGE
 BLINKT WÄHREND DER BEWÄSSERUNG
 LAMPECCIA DURANTE L'IRRIGAZIONE

INDICADOR DE BATERÍA BATTERY INDICATOR INDICATEUR DE BATTERIE BATTERIE-ANZEIGE INDICATORE DI BATTERIA			MIN 15	DURACIÓN DEL RIEGO DURAÇÃO DA IRRIGAÇÃO IRRIGATION DURATION DURÉE D'IRRIGATION BEWÄSSERUNGSZEIT DURATA DELL'IRRIGAZIONE
HORA ACTUAL TEMPO ATUAL CURRENT TIME HEURE ACTUELLE AKTUELLE ZEIT TEMPO ATTUALE		HOW LONG	12 HRS	FRECUENCIA DE RIEGO DURAÇÃO DA IRRIGAÇÃO IRRIGATION FREQUENCY FRÉQUENCE D'IRRIGATION BEWÄSSERUNGSFREQUENZ FREQUENZA DI IRRIGAZIONE
BLOQUEO DE PANTALLA ACTIVADO BLOQUEIO DA TELA LIGADO SCREEN LOCK ON VERROUILLAGE DE L'ÉCRAN SUR BILDSCHIRMSPERRE EIN BLOCCO SCHERMO ON		HOW OFTEN	24 HRS	PRÓXIMO RIEGO PRÓXIMA IRRIGAÇÃO PROCHAINE IRRIGATION NÄCHSTE BEWÄSSERUNG PROSSIMA IRRIGAZIONE
HORA DE ARRANQUE HORA DE INÍCIO HEURE DE DÉPART STARTZEIT TEMPO DI PARTENZA		START TIME	NEXT IRRIGATION	



2 x AA

FOLLOW THESE STEPS



1   **OK** +  +   **OK** +  +   **OK**

HORA ACTUAL
TEMPO ATUAL
CURRENT TIME
TEMPS ACTUEL
AKTUELLE ZEIT
TEMPO ATTUALE

MINUTOS
MINUTES
MINUTEN
MINUTI

2  +   **OK** +  +   **OK**

HORA DE INICIO DEL RIEGO
HORA DE INICIO DA IRRIGAÇÃO
IRRIGATION START TIME
HEURE DE DÉPART DE L'IRRIGATION
BEWÄSSERUNGS-STARTZEIT
TEMPO DI INIZIO IRRIGAZIONE

MINUTOS
MINUTES
MINUTEN
MINUTI

3 +  +   **OK**

DURACIÓN DEL RIEGO
DURACÃO DA IRRIGAÇÃO
IRRIGATION DURATION
DURÉE D'IRRIGATION
BEWÄSSERUNGSDAUER
DURATA DELL'IRRIGAZIONE

MINUTOS O SEGUNDOS
MINUTOS OU SEGUNDOS
MINUTES OR SECONDS
MINUTES OU SECONDES
MINUTEN ODER SEKUNDEN
MINUTI O SECONDI

4 +  +   **OK**

FRECUENCIA DE RIEGO
FREQUÊNCIA DE IRRIGAÇÃO
IRRIGATION FREQUENCY
FRÉQUENCE D'IRRIGATION
BEWÄSSERUNGSFREQUENZ
FREQUENZA DI IRRIGAZIONE

HORAS O DÍAS
HORAS OU DIAS
HOURS OR DAYS
HEURES OU JOURS
STUNDEN ODER TAGE
ORE O GIORNI

Special Functions



-  SCREEN LOCK

Special Functions



SALTA UN CICLO DE RIEGO
SALTE UM CICLO DE IRRIGAÇÃO
JUMP AN IRRIGATION CYCLE
SAUTER UN CYCLE D'IRRIGATION
VERZÖGERUNG DER BEWÄSSERUNG
SALTA UN CICLO DI IRRIGAZIONE

-  DELAY OF IRRIGATION

Special Functions

ON



OFF



SALTA UN CICLO DE RIEGO
SALTE UM CICLO DE IRRIGAÇÃO
JUMP AN IRRIGATION CYCLE
SAUTER UN CYCLE D'IRRIGATION
VERZÖGERUNG DER BEWÄSSERUNG
SALTA UN CICLO DI IRRIGAZIONE



- MANUAL IRRIGATION

Special Functions

ON



+



INDIQUE DURACIÓN
SALTE UM CICLO DE IRRIGAÇÃO
SET DURATION
FIXER DURÉE
DAUER EINSTELLEN
DURATA SET


OFF



- SCREEN LOCK

PRECAUTIONS

- This Product is exclusively for outdoor use.
- Do not install it horizontally.
- Do not put it underwater or expose it high amount of dust.
- Under 3°C, remove from the hose faucet and store indoors to avoid potential freeze damage.

- Store in a dry place and keep away from extreme temperatures.
- Pressure is needed in your water network for the product to function properly.
- Make sure the filter (included) does not accumulate too much dirt. Clean it if you notice that it is dirty.
- When replacing batteries, make sure it's compartment is completely dry.
- Operating temperature: 3°C – 45°C
- Replace the batteries when the symbol  appears on the screen.

THE SCREEN DOES NOT SHOW ANY INFORMATION WHEN THE BATTERIES ARE SET

Check if:

- The batteries used are two new AA alkaline batteries.
- The batteries have been installed with the poles in the correct position THE THREAD OF THE TIMER IS DRIPPING.

Check if:

- The rubber gasket is in good conditions and placed correctly.
- The tap thread is the European BSP standard style.

TROUBLESHOOTING

THE TIMER DOES NOT ALLOW TO MODIFY ITS DATA.

Check if:

Security lock is active.

Press "Rain Delay" for 3 second to turn if off.

- Timer is OFF.
- Press ESC/OFF for 3 second to turn if on.

THE WATER DOES NOT COME OUT AT THE PRESET TIME

Check if:

- The current time is exactly what appears in the timer
- The watering time has been set correctly.
- Rain delay is activated. Turn it off.
- The programmer is off. Activate it.
- The tap is closed. Open it.
- The battery is dead. Replace it.

Thank You!

- Altadex S.A. – A80406135

- info@altadex.com.
- 28770. Colmenar Viejo. Madrid. Spain



Documents / Resources



[AQUA CONTROL C4110 Programmer Digital Full Vision](#) [pdf] User Manual
C4110 Programador Digital Full Vision, C4110, Programador Digital Full Vision, Digital Full Vision, Full Vision, Vision

References

- [User Manual](#)