

ARCADE 1UP Midway Legacy Arcade Machine User Manual


[Home](#) » [ARCADE 1UP](#) » ARCADE 1UP Midway Legacy Arcade Machine User Manual 

Contents

- [1 ARCADE 1UP Midway Legacy Arcade Machine](#)
- [2 Read before using the Arcade1UP](#)
- [3 Warning the epilepsy](#)
- [4 Important safety instructions](#)
- [5 Installation](#)
- [6 Specifications](#)
- [7 Assistance or service](#)
- [8 Settings](#)
- [9 Game controls](#)
- [10 Troubleshooting](#)
- [11 Collect them all](#)
- [12 Warranty Conditions](#)
- [13 WEEE](#)
- [14 Documents / Resources](#)
 - [14.1 References](#)
- [15 Related Posts](#)



ARCADE 1UP Midway Legacy Arcade Machine

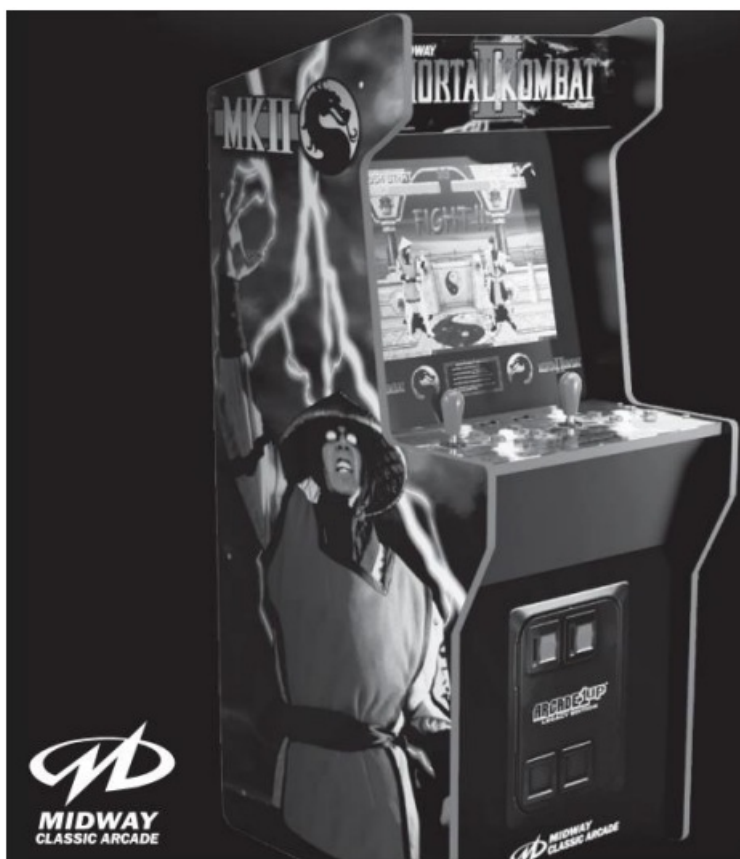

Dear customer,

Thank you for purchasing our product. Please read the following instructions carefully before first use and keep this user manual for future reference. Pay particular attention to the safety instructions. If you have any questions or comments about the device, please contact the customer line.

- www.alza.co.uk/kontakt

- +44 (0)203 514 4411

- **Importer**

Alza.cz a.s., Jankovcova 1522/53, Holešovice, 170 00 Praha 7, www.alza.cz

Read before using the Arcade1UP

Safety precautions

The following symbols are used in labels on the game to draw attention to potentially hazardous situations:

WARNING: Failure to avoid the risk may result in death or serious injury. To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

Electrical Shock Hazard: Disconnect power before removing cover. Should only be done by a qualified technician.

1. Please read and comprehend all warnings stated in this manual.
2. Do not get arcade wet when cleaning.
3. Parents and guardians: Please read entire manual before allowing gamer to play.
4. The AC/DC adapter and apparatus shall not be exposed to dripping or splashing and that no object filled with liquids, such as vases, shall be placed on apparatus.

The AC/DC adapter is used as disconnect device.

The AC/DC adapter of apparatus should not be obstructed OR should be easily accessed during intended

used. To completely disconnect the power input, the AC/DC adapter of apparatus shall be disconnected from the mains.

5. If appliance is provided with protective earth terminal, it should be connected to main outlet with a protective earth connection.
6. Minimum distances 10 cm / 3.94 inches around the apparatus for sufficient ventilation.
7. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, tablecloths, curtains etc.
8. No naked flame sources such as lighted candles should be placed on the apparatus.
9. The apparatus should only be used in moderate climates.

Warning the epilepsy

A very small percentage of individuals may experience epileptic seizures or blackouts when exposed to certain light patterns or flashing lights. Exposure to certain patterns or backgrounds on a television screen or when playing video games may trigger epileptic seizures or blackouts in these individuals. To reduce the risk of such a seizure incident, it

is recommended to take a 10–15-minute break at each hour of playing.

WARNING: Arcade1UP assumes no liability for improper installation or excessive loads placed on screws or bracket. This wall anchor is not a substitute for proper adult supervision.

Important safety instructions

1. Read these Instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding – type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Unplug this apparatus during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
14. Use only with a riser specified by the manufacturer or sold with the apparatus.
When a riser is used, use caution when moving the riser/apparatus combination to avoid injury from tip-over.

15. The equipment shall be used at working ambient temperature 32° – 95°F (0° – 35°C).

Installation

This game is designed for indoor and personal use only. It must not be installed outdoors. The following conditions must be avoided.

1. Direct exposure to sunlight, high humidity, direct water contact, dust, high heat, or extreme cold.
2. Vibration. The game must be installed on a level surface. Do not install in an area such that the game would present an obstacle in case of an emergency (i.e., near fire equipment or emergency exits).

Specifications

This product is intended for use only with the adapter provided: Blue Iron Holdings Ltd., Model BI36-120300-U2

- **Power supply:**

AC/DC Adapter

- **Input power:**

AC 100-240 V~50/60 Hz 1.2 A Max

- **Output power:**

DC 12 V 3 A

- **Monitor:**

17" LCD

- **Cabinet assembled dimensions (without riser):**

45.8" x 19" x 22.75"

(116.33 x 48.26 x 57.80 cm)

- **The AC/DC adapter** is used as disconnect device.

- **The AC/DC adapter** of apparatus should not be obstructed OR should be easily accessed during intended used.

- To be completely disconnect the power input, the AC/DC adapter of apparatus shall be disconnected from the mains

Assistance or service

Before contacting us for assistance or service, Please check the "Troubleshooting" section in the User Manual. If you still have questions regarding your Arcade1Up product or require technical support. Contact Arcade1UP Customer Service at www.arcade1up.com and click on "Support".

Settings

1. Move joystick to scroll through game list.
2. Press player 2 to enter settings.
3. Move joystick to adjust settings.
4. Select "Save & exit" then press player 1.
5. Select "Reset to defaults" then press a button to return the game to its original state.




RESET HIGH SCORES: Once High Scores have been achieved in the game, an option to Reset High Scores will appear in the setting menu for each game.

CAUTION: Servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so

Game controls

*Arcade may take 10-15 seconds to power on after switching on.

1. Move joystick to scroll through game list.
2. Press player 1 to choose game.
3. Follow game controls bellow for each game.
4. Hold player 1 (5 seconds) to bring up the pause menu.
5. Hold player 2 (5 seconds) to reset game.

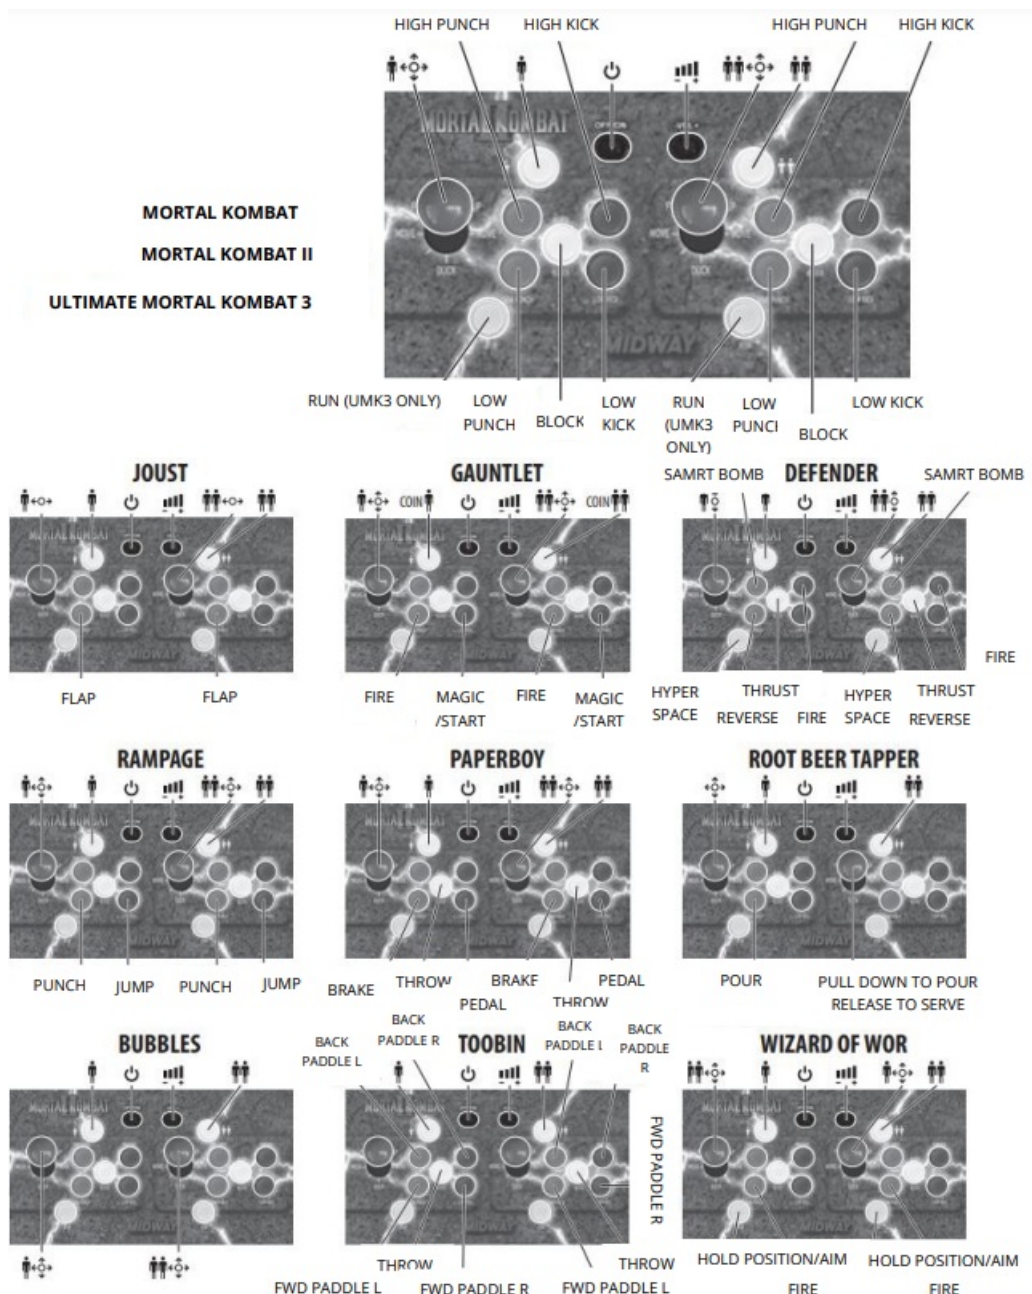

GAUNTLET NOTE: BUTTONS ARE “COIN” INSTEAD OF “START”, **ROOT BEER TAPPER NOTE:** PLAYER 1 AND PLAYER 2 ALTERNATE TURNS. BOTH PLAYERS USE THE LEFT JOYSTICK TO MOVE AND THE RIGHT JOYSTICK TO POUR AND SERVE, **TOOBIN' NOTE:** YOU CAN ALSO TRY STEERING WITH THE JOYSTICK, **WIZARD OF WOR NOTE:** PLAYER 1 PLAYS ON THE RIGHT SIDE AND PLAYER 2 PLAYS ON THE LEFT SIDE.

To enjoy a safe gaming environment:

Please use the wall anchor kit that is included with the product.



WARNING

Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent tip-over:

- Set up Arcade1UP on a level floor.
- Never allow children to climb or hang on product.
- Always set up an anti-tip device!

Use of tip-over restraints may only reduce, but not eliminate, the risk of tip-over.

WARNING: Arcade1UP assumes no liability for improper installation or excessive loads placed on screws or bracket. This wall anchor is not a substitute for proper adult supervision. Make sure to locate your Arcade1UP on a flat surface.

Troubleshooting

PROBLEM	POSSIBLE CAUSE	SOLUTION
Game will not turn ON.	<p>*Power cord is not plugged into wall outlet.</p> <p>*Wires/Plugs are hooked up incorrectly.</p> <p>*ON/OFF Switch is in the OFF position.</p> <p>*Upload switch on back of monitor is in the OFF position.</p>	<p>*Make sure power cord is plugged into the wall outlet and there is power to that outlet.</p> <p>(Plug other electrical equipment into the power outlet to make sure the outlet normally works.)</p> <p>*Make sure all Wires/Plugs are properly connected and all the way set in as directed in assembly instructions.</p> <p>*Slide ON/OFF Switch located on control deck to the ON position.</p> <p>*Slide upload switch on back of monitor to the ON position.</p>
Game will turn ON, but there is no sound.	<p>*Wires/Plugs were hooked up correctly.</p> <p>*Volume Switch is in the OFF position.</p>	<p>*Make sure all Wires/Plugs are properly connected and all the way set in as directed in assembly instructions.</p> <p>*Slide Volume Switch located on control deck to the right.</p> <p>NOTE: Push volume slide switch right to increase volume, left to lower volume.</p>
You hear sound but there is no picture.	<p>*Wires/Plugs were hooked up correctly.</p>	<p>*Make sure all Wires/Plugs are properly connected and all the way set in as directed in assembly instructions.</p>

The game screen is frozen.	<p>*The game encountered a problem when processing the data.</p>	<p>*Turn the ON/OFF switch OFF and then back ON again.</p> <p>*You may need to RESET the game. Turn the ON/OFF switch to the OFF position. Unplug the game from the wall outlet and wait 60 seconds to RESET the game. Plug the game back in and turn the ON/OFF switch back to ON.</p>
Marquee won't light up.	<p>*Marquee power cord is not plugged in at the back of the monitor.</p> <p>*Marquee power cord is plugged into the wrong input.</p>	<p>*Make sure all Wires/Plugs are properly connected and all the way set in as directed in assembly instructions.</p>
The game screen looks pixelated / blurry or there are lines running through the image.	<p>*Wires/Plugs were hooked up in correctly.</p> <p>*Pixel Smoothing may be turned ON/OFF in the settings menu.</p>	<p>*Make sure all Wires/Plugs are properly connected and all the way set in as directed in assembly instructions.</p> <p>*Enter the settings menu to see if Pixel Smoothing is turned ON/OFF.</p> <p>*You may need to RESET the game. Turn the ON/OFF switch to the OFF position. Unplug the game from the wall outlet and wait 60 seconds to RESET the game. Plug the game back in and turn the ON/OFF switch back to ON.</p>
One of the buttons on the control deck is stuck in the down position.	<p>*Debris may have gotten between the button and the button housing.</p>	<p>*Take something thin (like a business card) and place it between the button and the button housing and slide it back and forth to loosen the debris.</p>
You are not able to scroll through the games on the game selection menu.	<p>*You may be using the wrong joystick or pressing the incorrect buttons to scroll through the games.</p>	<p>*Look at the game control section in the instruction manual to make sure you are using the correct joystick or pressing the correct buttons to scroll through the game selection menu.</p>
You can scroll through the games on the game selection menu, but you can't enter a game to begin playing.	<p>*You may be pressing the wrong button to enter the game.</p>	<p>*Look at the game control section in the instruction manual to make sure you are pressing the correct button to enter the game.</p>
You have entered the game, but you can't get the game to start.	<p>*You may be pressing the wrong button to start the game.</p>	<p>*Look at the game control section in the instruction manual to make sure you are pressing the correct button to start the game.</p>

<p>You have entered the game , but you can't exit the game to get back to game selection menu.</p>	<p>*You may be pressing the wrong button to exit the game.</p> <p>*You may not be holding down the exit button long enough.</p>	<p>*Look at the game control section in the instruction manual to make sure you are pressing the correct button to exit the game.</p> <p>*Make sure you are holding the exit button down for 5 seconds to exit the game.</p>
<p>The control functions that are printed on the control deck do not match the game play on the screen for the game you are playing.</p>	<p>*You may be pressing the wrong game control buttons for the game you are playing.</p>	<p>*Look at the game control section in the instruction manual to make sure you are pressing the correct game control buttons for that game.</p> <p>*Look at the game control loading screen on the monitor to make sure you are pressing the correct control buttons. NOTE: The game controls that are printed on the control deck are only for the feature cabinet game. The other games in the cabinet will utilize the same buttons but react differently.</p>
<p>The game will not let me select 2 or 3 players for a chosen game.</p>	<p>*The game may only be a 1 or 2 player game.</p>	<p>*Refer to the game control section in the instruction manual to see how many players can play that game.</p>

Collect them all

Colors, styles, and decorations may vary.



ATARI LEGACY



CAPCOM LEGACY



MIDWAY LEGACY



BANDAI NAMCO ENTERTAINMENT LEGACY

Warranty Conditions

A new product purchased in the Alza.cz sales network is guaranteed for 2 years. If you need repair or other services during the warranty period, contact the product seller directly, you must provide the original proof of purchase with the date of purchase.


The following are considered to be a conflict with the warranty conditions, for which the claimed claim may not be recognized:

- Using the product for any purpose other than that for which the product is intended or failing to follow the instructions for maintenance, operation, and service of the product.
- Damage to the product by a natural disaster, the intervention of an unauthorized person or mechanically through the fault of the buyer (e.g., during transport, cleaning by inappropriate means, etc.).
- Natural wear and aging of consumables or components during use (such as batteries, etc.).
- Exposure to adverse external influences, such as sunlight and other radiation or electromagnetic fields, fluid intrusion, object intrusion, mains overvoltage, electrostatic discharge voltage (including lightning), faulty supply or input voltage and inappropriate polarity of this voltage, chemical processes such as used power supplies, etc.
- If anyone has made modifications, modifications, alterations to the design or adaptation to change or extend the functions of the product compared to the purchased design or use of non-original components.









WEEE

This product must not be disposed of as normal household waste in accordance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE – 2012/19 / EU). Instead, it shall be returned to the place of purchase or handed over to a public collection point for the recyclable waste. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. Contact your local authority or the nearest collection point for further details. Improper disposal of this type of waste may result in fines in accordance with national regulations.

Documents / Resources

 <p>Arcade machine Midway Legacy User Manual (Unlicensed version) Unlicensed version - Please do not use Unauthorized use is prohibited</p>	<p>ARCADE 1UP Midway Legacy Arcade Machine [pdf] User Manual Midway Legacy Arcade Machine, Midway, Legacy Arcade Machine, Arcade Machine</p>
--	--

References

-  [Alza.sk – rýchly a pohodlný nákup odkiaľkoľvek | alza.sk](https://www.alza.sk)
-  [Arcade1Up | Officially Licensed Arcade Cabinets](https://www.arcade1up.com)
-  [alza.at](https://www.alza.at)
-  [alza.co.uk](https://www.alza.co.uk)
-  [alza.de](https://www.alza.de)
-  [alza.hu](https://www.alza.hu)
-  [alza.sk](https://www.alza.sk)
-  [Arcade1Up | Officially Licensed Arcade Cabinets](https://www.arcade1up.com)

