




ARCADE1up MSP-A-10171 Arcade Machine Owner's Manual

[Home](#) » [ARCADE1UP](#) » ARCADE1up MSP-A-10171 Arcade Machine Owner's Manual 



AT HOME ARCADE



OWNERS MANUAL
AGES 14+



WARNING

To ensure safe operation of the product, be sure to read this Owners Manual before use. Keep this Owners Manual in a safe place for easy reference when needed.

READ BEFORE USING THE Arcade1UP SAFETY PRECAUTIONS

The following symbols are used in labels on the game to draw attention to potentially hazardous situations:



WARNING: Failure to avoid the risk may result in death or serious injury



Electrical Shock Hazard. Disconnect power before removing the cover. Should only be done by a qualified technician.



WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

1. Please read and comprehend all warnings stated in this manual.
2. Do not get the arcade wet when cleaning.
3. Parents and guardians: Please read the entire manual before allowing gamers to play.
4. The AC/DC adapter and apparatus shall not be exposed to dripping or splashing and that no object filled with liquids, such as vases, shall be placed on the apparatus.
The AC/DC adapter is used as a disconnect device.
The AC/DC adapter of the apparatus should not be obstructed OR should be easily accessed during intended use. To completely disconnect the power input, the AC/DC adapter of apparatus shall be disconnected from the mains.
5. If the appliance is provided with protective earth terminal, it should be connected to the main outlet with a protective earth connection.
6. Minimum distances 10 cm / 3.94 inches around the apparatus for sufficient ventilation.
7. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, tablecloths, curtains, etc.
8. No naked flame sources such as lighted candles should be placed on the apparatus.
9. The apparatus should only be used in moderate climates.



EPILEPSY WARNING

A very small percentage of individuals may experience epileptic seizures or blackouts when exposed to certain light patterns or flashing lights. Exposure to certain patterns or backgrounds on a television screen or when playing video games may trigger epileptic seizures or blackouts in these individuals. To reduce the risk of such a seizure incident, it is recommended to take a 10-15 minute break at each hour of playing.

Contents

- [1 FCC/ISED STATEMENT](#)
- [2 IMPORTANT SAFETY INSTRUCTIONS](#)
- [3 INSTALLATION](#)
- [4 SPECIFICATIONS](#)
- [5 ASSISTANCE OR SERVICE](#)
- [6 GAME SETTINGS](#)
- [7 GAME CONTROLS](#)
- [8 TROUBLESHOOTING](#)
- [9 COLLECT THEM ALL](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)
- [11 Related Posts](#)

FCC/ISED STATEMENT

This device complies with part 15 of the FCC rules / Innovation, Science and Economic Development Canada's license-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC/ISED rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

WARNING: Arcade1UP assumes no liability for improper installation or excessive loads placed on screws or brackets. This wall anchor is not a substitute for proper adult supervision.



IMPORTANT SAFETY INSTRUCTIONS

1. Read these Instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Unplug this apparatus during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been

dropped.

14. Use only with a riser specified by the manufacturer, or sold with the apparatus. When a riser is used, use caution when moving the riser/apparatus combination to avoid injury from tip-over.
15. The equipment shall be used at working ambient temperature 32° – 95°F (0° – 35°C).
16. TIP OVER HAZARD-This apparatus should secure in place by using the provided mounting means. Freestanding is capable of resulting in instability causing possible injury. Refer to the installation instruction for detail.

INSTALLATION

This game is designed for indoor and personal use only. It must not be installed outdoors. The following conditions must be avoided.

1. Direct exposure to sunlight, high humidity, direct water contact, dust, high heat, or extreme cold.
2. Vibration. The game must be installed on a level surface.
Do not install in an area such that the game would present an obstacle in case of an emergency (i.e., near fire equipment or emergency exits).

SPECIFICATIONS



This product is intended for use only with the adapter provided:

Manufacturer: Blue Iron Holdings Ltd.

Model: BI36-120300-U2

POWER SUPPLY: AC/DC Adapter

INPUT POWER: AC 100-240V~50/60Hz 1.2A Max

OUTPUT POWER: DC12V — 3A

MONITOR: 17" LCD

CABINET ASSEMBLED DIMENSIONS (WITHOUT RISER): 45.8" x 19" x 22.75" (116.33cm x 48.26cm x 57.80cm)

- The AC/DC adapter is used as a disconnect device.
- The AC/DC adapter of the apparatus should not be obstructed OR should be easily accessed during intended use.
- To completely disconnect the power input, the AC/DC adapter of the apparatus shall be disconnected from the mains.

ASSISTANCE OR SERVICE

Before contacting us for assistance or service, please check the "Troubleshooting" section in the User Manual. If you still have questions regarding your Arcade1Up product or require technical support. Contact Arcade1Up Customer Service at www.Arcade1Up.com and click on "Support".

GAME SETTINGS

1. MOVE JOYSTICK UP OR DOWN TO SCROLL THROUGH THE GAME LIST
2. MOVE JOYSTICK TO LEFT AND PRESS ANY BUTTON (EXCEPT LIVE) TO ENTER SETTING
3. MOVE JOYSTICK TO ADJUST SETTINGS

4. SELECT “HIDE THIS MENU” AND PRESS ANY BUTTON (EXCEPT LIVE) TO SAVE & EXIT

Ms.PAC-MAN™
HIDE THIS MENU

INITIAL LIVES:	*3
BONUS:	*10,000
DIFFICULTY:	*Easy
SPEED:	*Normal
SMOOTHING:	*Off
DEFAULT SETTINGS:	Yes

GALAGA™
HIDE THIS MENU

INITIAL LIVES:	*3
BONUS:	*20,000 and every 70,000
DIFFICULTY:	*Medium
ATTRACT SOUND:	*On
SMOOTHING:	*Off
DEFAULT SETTINGS:	Yes

DIG DUG™
HIDE THIS MENU

INITIAL LIVES:	*3
BONUS:	*10,000 and every 40,000
DIFFICULTY:	*Medium
CONTINUE GAME:	*On
ATTRACT SOUND:	*On
SMOOTHING:	*Off
DEFAULT SETTINGS:	Yes

GALAXIAN™
HIDE THIS MENU

INITIAL LIVES:	*3
BONUS:	*7,000
SMOOTHING:	*Off
DEFAULT SETTINGS:	Yes

GALAGA™'88
HIDE THIS MENU

LIVES:	*3
RANK:	*Medium
CONTINUE:	*Off
EXTEND:	*50,000, 140,000, 300,000, 480,000
STARTING SHIP SELECT:	*On
ATTRACT SOUND:	*On
SMOOTHING:	*Off
DEFAULT SETTINGS:	Yes

DIG DUG™ II
HIDE THIS MENU

INITIAL LIVES:	*3
BONUS:	*30,000 and 80,000
LEVEL SELECT:	*Off
SMOOTHING:	*Off
DEFAULT SETTINGS:	Yes

MAPPY™
HIDE THIS MENU

INITIAL LIVES:	*3
BONUS:	*20,000 and every 70,000
DIFFICULTY:	*Easy
ATTRACT SOUND:	*On
SMOOTHING:	*Off
DEFAULT SETTINGS:	Yes

RALLY-X™
HIDE THIS MENU

INITIAL CARS/RANK:	*3 Cars, Rank A
BONUS CARS AT:	*10,000, 15,000, 20,000
SMOOTHING:	*Off
DEFAULT SETTINGS:	Yes

ROMPERS™
HIDE THIS MENU

LIVES:	*3
DIFFICULTY:	*Normal
CONTINUE:	*All
ROUND SELECT:	*Off
BONUS:	*50,000, 200,000, 500,000
ATTRACT SOUND:	*On
SMOOTHING:	*Off
DEFAULT SETTINGS:	Yes

THE TOWER OF DRUAGA™
HIDE THIS MENU

INITIAL LIVES:	*3
SMOOTHING:	*Off
DEFAULT SETTINGS:	Yes

KING & BALLOON™
HIDE THIS MENU

INITIAL LIVES:	*3
BONUS:	*10,000
SMOOTHING:	*Off
DEFAULT SETTINGS:	Yes

ROLLING THUNDER™
HIDE THIS MENU

INITIAL LIVES:	*3
BONUS:	*70,000 and 200,000
INITIAL TIMER:	*120
DIFFICULTY:	*Easy
LEVEL SELECT:	*Off
NUMBER OF CONTINUES:	*6
SMOOTHING:	*Off
DEFAULT SETTINGS:	Yes


ALL PICTURES SHOWN ARE FOR ILLUSTRATION PURPOSES ONLY. THE ACTUAL PRODUCTS MAY VARY DUE TO PRODUCT ENHANCEMENT.

GAME CONTROLS

*ARCADE MAY TAKE 10-15 SECONDS TO POWER ON AFTER SWITCHING ON

1. MOVE JOYSTICK TO SCROLL THROUGH GAME LIST
2. PRESS ANY BUTTON (EXCEPT LIVE) TO CHOOSE GAME
3. FOLLOW THE GAME CONTROLS BELOW FOR EACH GAME
4. HOLD PLAYER 1 (5 SECONDS) TO RETURN TO THE MENU
5. HOLD PLAYER 2 (5 SECONDS) TO RESET GAME

* FIT FOR 3.5MM HEADPHONE JACK

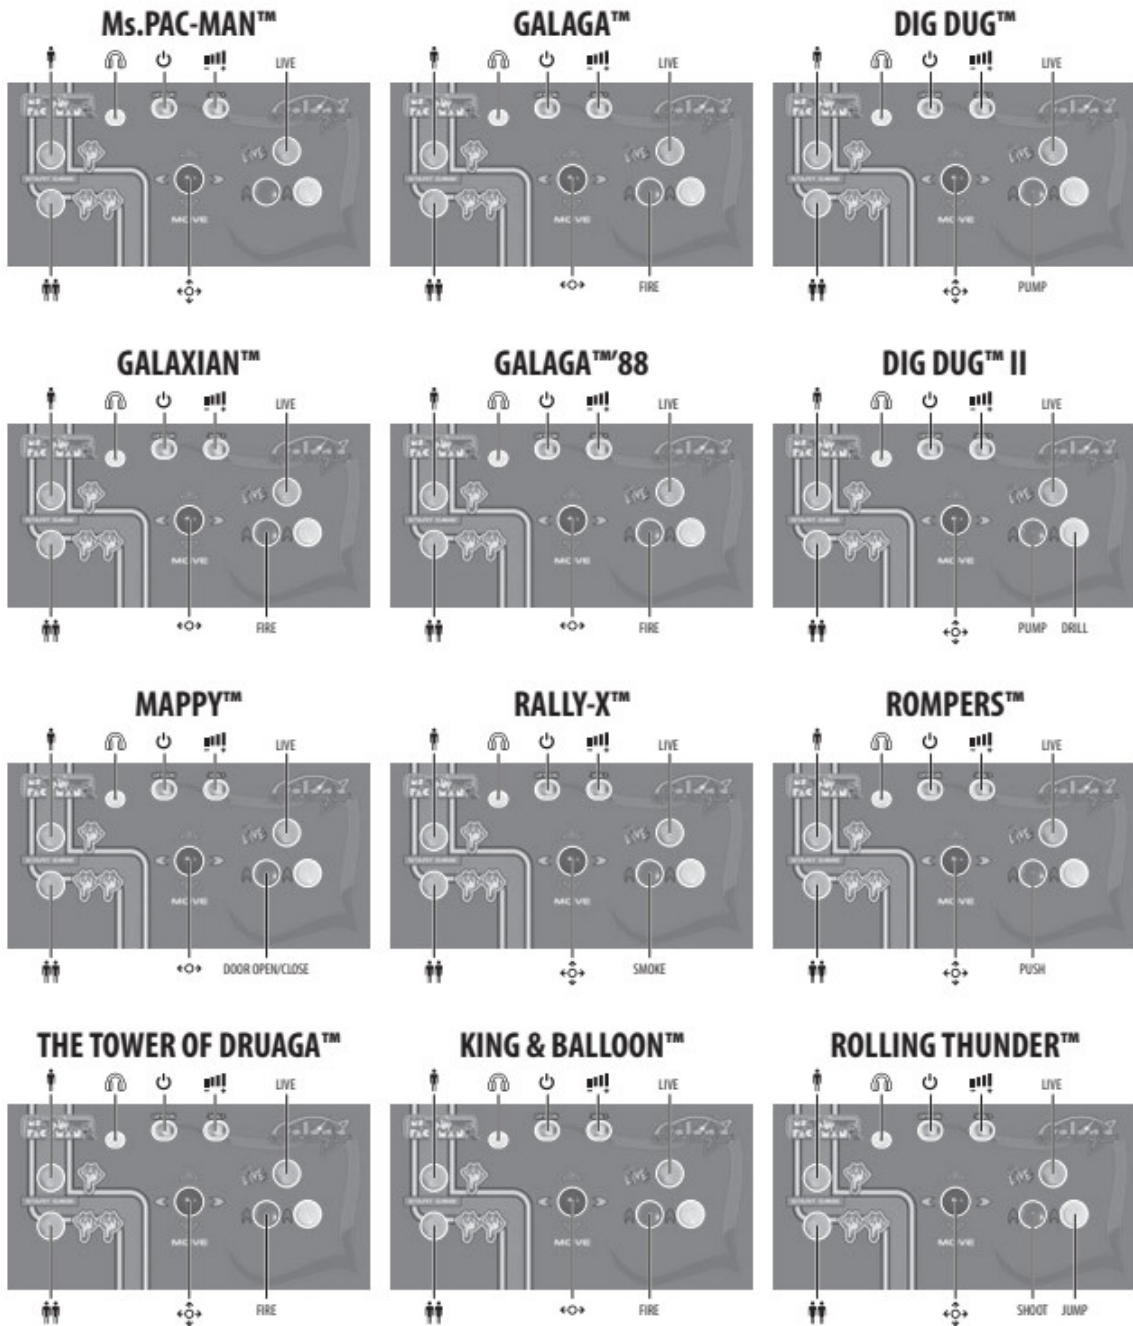

TO ENJOY A SAFE GAMING ENVIRONMENT

Please use the wall anchor kit that is included with the product.



CAUTION

Servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

WARNING

Serious or fatal crushing injuries can occur from furniture tip-over.
To help prevent tip-over:

- Set up Arcade1UP on a level floor.
- Never allow children to climb or hang on products.
- Always set up an anti-tip device!

The use of tip-over restraints may only reduce, but not eliminate, the risk of tip-over.

WARNING: Arcade1UP assumes no liability for improper installation or excessive loads placed on screws or brackets. This wall anchor is not a substitute for proper adult supervision.

Make sure to locate your Arcade1UP on a flat surface

FCC RF RADIATION EXPOSURE STATEMENT:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and any part of your body.

ISED RF RADIATION EXPOSURE STATEMENT:

This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and any part of your body.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
The game will not turn on.	-Power cord is not plugged into a wall outlet. -Wires/Plugs are hooked up incorrectly. -ON/OFF Switch is in the OFF position. -Upload switch on the back of the monitor is in the OFF position.	-Make sure the power cord is plugged into the wall outlet and there is power to that outlet. (Plug other deck ride equipment into the power outlet to make sure the outlet normally works.) -Make sure all Wires/Plugs are properly connected and all the way set in as directed in assembly instructions. -Slide ON/OFF Switch located on the back of the monitor to the ON position. -Slide upload switch on the back of the monitor to the ON position).
The game will turn ON, but there is no sound.	-Wires/Plugs were hooked up incorrectly. -Volume Switch is in the OFF position.	-Make sure all Wires/Plugs are properly connected and all the way set in as directed in assembly instructions. -The side Volume Switch is located on the control deck to the right. NOTE: Push volume slide switch right to increase volume, left to lower volume.
You hear sound but that is no picture.	-Wires/Plugs were hooked up incorrectly.	-Make sure all Wires/Plugs are properly connected and all the way set in as directed in assembly instructions.
The game screen is frozen.	- The game encountered a problem when (messing with the data.	-Turn the ON/OFF switch OFF and then back ON again. -You may need to RESET the game. Turn the ON/OFF switch to the OFF position. Unplug the game from the wall outlet and wait 60 seconds to RESET the game. Plug the game back in and turn the ON/OFF switch back to ON.
Magee / Light Up Deck Protector does not light up.	-The marquee/ Deck Protector power cord is not plugged in at the back of the monitor. -The marquee/ Deck Predictor power cord is plugged into the wrong input	-Make sure all Wires/Plugs are properly connected and all the way set in as directed in the assembly instructions.
The game screen looks pixelated or there are lines running through the image.	-Wires/Plugs were hooked up incorrectly.	-Make sure all wires/Plugs are properly connected and all the way set in as directed in assembly instructions. -You may need to RESET the game. Turn the ON/OFF switch to the OFF position. Unplug the game from the wall outlet and wait 60 seconds to RESET the game. Plug the game back in and turn the ON/OFF switch back to ON.
One of the buttons on the control deck is stuck in the down position.	-Debris may have gotten between the button and the button housing.	-Take something thin (like a business card) and place between the button and the button housing and slide it back and forth to loosen the debris.
You are not able to scroll through the menu.	-You may be using the wrong joystick.	

ugh the games on the game selection menu.	stick or pressing the incorrect button to stroll through the games.	-Look at the game control section in the Way an lan manual to make sure you are using the correct joystick or pressing the correct buttons to scroll through the game Selection menu.
You are able to scroll through the games on the game selection menu, but you can't enter a game to begin playing.	-You may be pressing the wrong button to enter the game.	-Look at the game control section in the instruction manual to make sure you are pressing the correct button to enter the game.
You have entered the game, but you can't get the game to start.	-You may be pressing the wrong button (mg build) to start the game.	-Look at the game control section in the instruction manual to make sure you are pressing the correct button to start the game.
You have entered the game, but you can't exit the game to get back to game selection menu.	-You may be pressing the wrong button to exit the game. -You may not be holding down the exit button long enough.	-Look at the game control section in the instruction manual to make sure you depress the correct button to exit the game. -Make sure you are holding the exit button down for 5 seconds to exit the game.
The game will not let me select 2 Or 3 players for a chosen game.	The control functions that are printed on the -You may be pressing the wrong game control buttons for the game you are playing.	-Look at the game control section in the instruction manual to make sure you are pressing the correct game control buttons for that game. -Look at the game control buttoning screen on the monitor to make sure you are pressing with the correct control buttons. (NOTE: The game controls that are printed on the control deck are only for the feature cabinet game. The other games in the cabinet will utilize the same buttons but react differently.)
The game will not let me select 2 Or 3 players for a chosen game.	-The game may only be a 1 or 2 player game.	-Refer to the game control section in the instruction manual to see how many players are able to play that game.

COLLECT THEM ALL

Colors, style and decoration may vary.



TURTLES IN TIME ARCADE1UP



THE SIMPSONS ARCADE1UP



X-MEN ARCADE1UP



KILLER INSTINCT ARCADE1UP



STREET FIGHTER™ II BIG BLUE ARCADE1UP



TRON ARCADE1UP

©2021 Konami Digital Entertainment ©Konami Amusement ©2021 Viacom International Inc. All Rights Reserved. Nickelodeon, Teenage Mutant Ninja Turtle, and all related titles, logos, and characters are trademarks of Viacom International Inc

Killer Instinct® Arcade © 1994 Microsoft. Microsoft, Killer Instinct, and the Killer Instinct Logo have registered trademarks of the Microsoft group of companies. Manufactured and sold by Tastemakers, LLC under license by Microsoft.



Battletoads ©1991, Battletoads Arcade ©1994, Killer Instinct © 1994, Killer Instinct Arcade © 1994, Killer Instinct 2 © 1995 Microsoft. Microsoft, Battletoads, the Battletoads logo, Killer Instinct, the Killer Instinct logo, Rare, and the Rare logo are registered trademarks of the Microsoft group of Companies.

visit Arcade1up.com
TO SIGN UP FOR OUR MAILING LIST AND
SEE A COMPLETE LIST OF GAMES




Ms.PAC-MAN™&©1982 BANDAI NAMCO Entertainment Inc.
GALAGA™&©1981 BANDAI NAMCO Entertainment Inc.
GALAGA™ '88&©1987 BANDAI NAMCO Entertainment Inc.
GALAXIAN™&©1979 BANDAI NAMCO Entertainment Inc.
DIG DUG™&©1982 BANDAI NAMCO Entertainment Inc.
DIG DUG™II&©1985 BANDAI NAMCO Entertainment Inc.

MAPPY™&©1983 B/
KING & BALLOON™
THE TOWER OF DR
989 BANDAI NAMCC
RALLY-X™&©1980 E
ROLLING THUNDEF



MADE IN CHINA
REV 06.30.21

Documents / Resources

	<p>ARCADE1up MSP-A-10171 Arcade Machine [pdf] Owner's Manual MSPGA, 2APXHMSPGA, MSP-A-10171 Arcade Machine, MSP-A-10171, Arcade Machine</p>
---	---

References

-  [Arcade1Up | Officially Licensed Arcade Cabinets](#)
-  [Arcade1Up | Officially Licensed Arcade Cabinets](#)