



ARCTIC F Pro PWM Computer case Fan User Guide

[Home](#) » [Arctic](#) » ARCTIC F Pro PWM Computer case Fan User Guide 

F Pro PWM Computer case Fan



www.arctic.ac

F PRO PWM PST

Welcome Guide

www.arctic.ac



support.arctic.ac/fpropwmpst

Dear Customer

Thank you for choosing a fan of the ARCTIC F Pro fan series. This fan was optimized to work as a case fan with little to no resistance and offers in this setup an unparalleled noise performance ratio.

YOU are the center of ARCTIC. We work hard to approach all angles from a user's perspective and are fully dedicated to creating innovative, user-friendly, and affordable devices. YOUR satisfaction is our ultimate goal. In order to assist you even better, we launched a support platform for Smartphones (support.arctic.ac).

I hope you enjoy the fan and we at ARCTIC look forward to further enriching your life with our products. If you would like to share how you use ARCTIC's products please do so at <https://www.facebook.com/ARCTIC.en>
ARCTIC is a full carbon neutral company and your support helps us to compensate for every kilogram of CO2 we produce. Thank You.

Sincerely,



Magnus Huber
ARCTIC CEO

Contents

- [1 Plugs / Sockets](#)
- [2 How to Plug Your Fan](#)
- [3 If Connecting with Multiple Fans](#)
- [4 Activate PWM Control](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)

Plugs / Sockets

F8 / F9 / F12 / F14 PRO PWM PST

A 4-pin PWM plug



B 4-pin PWM socket



Mainboard

C 4-pin PWM socket




**CPU Cooler / Fan
(PWM Controlled)**


D 4-pin PWM plug



How to Plug Your Fan

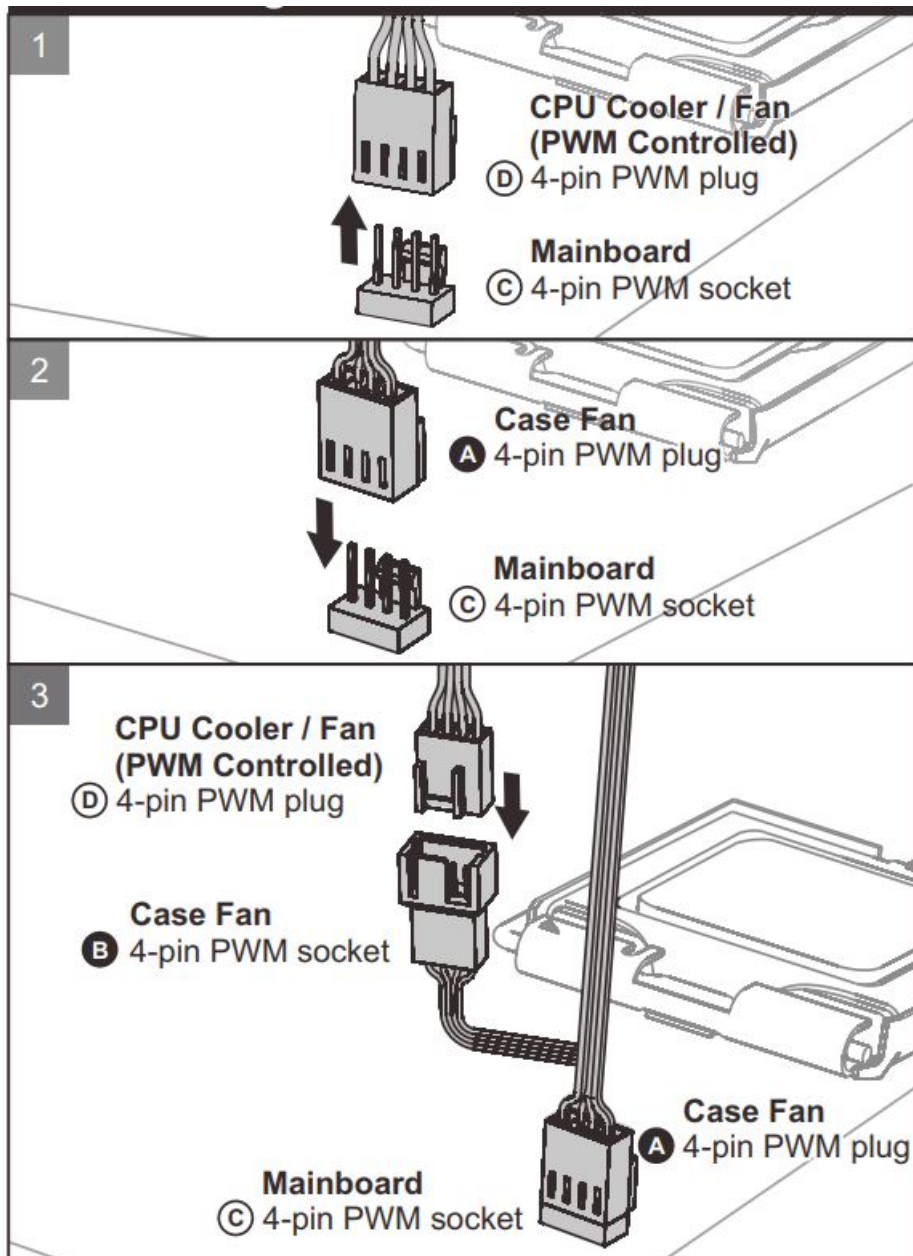

If Connecting with Multiple Fans

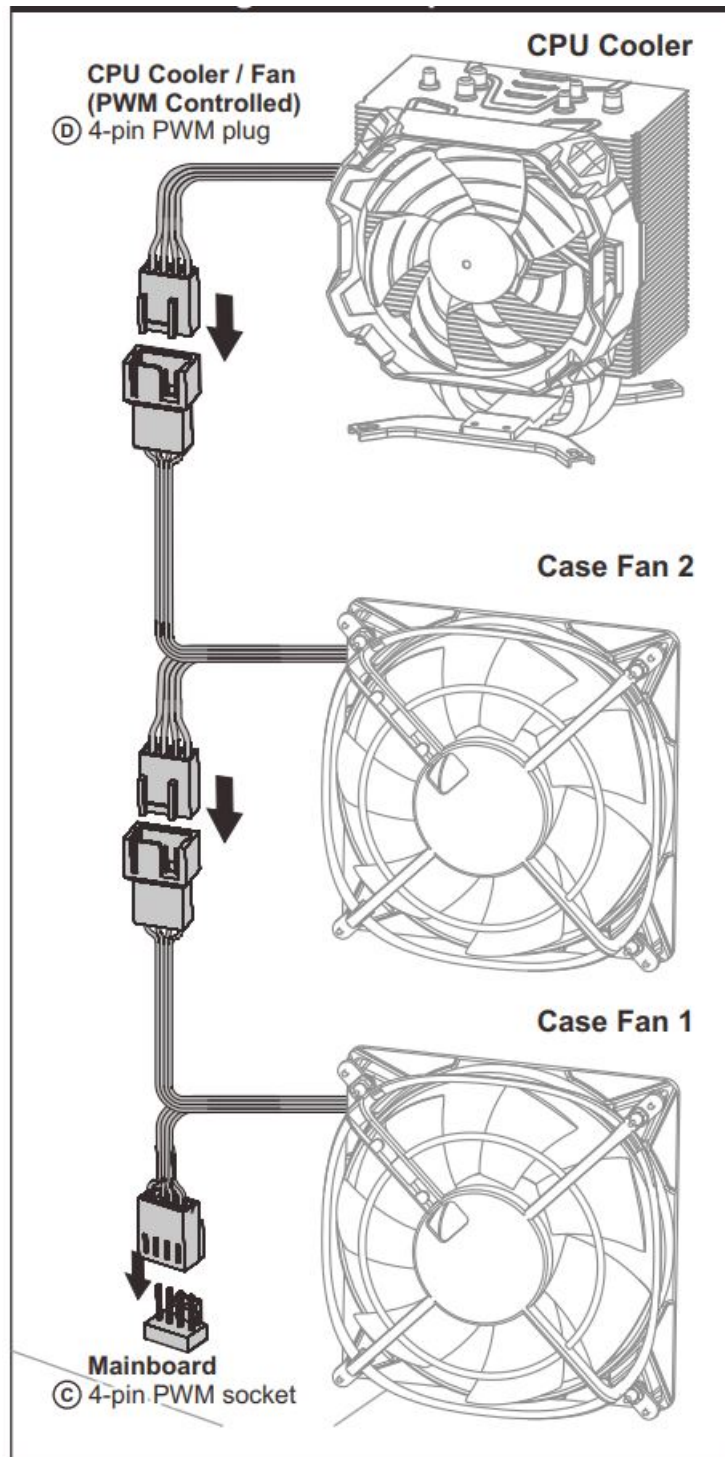


*We recommend not to chain more than 5 fans as some motherboards may only deliver 1.0A per fan header. Please consult your motherboard specification.

Activate PWM Control

In the mainboard BIOS, you can activate and configure the PWM fan speed. Please note the examples below are for reference only. Refer to your mainboard manual regarding the settings in your BIOS.

ASRockFM2A85X-ITX (UEFI Setup Utility)

H/W Monitor > CPU_FAN1 Setting > Silent Mode

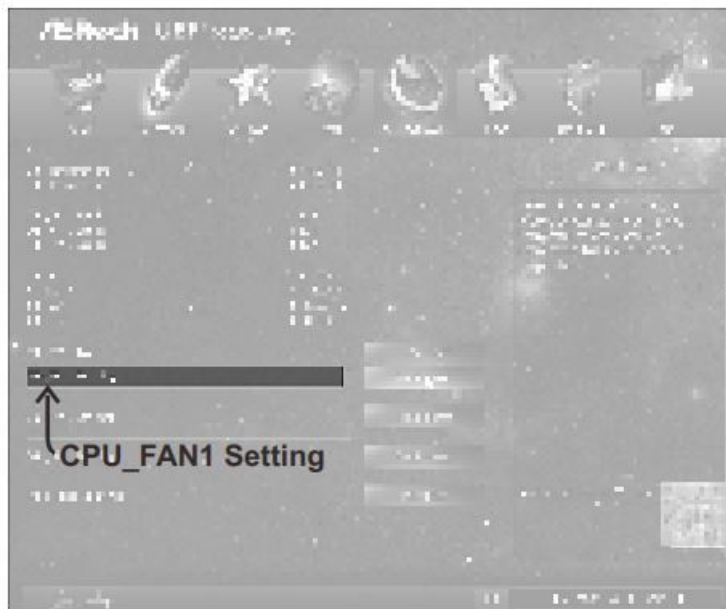

Gigabyte MA78GM-S2H (CMOS Setup Utility)

PC Health Status > CPU Smart FAN Control [Enable] CPU Smart FAN Mode [Auto]

ASRock H55M/USB 3 P1.40 (BIOS Setup Utility)

H/W Monitor > CPU Fan Setting > CPU Fan Setting [Automatic mode]

Notes:

- Target Fan Speed [Level 1 – 9]
- At Level 1, the case fan may NOT spin at startup, it will spin at a higher CPU temperature.

JW Technology JW-H55M-PRO V 1.01 (BIOS Setup Utility) Power > PC Health Status > CPU Fan Mode [Manual] Target Fan Speed [0 – 255]

Notes:

- Fan will spin at minimum speed at 40-60.
 - Approximate PWM Value would be Target Fan Speed /2.5
- e.g. Target Fan Speed 40 ~ PWM Value 16%

ASUS P5G41T-M LX (BIOS Setup Utility)

Power > CPU Q-Fan Control [Enabled]

CPU Fan Profile [Silent / Optimal /Performance mode]

Notes:

 
– The case fan spins slowly at idle for all three modes.

It is also possible to adjust the fan speed in manual mode to customize according to your own preference.



It is suggested to set the PWM Value at a minimum of 15%. A percentage lower than that may not generate enough motion to spin the fan.

Warranty This ARCTIC product includes a six-year limited warranty. For further information, please visit warranty.arctic.ac



© 2015 ARCTIC Switzerland AG. All Rights Reserved.

No part of this manual including the products described in it may be reproduced, transmitted, stored in a retrieval system, or translated into any language in any form or by any means, except documentation kept by the purchaser for backup purpose, without the express written permission of ARCTIC Switzerland AG. In no event shall ARCTIC its directors or employees be liable for any indirect damages, incidental or consequential damages arising from any defect or error in this manual or product.

PKMNL00011A

Documents / Resources

| | |
|--|---|
| | <p>ARCTIC F Pro PWM Computer case Fan [pdf] User Guide F Pro PWM Computer case Fan, F PRO PWM PST</p> |
|--|---|

References

- [ARCTIC Mobile Support](#)
- [ARCTIC F PRO PWM PST - User Manual](#)
- [Garantieabwicklung | ARCTIC](#)
- [ARCTIC - Cooling, Mounts, Equipment](#)
- [Log into Facebook](#)
- [Log into Facebook](#)